



REFRIGERATOR

BOTTOM MOUNT FREEZER

BASIC : RB194AB/RB196AB/
RB214AB/RB216AB

MODEL NAME : RB194ABRS / RB194ABBP
(MODEL CODE) RB194ABWP / RB194ABPN
RB196ABRS / RB196ABBP
RB196ABWP / RB196ABPN
RB214ABRS / RB214ABBP
RB214ABWP / RB214ABPN
RB216ABRS / RB216ABBP
RB216ABWP / RB216ABPN

SERVICE *Manual*

REFRIGERATOR



RB194/196/214/216AB*

CONTENTS

1. PRECAUTIONS(SAFETY WARNINGS)
2. PRODUCT SPECIFICATIONS
3. DISASSEMBLY AND REASSEMBLY
4. TROUBLESHOOTING
5. EXPLODED VIEW & PARTS LIST
6. PCB DIAGRAM
7. WIRING DIAGRAM
8. SCHEMATIC DIAGRAM

For the latest parts information, Please access to our service web site
(North America : <http://service.samsungportal.com>)



WARNING

IMPORTANT SAFETY NOTICE

The service guide is for service men with adequate backgrounds of electrical, electronic, and mechanical experience. Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or dealer cannot be responsible for the interpretation of this information.

SAMSUNG ELECTRONICS AMERICA, INC.

Technical Service Guide

Copyright ©2008

All rights reserved. This service guide may not be reproduced in whole or in part in any form without written permission from the SAMSUNG ELECTRONICS Company.

Contents

1. PRECAUTIONS(SAFETY WARNINGS)	4
2. PRODUCT SPECIFICATIONS	7
2-1) Introduction of Main Function	7
2-2) Specifications	8
2-3) Interior Views	9
2-4) Model Specification	10
2-5) Model Specification & Specification Chart	11
2-6) Dimensions of Refrigerator (Inches)	14
2-7) Refrigerant Route in Refrigeration cycle	15
2-8) Cooling Air Circulation	16
3. DISASSEMBLY AND REASSEMBLY	17
3-1) PRECAUTION	17
3-2) Refrigerator Door	18
3-3) Freezer Door	20
3-4) Freezer Door Switch	21
3-5) Refrigerator Light	22
3-6) Glass shelves	22
3-7) Moving tray	23
3-8) Vegetable & Fruit Drawers Shelf	23
3-9) Gallon Door Bin	24
3-10) Evaporator In Refrigerator	24
3-11) Door Handle Freezer	26
3-12) Freezer Light	26
3-13) Evaporator Cover In Freezer	27
3-14) Evaporator In Freezer	27
3-15) Motor Fan	28
4. TROUBLESHOOTING	30
4-1) Check items before failure diagnosis	30
4-2) Diagnostic method according to the trouble symptom(Flow Chart)	41
5. EXPLODED VIEW & PARTS LIST	56
5-1) Freezer(RB216AB/RB196AB)	56
5-2) Refrigerator(RB216AB/RB196AB)	59
5-3) Cabinet(RB216AB/RB196AB)	64
5-4) Disassembly of Freezer Door(RB216AB/RB196AB)	67
5-5) Disassembly of Refrigerator Door Left(RB216AB/RB196AB)	70
5-1) Freezer(RB214AB/RB194AB)	73
5-2) Refrigerator(RB214AB/RB194AB)	76
5-3) Cabinet(RB214AB/RB194AB)	81
5-4) Disassembly of Freezer Door(RB214AB/RB194AB)	84
5-5) Disassembly of Refrigerator Door Left(RB214AB/RB194AB)	86
6. PCB DIAGRAM	88
6-1) PCB Layout with part position (Main Board)	88
6-2) Connector Layout with part position (Main Board)	89
7. WIRING DIAGRAM	90
8. SCHEMATIC DIAGRAM	91
8-1) Refrigerator Block Diagram	91
8-2) Power and Signal Block Diagram	92
8-2) MAIN	93

1. PRECAUTIONS(SAFETY WARNINGS)

- Due to the risk of electric shock, be sure to unplug the unit before servicing.
- Use the right electronic equipment for your new Refrigerator.
 - ⇒ Make sure to check out the right model name, rated voltage and current, operating temperature, etc.
- Upon repair, make sure that harnesses are not to be water-penetrated and are bundled tight.
 - ⇒ Should not be detached by a certain amount of external force.
- Upon repair, completely remove dust or other foreign substances from housing, harness, connector, etc.
 - ⇒ To prevent fire by tracking, short, etc.
- After repair, check out the assembled state of parts.
 - ⇒ It should be the same as the previous state.
- Check out the surrounding conditions.
 - ⇒ Change the location, if the fridge is located at humid, wet places or the installed state is unstable.
- If needed, ground the fridge.
 - ⇒ Especially, if there is a possibility of electric leakage, ground is indispensable.
- Do not allow consumers to overload a certain outlet.
- Check out whether the power cord or the outlet is broken, squeezed, chopped off or heat-deformed.
 - ⇒ Repair or replace the defective power cord/outlet immediately.
 - ⇒ Make sure the power cord is not punctuated or stomped down.
- Do not allow consumers to keep food unstable or place bottles in the Freezer Room.
- Do not allow consumers to repair the fridge for themselves.
- Do not allow consumers to keep things except for food.
 - ⇒ Pharmaceutical, Chemical substances : These are not possible to be fine-Controlled with a consumer fridge.
 - ⇒ Flammable material (alcohol, benzene, ether, LPG, etc) : possibility of explosion.

PRECAUTIONS(SAFETY WARNINGS)

Read all instructions before repairing the product and keep to the instructions in order to prevent danger or property damage.

CAUTION/WARNING SYMBOLS DISPLAYED SYMBOLS


 Warning Indicates that a danger of death or serious injury exists.	 means Prohibition".
 Caution Indicates that a risk of personal injury or material damage exists.	 means Do not disassemble".
	 means No contact".
	 means The things to be followed".
	 means Power cord should be unplugged from the consent"
	 means Earth to prevent Electric shock".



Warning & Caution


Due to risk of electric shock, be sure to unplug the unit before servicing.

- It may cause electric shock.

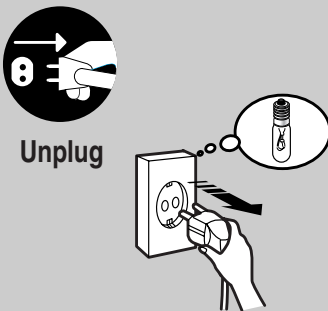

Use the rated components on the replacement.

- Check the correct model, rated voltage, rated current, operating temperature and so on.

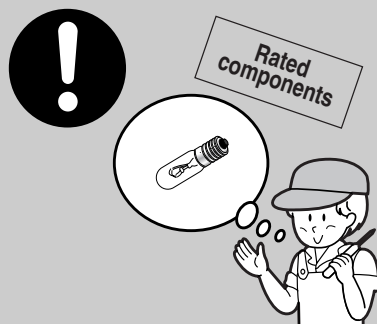

On repair, make sure that the wires such as harness are bundled tightly.

- Bundle tightly wires in order not to be detached by the external force and then not to be wetted.



On repair, remove completely dust or other things of housing parts, harness parts, and check parts.

- Cleaning may prevent the possible fire by tracking or short.




After repair, check the assembled state of components.

- It must be in the same assembled state when compared with the state before disassembly.



Check if there is any trace indicating the permeation of water.

- If there is that kind of trace, change the related components or do the necessary treatment such as taping using the insulating tape.

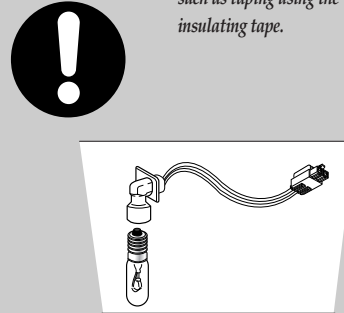

PRECAUTIONS(SAFETY WARNINGS)

* Please let users know following warnings & cautions in detail.




Warning & Caution

Do not allow users to put bottles or kinds of glass in the freezer.

- Freezing of the contents may inflict a wound.



Prohibition

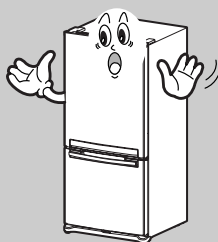

Do not allow users to store narrow and lengthy bottles or foods in a small multi-purpose room.

- It may hurt you when refrigerator door is opened and closed resulting in falling stuff down.



Prohibition



Do not allow users to store pharmaceutical products, scientific materials, etc., in the refrigerator.

- The products which temperature control should not be stored in the refrigerator.



Prohibition




Do not allow users to insert the power plugs for many products at the same time.

- May cause abnormal generation of heat or fire.



Prohibition

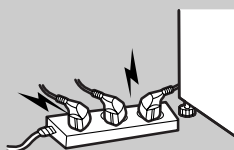


Do not allow users to disassemble, repair or alter.

- It may cause fire or abnormal operation which leads to injury.



Do not disassemble

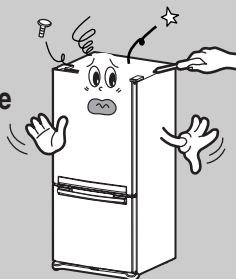

Do not allow users to bend the power cord with excessive force or do not have the power cord pressed by heavy article.

- May cause fire.




Do not allow users to store articles on the product.

- Opening or closing the door may cause things to fall down, with may inflict a wound.




Prohibition

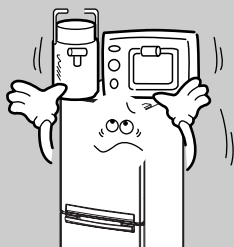

Do not allow users to install the refrigerator in the wet place or the place which water splashes.

- Deterioration of insulation of electric parts may cause electric shock or fire.

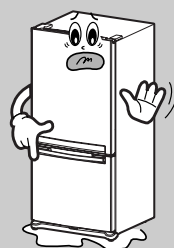


The Appliance must be properly grounded.

- If earthing is not done, it will cause breakdown and electric shock.



Earth

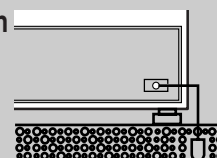

2. PRODUCT SPECIFICATIONS

2-1) Introduction of Main Function

- A newly developed SAMSUNG bottom mount freezer in 2008 has the following characteristics.

	Surround Multi Flow • Uniform cooling for each shelf and even in corner in fresh food compartment by center positioned fan and duct with multiple flow effluences.
	Twin Cooling System • The refrigerator and the freezer have two evaporators. Given this independent system, the freezer and the refrigerator are cooled individually as required and are, therefore, more efficient. Food odor from the refrigerator does not affect food in the freezer due to separate air flow circulation.
	Easy Handle System(RB196AB,RB216AB) • Ez-open Freezer Door • Ergonomic Door Design
	Moving Tray • The Deli Drawer can be moved side to side for customer improved customer satisfaction.
	Digital Display & Temperature Control • Digital Display & Temperature Control look and feel neat & clear design.

PRODUCT SPECIFICATIONS

2-2) Specifications

ELECTRICAL SPECIFICATIONS


Defrost Control	From 24 to 32 hrs
Thermo Bimetal Protector	140°F(60°C)(off) 104°F(40°C)(on)
Defrost Thermistor(502AT)	R : 62.6°F(12°C) F : 57.2°F(14°C)
Electrical Rating	AC115V 60Hz 11.6 Amps
Maximum Current Leakage	0.25 mA
Maximum Ground Path Resistance	0.1 Ohm
Energy Consumption	450kWh/year

NO LOAD PERFORMANCE


Ambient Temperature	70°F(21°C)	90°F(32°C)
Refrigerator, °F	34°F(1°C)~46°F(8°C)	34°F(1°C)~46°F(8°C)
Freezer, °F	-14°F(-26°C)~8°F(-13°C)	-14°F(-26°C)~8°F(-13°C)
Run Time, %	<40	<60

REFRIGERATION SYSTEM


Refrigerant Charge	(R134a)5.64 oz(160g)
Compressor(MK162D-L1U)	730 Btu/hr(0.124kw)
Compressor oil	Freol α 10c
R Capillary tube(Dia, Length)	0.032 " , 118 " (0.82mm, 3000mm)
F Capillary tube(Dia, Length)	0.032 " , 118 " (0.82mm, 3000mm)

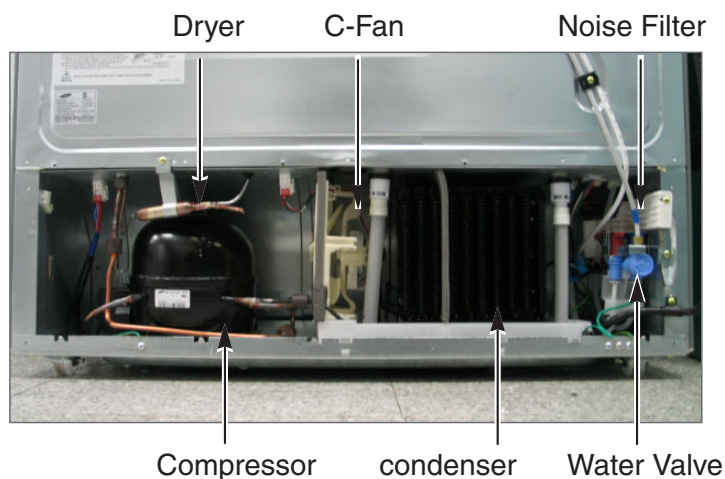

Refrigerator

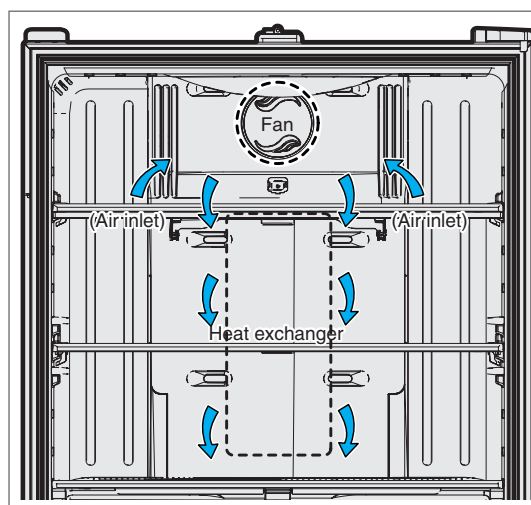

Freezer

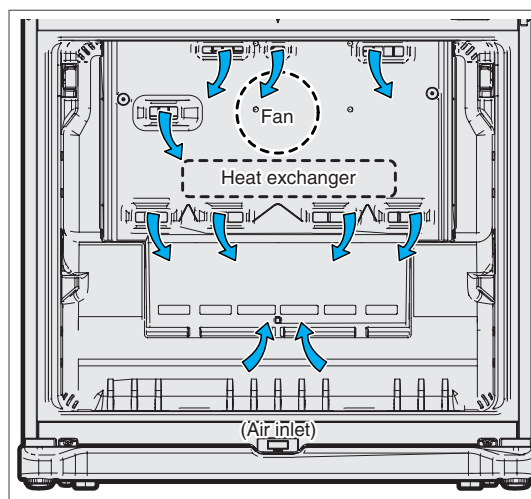


INSTALLATION

Clearance must be provided for air circulation

AT TOP	2 " (50mm)
AT SIDES	1 " (25mm)
AT REAR	2 " (50mm)

PRODUCT SPECIFICATIONS

2-3) Interior Views

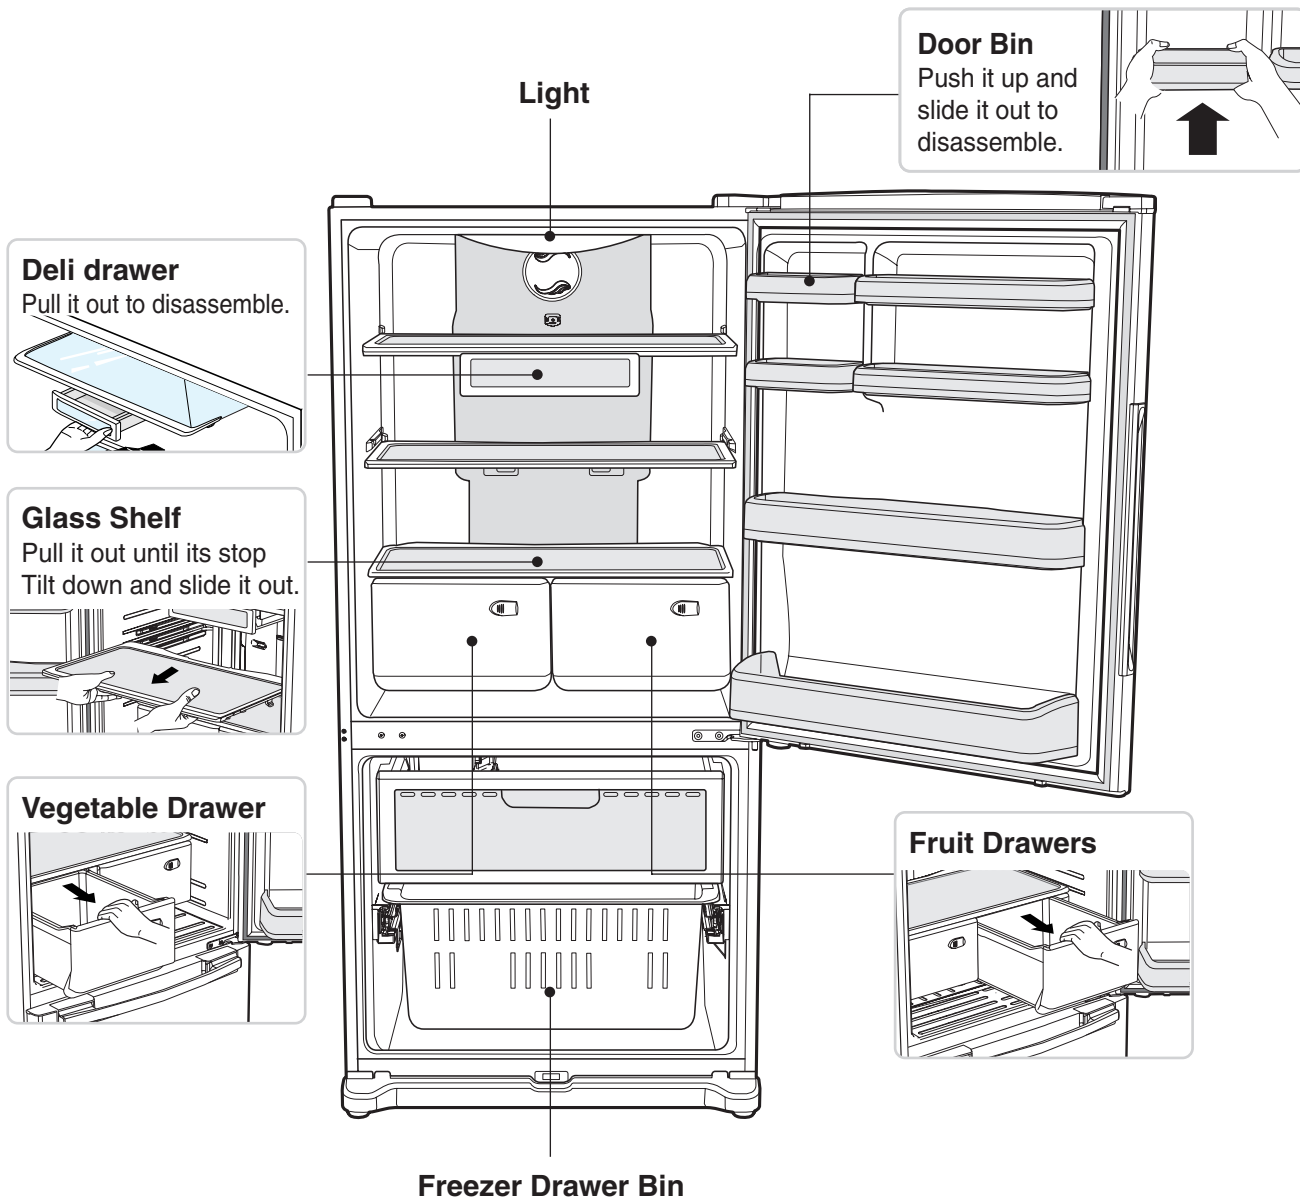

PRODUCT SPECIFICATIONS

2-4) Model Specification

ITEM			SPEC	SAMSUNG	
				RB194,RB196,RB214,RB216	
Appearance					
Product Zone			Cooling Tech	Twin Cooling	
			Door Shape	Contour	
			Special Room	Cool Select Pantry	
Performance	Cooling Speed(Min)	F-Room	220 ↓	177.7	
		R-Room	220 ↓	162.6	
	89.6°F(32°C)	F-Room	-26.0 ↓	-28.6	
		R-Room	2.0 ↓	-0.4	
	109.4°F(43°C)	F-Room	-18.0 ↓	-22	
		R-Room	5.0 ↓	0.4	
	Temperature Distribution (Fridge)	F-Room	2.0 ↓	0.5	
		R-Room	2.0 ↓	1.3	
	Run Time	N-N	65% ↓	53.6	
Noise	Sound power level		46dB ↓	43.5	
	Sound Pressure level		45dB ↓	48.2	

PRODUCT SPECIFICATIONS

2-5) Model Specification & Specification Chart

Free Standing Model		Swing/No Dispenser	Swing/External Water Dispenser	Swing /No Dispenser	Swing/ External Water Dispenser
Model Number/ BOM code		2 Door		2 Door	
		RB194	RB196	RB214	RB216
Dimension (WxDxH)Inch/mm		32 1/4 x28 1/4 x70(817x715x1778)	32 1/4 x28 1/4 x70(817x715x1778)	32 1/4 x230 1/4 x70(817x765x1778)	32 1/4 x230 1/4 x70(817x765x1778)
Capacity (net) (cu.ft/l)	Total	(18.7 / 529.5)	(18.7 / 529.5)	(20.5 / 579.7)	(20.5 / 579.7)
	Refrigerator	(5.9 / 167)	(5.9 / 167)	(6.5 / 184.1)	(6.5 / 184.1)
	Freezer	(12.8 / 362.5)	(12.8 / 362.5)	(14.0 / 395.6)	(14.0 / 395.6)
Dimension (Net : Inch/mm)	Width	32 1/4 / 817	32 1/4 / 817	32 1/4 / 817	32 1/4 / 817
	Height	w/o Hinge	68 3/4 / 1748	68 3/4 / 1748	68 3/4 / 1748
		With Hinge	70 / 1778	70 / 1778	70 / 1778
	Depth	with Handle	28 1/4 / 715	30 1/8 / 765	30 1/8 / 765
		w/o Handle	28 1/4 / 715	30 1/8 / 765	30 1/8 / 765
		w/o Door	24 3/4 / 628	26 3/4 / 678	26 3/4 / 678
Dimension (packing : Inch)	Width	34 / 865	34 / 865	34 / 865	34 / 865
	Net	72 1/8 / 1832	72 1/8 / 1832	72 1/8 / 1832	72 1/8 / 1832
	Packing	30 1/8 / 766	30 1/8 / 766	32 1/8 / 816	32 1/8 / 816
Weight (lb)	Height	216lb (98kg)	216lb (98kg)	225lb (102kg)	225lb (102kg)
	Depth	247lb (112kg)	247lb (112kg)	256lb (116kg)	256lb (116kg)
Compressor		Reciprocate			
Rated Frequency and Frequency		AC 115V/60Hz			
Refrigerant		R 134a			
Foaming Agent		C-Pentane			
Refrigerant Input Amount		5.64 oz (160g)			
Type Refrigerator		Indirect Cooling Method Refrigerator			
Motor Rated Consumption Power		140W			
Electric Heater Rated Consumption Power		340W			

COLOR			
	Cabinet (Both Side)	Door	Molding
Black	All Black	Empire Black	I Black
Real STS	Noble STS	Versailles Stainless	Creamy STS
White	Snow White	Snow White	Snow White
Platinum STS	Noble STS	Stainless Platinum	Creamy STS

PRODUCT SPECIFICATIONS


Items			Specification	
Model			RB19*,RB21*	
Components for Freezer	Compressor	Model	MK162DLIU-E09	
		Starting type	AC	
		Oil Charge	FREOL α -10	
	Evaporator	Freezer	SPLIT FIN TYPE	
		Refrigerator	SPLIT FIN TYPE	
	Condenser		Forced and Natural Convection Type	
	Dryer		Molecular shieve XH-9	
	Capillary tube(Dia x Length)		R : 0.032" x 118" (0.82mm x 3000mm) / F : 0.032" x 118" (0.82mm x 3000mm)	
	Refrigerant		R134a	
Room Temperature Sensor Components	Freezer	Model	Temperature Selection	ON(°F) OFF(°F)
		THERMISTOR (F-SENSOR) 502AT	-14°F(-26℃)	-11°F(-24℃)
			-2°F(-19℃)	1°F(-17℃)
			8°F(-13℃)	11°F(-12℃)
	Refrigerator	Model	Temperature Selection	ON(°F) OFF(°F)
		THERMISTOR (R-SENSOR) 502AT	34°F(1℃)	36°F(2℃)
			38°F(3℃)	40°F(4℃)
			46°F(8℃)	48°F(9℃)
			44°F(7℃)	
Defrost Related Components	Defrost Cycle	First Defrost Cycle (Concurrent defrost of F and R)		6hr $\pm$ 10min
		Defrost Cycle(FRE)		12~23hr(vary according to the conditions used)
		Defrost Cycle(REF)		6~11hr(vary according to the conditions used)
		Pause time		12 $\pm$ 1min
	Defrost Sensor	F Defrost-Sensor	Model	THERMISTOR (502AT)
			SPEC	5.0 K Ω at 77°F(25℃)
		R Defrost-Sensor	Model	THERMISTOR (502AT)
			SPEC	5.0 K Ω at 77°F(25℃)
	Bimetal	F Bimetal-thermo Protector	Rated	AC 125V 10A
			Operating temperature	Off : 140°F(60℃) / On : 104°F(40℃)
		R Bimetal-thermo Protector	Rated	AC 125V 10A
			Operating temperature	Off : 140°F(60℃) / On : 104°F(40℃)

PRODUCT SPECIFICATIONS

Items			Specification
Model			RB19*,RB21*
Electric Components	Defrost Heater(FRE)	Heated at F Defrost	AC 120V, 240W
	Defrost Heater(REF)	Heated at R Defrost	AC115V, 120W
	Over Load Relay	Model	4TM412SFBYY-53
		Temp.ON	275 ± 41°F(135±5°C)
		Temp.OFF	141.8 ± 61°F(61±9°C)
	Rated Voltage		AC 115V/ 60Hz
	Motor-BLDC(FRE)		DC12V / DREP5020LC
	Motor-BLDC(REF)		DC12V / DREP5020LC
	Motor-BLDC(CIRCUIT)		DC12V / DREP5130LA
	Lamp(FRE)		AC 120V / 40W(1EA)
	Lamp(REF)		AC 125/720mA
	Door Switch	FRE	DC200V 0.5A / MS-406-SS-01(1EA)
		REF	DC200V 0.5A / MS-406-SS-01(1EA)
	Power Cord		AC125V 15A
	Ground Screw		BSBN (BRASS SCREW)

PRODUCT SPECIFICATIONS

2-6)Dimensions of Refrigerator (Inches)

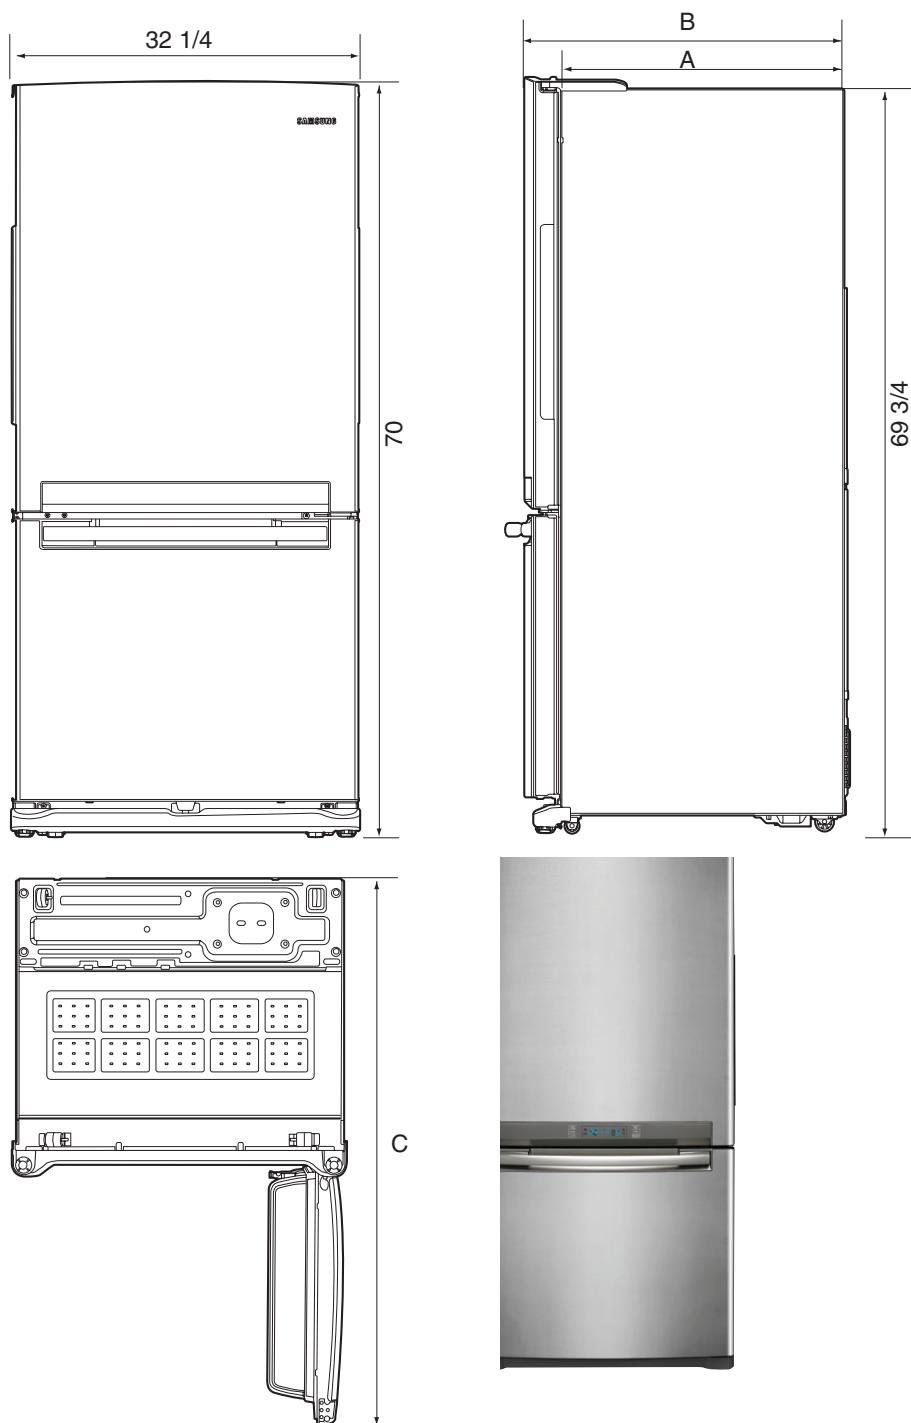


MODEL	A	B	C
RB19*	24 1/4	27 5/8	57 1/2
RB21*	26 1/4	29 5/8	59 1/2

PRODUCT SPECIFICATIONS


2-7) Refrigerant Route in Refrigeration cycle

Compressor → Sub-condenser → Side Cluster → Hot Pipe → Dryer → R Capillary
→ R Evaporator → F Evaporator → Suction Pipe → Compressor

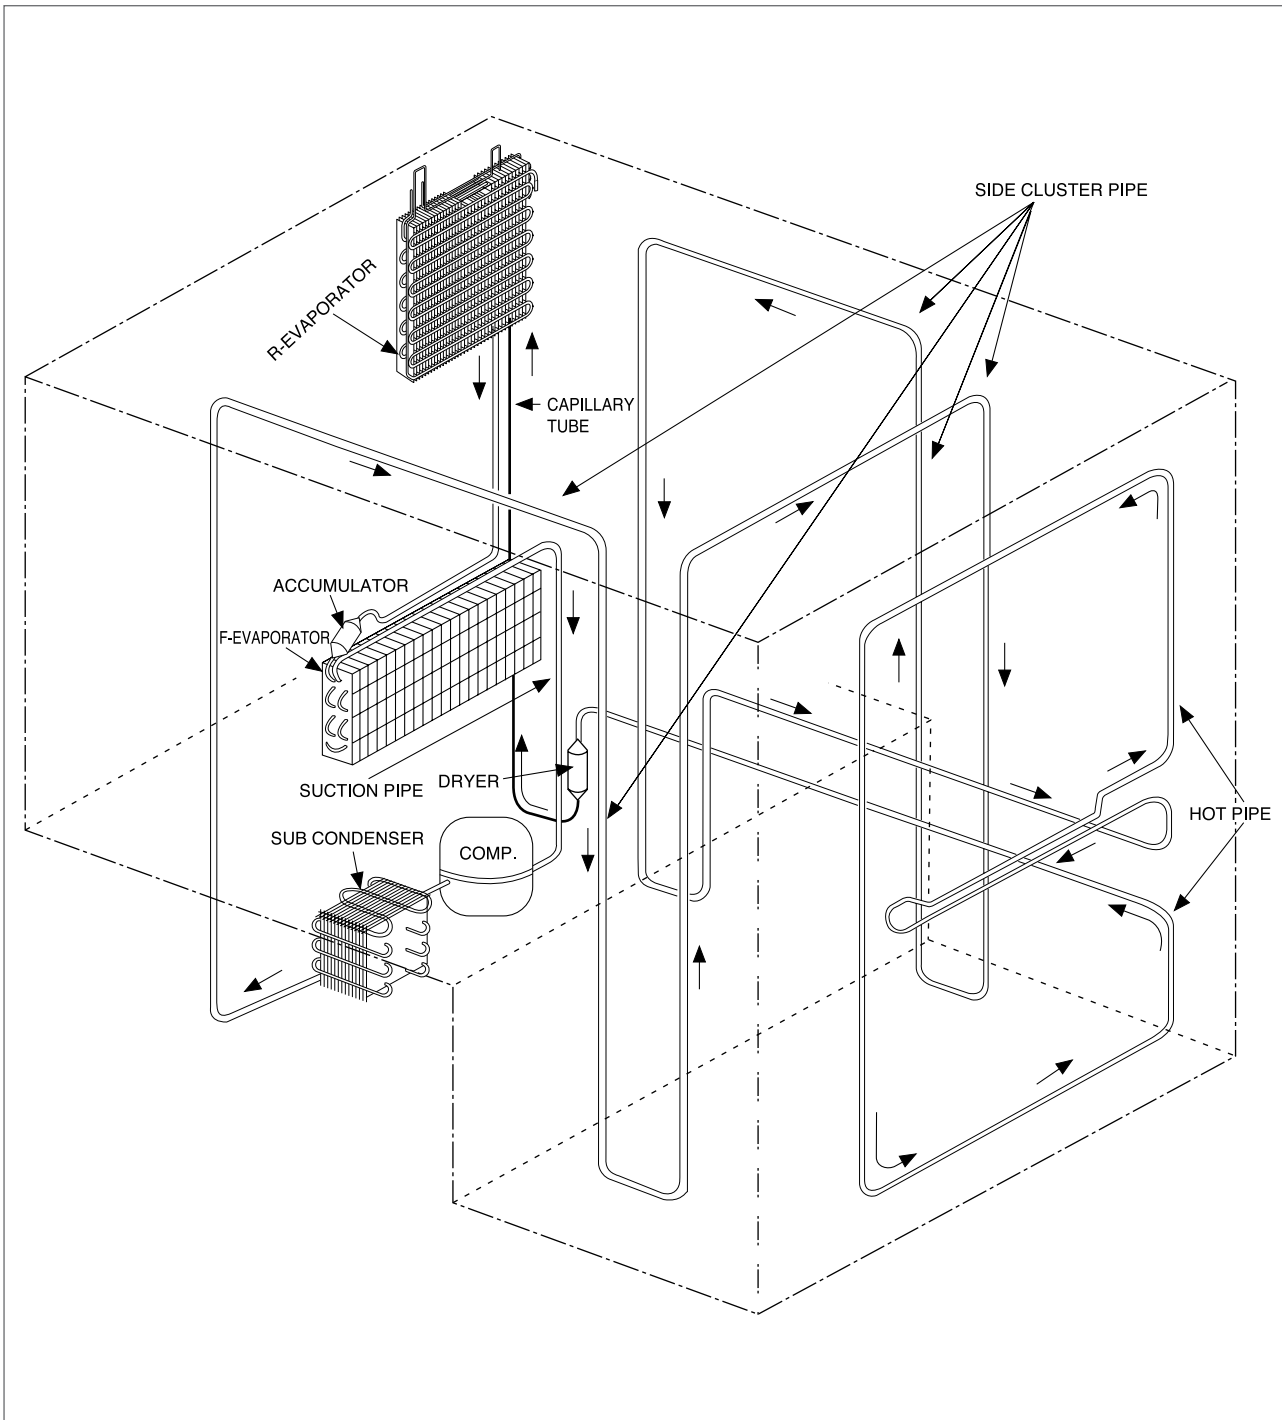

PRODUCT SPECIFICATIONS

2-8) Cooling Air Circulation

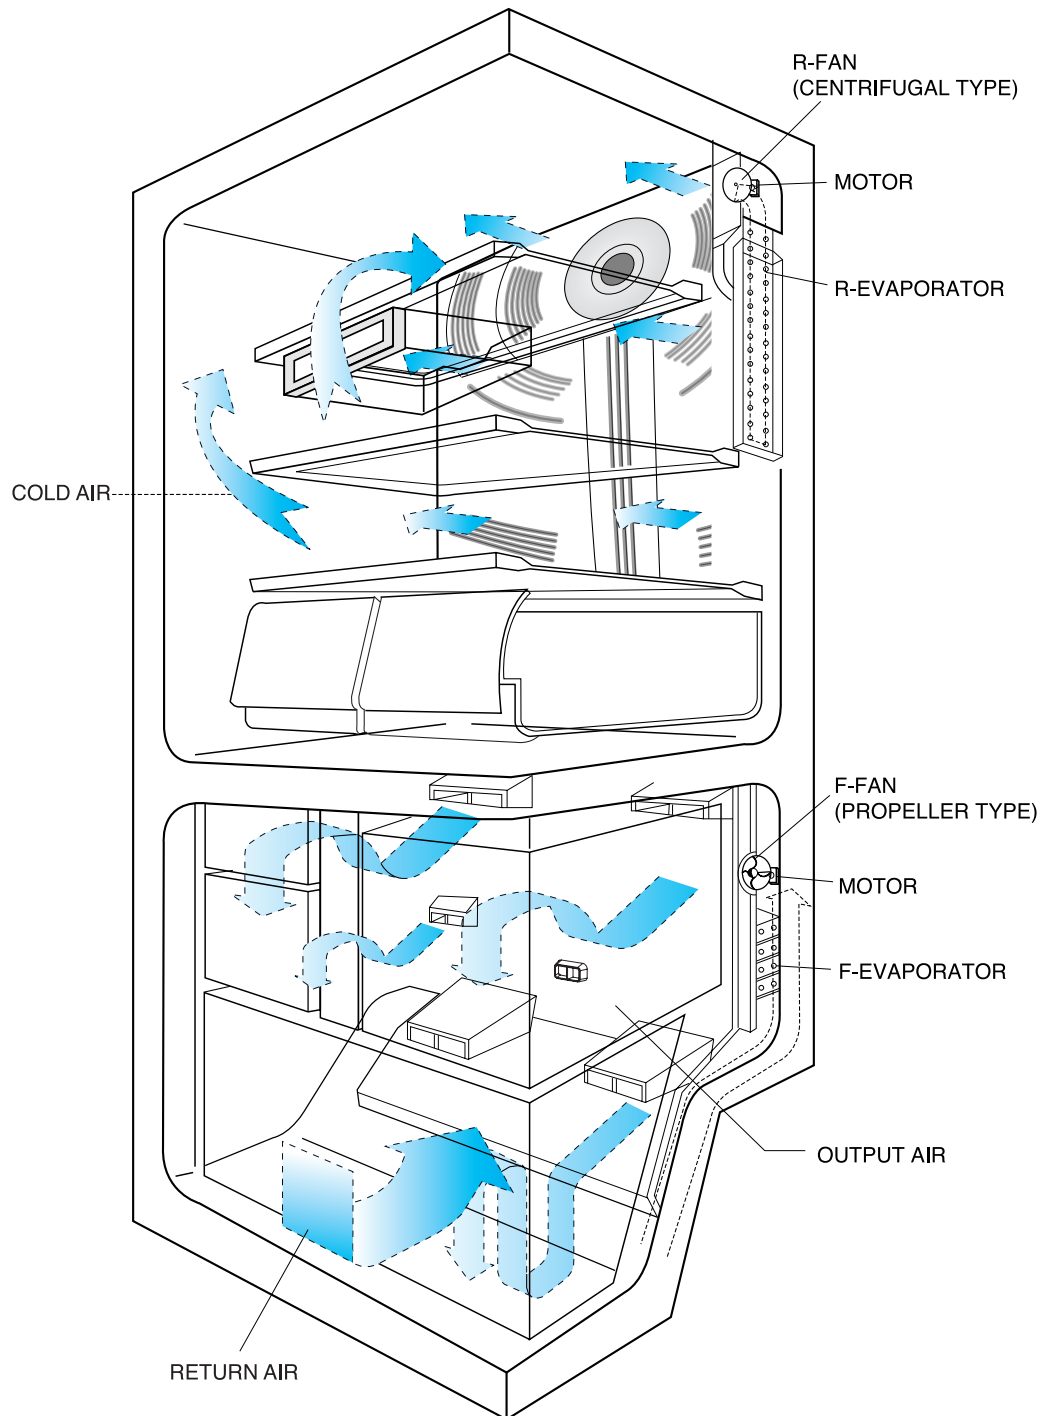

3. DISASSEMBLY AND REASSEMBLY

3-1) PRECAUTION

- Unplug the refrigerator before cleaning and making repairs.
- Do not disassemble or repair the refrigerator by yourself.
 - It may cause risk of causing a fire, malfunction and/or personal injury.
- Remove any foreign matter or dust from the power plug pins.
 - Otherwise there is a risk of fire.
- Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- Do not plug several appliances into the same multiple power board. The refrigerator should always be plugged into its own individual electrical which has a voltage rating that matched the rating plate.
 - This provides the best performance and also prevents overloading house wiring circuits, which could cause a fire hazard from overheated wires.
- Do not install the refrigerator in a damp place or place where it may come in contact with water.
 - Deteriorated insulation of electrical parts may cause an electric shock or fire.
- The refrigerator must be grounded.
 - You must ground the refrigerator to prevent any power leakages or electric shocks caused by current leakage from the refrigerator.
- Do not put bottles or glass containers in the freezer.
 - When the contents freeze, the glass may break and cause personal injury.
- Do not store volatile or flammable substances in the refrigerator.
 - The storage of benzene, thinner, alcohol, ether, LP gas and other such products may cause explosions.

- Required Tools

IMAGE	ITEM	USE
	Phillips Head Driver	Use for assembling and disassembling of screw
	Flat Head Driver	Use for assembling and disassembling of HomeBar, Dispenser, Deli Cartessen Box, Main PBA etc...
	Hex Wrench $\varnothing$ 2mm	Use for assembling and disassembling of Handle
	Socket Wrench $\varnothing$ 10mm	Use for assembling and disassembling of Door Hinge

DISASSEMBLY AND REASSEMBLY


3-2) Refrigerator Door

Part Name	How To Do	Descriptive Picture
Refrigerator Door	1. After removing the screw, disassemble the Upper Right Hinge Cover with opening door.	
	2. Disconnect electric wire on the top of the refrigerator.	
	3. With the 10mm wrench, remove the three bolts that holds the hinge on the top of the refrigerator.	
	4. Remove the screw that hold the ground wire.	
	5. Separate Hinge from electric wire and ground wire as shown in the picture.	

DISASSEMBLY AND REASSEMBLY

Part Name	How To Do	Descriptive Picture
Refrigerator Door	6. Disassemble the fridge door by lifting it upward. Be careful not to drop and scratch the fridge door.	
	7. Separate the Cap assembled on the Middle Hinge.	

3-3) Freezer Door(RB214,RB194)

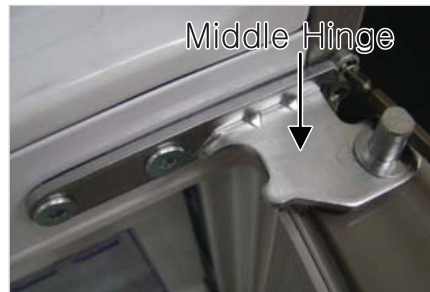Part Name	How To Do	Descriptive Picture
Freezer Door	1. After removing the screw and 2 special screws, disassemble Middle Hinge.	 

DISASSEMBLY AND REASSEMBLY


3-3) Freezer Door(RB214,RB194)

Part Name	How To Do	Descriptive Picture
Freezer Door	2. Remove the Middle Hinge connected to the Freezer.	
	3. Disassemble the Freezer door by lifting it upward. Be careful not to drop and scratch the Freezer door	
	4. Disassemble the Cap on the Low Hinge.	

3-3) Freezer Door(RB216AB,RB196AB)

Part Name	How To Do	Descriptive Picture
Freezer Door	1. After opening the Freezer door, separate drawer box	

DISASSEMBLY AND REASSEMBLY

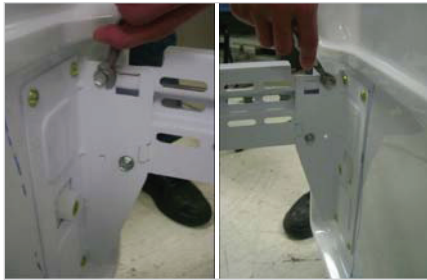Part Name	How To Do	Descriptive Picture
Freezer Door	2. With the 10mm wrench, remove the each two bolts connecting rail with door.	
	3. Disassemble the Freezer door from the rails.	

3-4) Freezer Door Switch

Part Name	How To Do	Descriptive Picture
Freezer Door Switch	1. Remove 1 screw at the lower part of the Freezer.	
	2. Separate the Cap.	
	3. Separate the Housing.	

DISASSEMBLY AND REASSEMBLY

3-5) Refrigerator Light

Part Name	How To Do	Descriptive Picture
Refrigerator Light	1. Remove the lamp cover by pulling it down as pushing the rear of lamp cover.	
	2. Remove the lamp by turning counterclockwise.	

3-6) Glass shelves

Part Name	How To Do	Descriptive Picture
Glass shelves	1. When pulling out the shelf, if it is not slid out well, lift it up slightly and pull out again.	

DISASSEMBLY AND REASSEMBLY

3-7) Moving tray

Part Name	How To Do	Descriptive Picture
Moving tray	1. When pulling out the Moving tray, if it is not slid out well, lift it up slightly and pull out again.	

3-8) Vegetable & Fruit Drawers Shelf

Part Name	How To Do	Descriptive Picture
Vegetable & Fruit Drawers Shelf	1. Remove the vegetable & fruit drawer by pulling the roller part and lifting it up.	
	2. Remove the vegetable & fruit drawer shelf by pulling it out. (Refer to the picture)	
	3. Remove the vegetable & fruit drawer partition by pulling it out. (Refer to the picture)	

DISASSEMBLY AND REASSEMBLY

3-9) Gallon Door Bin

Part Name	How To Do	Descriptive Picture
Gallon Door Bin	1. Remove the gallon door bin by lifting it up. (Refer to the picture)	

3-10) Evaporator In Refrigerator


Part Name	How To Do	Descriptive Picture
Evaporator In Refrigerator	1. Remove the screw cap with a flat-blade screwdriver.	
	2. Unscrew a screw.	
	3. Unscrew two screws. And remove the hook by pulling it from the lower part and pushing the cover down. (Refer to the picture)	

DISASSEMBLY AND REASSEMBLY


Part Name	How To Do	Descriptive Picture
Evaporator In Refrigerator	4. Remove the housing cover by pushing both lateral sides of the housing cover and pulling it out. (Refer to the picture)	
	5. Disconnect the housing connector part. (Refer to the picture)	
	6. Remove the evaporator by Lifting the bottom side of it up and pulling it out. (Refer to the picture)	

DISASSEMBLY AND REASSEMBLY

3-11) Door Handle Freezer

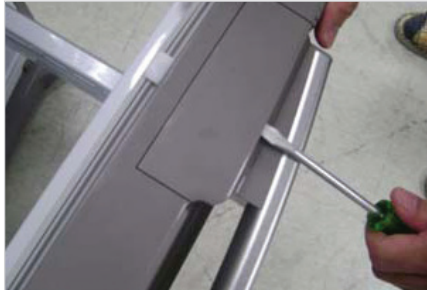Part Name	How To Do	Descriptive Picture
Door Handle Freezer	1. Remove the Cap Door with a flat-blade(-) screwdriver.	
	2. Lift the handle up with force in the direction of arrow.	

3-12) Freezer Light

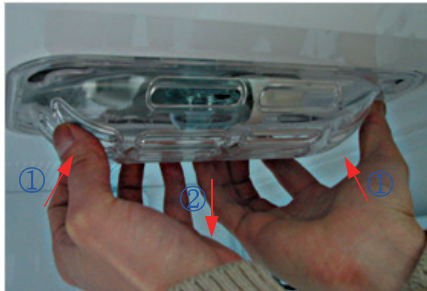Part Name	How To Do	Descriptive Picture
Freezer Light	1. Remove the light by pulling the light cover down while pushing the rear plane of light cover.	

DISASSEMBLY AND REASSEMBLY

3-13) Evaporator Cover In Freezer




Part Name	How To Do	Descriptive Picture
Evaporator Cover In Freezer	1. Remove the freezer door and freezer drawer by pulling out the drawer and then unscrewing 2 screws. Lift up the evaporator cover.	
	2. Disengage the housing connector and remove the evaporator cover.	

3-14) Evaporator In Freezer



Part Name	How To Do	Descriptive Picture
Evaporator In Freezer	1. Remove the housing cover by pushing both lateral sides of housing cover part and pulling it out. Remove the housing connector part.	
	2. Remove the evaporator by pulling the lower part of the evaporator while lifting it up.	

DISASSEMBLY AND REASSEMBLY

3-15) Motor Fan

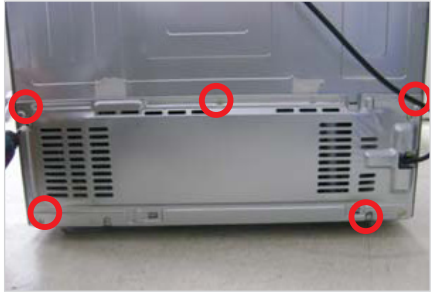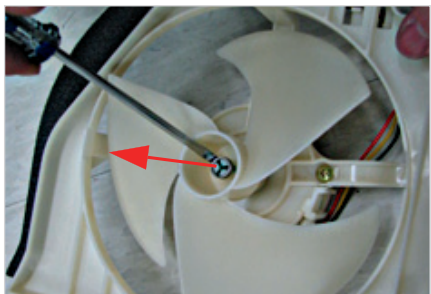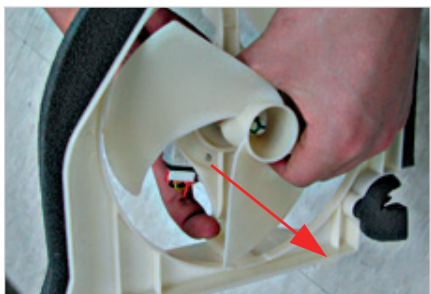Part Name	How To Do	Descriptive Picture
Motor Fan	1. Unscrew 5 screws of cover compressor.	
	2. Disengage the housing connector. (Refer to the picture)	
	3. Remove the hooker of support circuit motor by lifting the hooker up and pulling it out.	
	4. Remove the spring with a flat-blade screwdriver. (Refer to the picture)	
	5. Remove the motor fan by pulling the fan out while grasping the motor part. (Refer to the picture)	

DISASSEMBLY AND REASSEMBLY

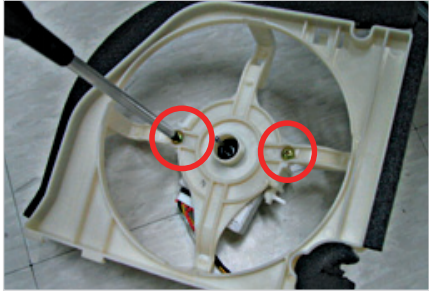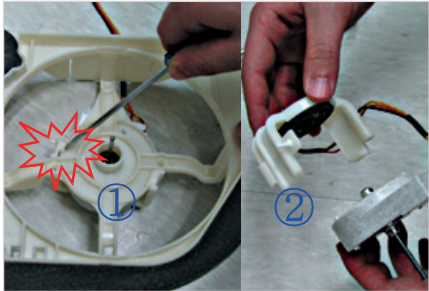Part Name	How To Do	Descriptive Picture
Motor Fan	6. Unscrew 2 screws fixed in the motor.	
	7. Remove the hook of the motor cover with a flat-blade (-) screwdriver and then remove the motor.	


4. TROUBLESHOOTING

4-1) Check items before failure diagnosis

4-1-1. TEST mode (Manual operation / Manual defrost function)


- If the Power Freeze and Fridge Key on the front panel are pressed simultaneously for 8 seconds, it will be changed to the Test Mode and all display on the front panel will be off.
- If any key on the front panel is pressed within 15 seconds after changing to Test Mode, it will be operated as below sequence; Manual operation (FF) → Manual defrost of R (rd) → Manual defrost of F/R (Fd) → Cancel (Display all off).
- If any key on the front of panel is not pressed within 15 seconds after the Test Mode, the Test Mode will be canceled and it will be returned to previous mode.

1) Manual operation function

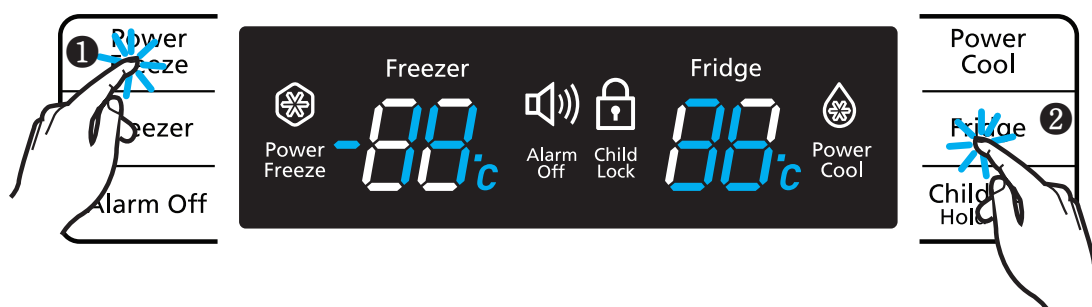

① If **Power Freeze Key + Fridge Key are pressed simultaneously for 8 seconds and all displays are off**, it will be changed to the Test Mode (manual operation) pressing any key.

- 1-1) If any key is pressed once in TEST MODE, "FF" blinks on the display and it indicates the refrigerator has entered the manual operation. At this moment, buzzer beeps as an alarm.

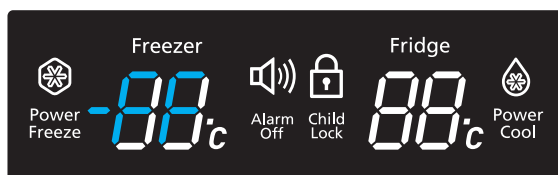

- 1-2) If manual function is selected, compressor will run at once without 5 minutes delay in any mode. If the refrigerator is on the defrost cycle at the moment, defrost will be stopped and manual operation will begin. (Be careful, if manual operation gets started immediately at the moment of compressor off, overload could be occurred.)
- 1-3) If manual operation works, compressor & F-FAN operate continuously for 24 hours and fresh food compartment will be controlled by the setting temperature.
- 1-4) When the manual operation runs, setting temperature will be selected automatically as below ; Freezer compartment -14°F(-25℃), Fresh food compartment 32°F(1℃).
- 1-5) During manual operation Power Freeze & Power Cool function will not be worked. If a function is selected, the power function icon of the selected one will be off automatically after 10 seconds.
- 1-6) Manual operation can be canceled during manual operation by turning on the appliance after power off(reset) or choosing the following step 4) test cancel mode.
- 1-7) When the manual operation runs, alarm (0.25 seconds ON/0.75 seconds OFF) will beep continuously until manual operation is completed and there is no function to make the sound stop.


TROUBLESHOOTING

2) Manual defrost (**R : Fresh food compartment**) function



- 2-1) If any key is pressed one more time during manual operation (Fresh food compartment), "rd" shows in the display and then manual operation will be canceled at once and fresh food compartment will be defrosted.
- 2-2) At this moment, alarm beeps for 3 seconds from the beginning, and then beeps 0.1 sec ON/ 1 sec OFF during manual defrost (Fresh food compartment) function.

3) Manual defrost (**R & F : Fresh food & Freezer compartment**) function

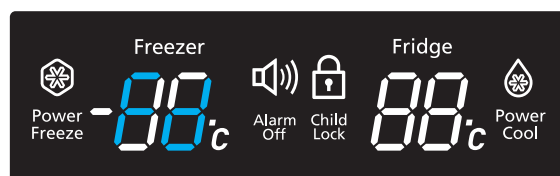

- 3-1) If any key is pressed one more time during manual defrost (defrost of fresh food compartment, "rd") "Fd" shows on the display and then fresh food and freezer compartments defrost will operate. Simultaneous manual defrost of Fresh food and Freezer compartment is on the extension of fresh food compartment, and when it begins, it operates by comparing the temperature of Freezer Heater ON, not compare the temperature of fresh food Heater ON separately, That is, in case of manual defrost of fresh food, it is the Heater On condition and if the simultaneous manual defrost of fresh food and freezer compartment key before completing deforest, it does not make fresh food compartment heater OFF by re-comparing the temperature of fresh food compartment EVA.
- 3-2) At this time, alarm beeps for 3 seconds from the beginning, and then beeps 0.5 sec. ON/ 0.5sec. OFF during manual defrost function of fresh food and freezer compartment.

4) Test cancel mode

- 4-1) During defrosting of fresh food and freezer compartments simultaneously, if the display panel changes to the test mode and test button is pressed one more time, defrosting of fresh food and freezer compartments will be canceled at the same time and will return to the normal operation. Or, all test functions will be canceled by turning main power ON and OFF.

4-1-2. Self-diagnostic function

1) Self-diagnostic function in the initial power ON.


- 1-1) Micom operates self-diagnostic function to check the temperature sensor condition within 1 second when the refrigerator turned On initially.
- 1-2) If bad sensor is detected by the self-diagnostic function, the all applicable display LED will blink for 0.5-second interval. At this moment, there is no beep sound.
(Refer to self-diagnostic CHECK LIST)
- 1-3) Self-diagnostic button is recognized only when the error is displayed by the bad sensor. Display does not operate normally but temperature control will be controlled by the emergency operation.
- 1-4) When the error is detected by self-diagnosis, the error can be canceled automatically if all troubled sensors are corrected or Self-diagnostic function key (Power Freeze + Power Cool) are pressed simultaneously for 8 seconds. (Return to normal display mode)

TROUBLESHOOTING



- ① If **Power Freeze Key + Power Cool Key are pressed simultaneously for 8 seconds**, the error mode by self-diagnosis will be canceled.

2) Self-diagnostic function during normal operation


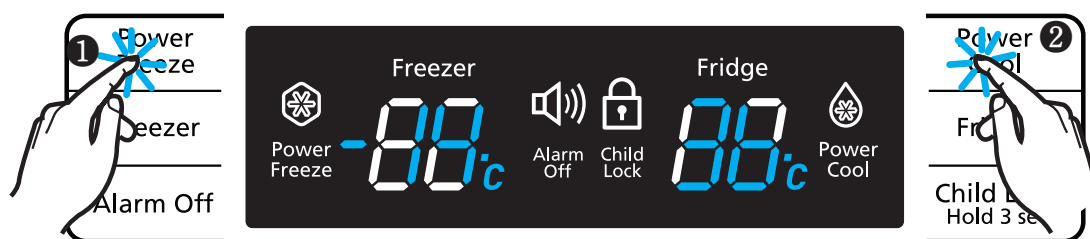


- 2-1) If Power Freeze Key + Power Cool Key are pressed simultaneously for 6 seconds during normal operation, the temperature setting display will operate for 2 seconds (ALL ON/OFF 0.5 sec each). If Power Freeze Key + Power Cool Key are pressed simultaneously for 8 seconds (including above 2 seconds), self-diagnostic function will be selected.
- 2-2) At this moment, self-diagnostic function will be returned with buzzer sound 'ding-dong'. If there is an error, display of error will be operated for 30 seconds and then return to normal condition whether problem is corrected or not.
(Buzzer sounds 'ding-dong') (Refer to self-diagnosis CHECK LIST).
- 2-3) Input by button is not acceptable during self-diagnostic function.

TROUBLESHOOTING

* Self-diagnosis CHECK LIST

NO	Trouble item	Display LED	Trouble contents
1	R-Sensor Error	R-1- ^(b)	R SENSOR part error.
2	R-DEF-Sensor Error	R-1- ^(c)	R defrost SENSOR part error.
3	R-FANError	R-1- ^(d)	R inner fan motor part error.
4	R-DEF. - Heater Error	R-1- ^(g)	R defrost part error.
5	Ambient-Sensor Error	F-1- ^(a)	External SENSOR part error.
6	F-Sensor Error	F-1- ^(b)	F SENSOR part error.
7	F-DEF-Sensor Error	F-1- ^(c)	F defrost SENSOR part error.
8	F-FAN Error	F-1- ^(d)	F inner fan motor part error.
9	C-FAN Error	F-1- ^(e)	Machine room fan motor part error.
10	F-DEF. - Heater Error	F-1- ^(g)	F defrost part error.

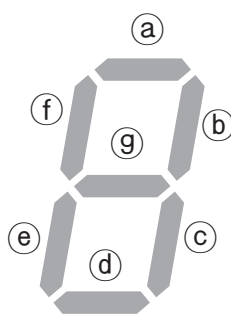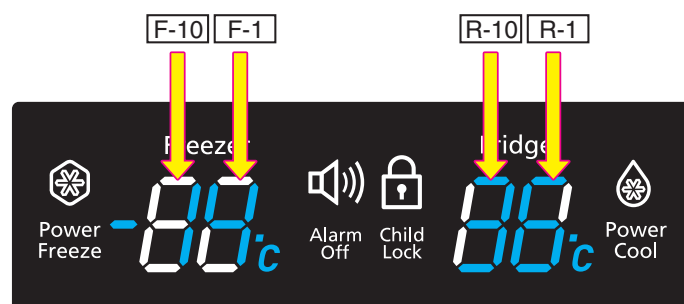


TROUBLESHOOTING

* Self-diagnostics check list

LED	Item	Trouble contents	Diagnostic method
R-1- ⓑ	R-Sensor Error	Display error : In case of Separation of sensor housing part, contact error, disconnection, short circuit. Display error by temperature : when the sensing temperature is more than 149°F (+65°C) or less than -58°F (-50°C).	When checking the voltage of MAIN PCB CN30 #3 ↔ #8 : Shall be between 4.5V~1.0V.
R-1- ⓒ	R-DEF-Sensor Error		When checking the voltage of MAIN PCB CN30 #4 ↔ #8 : Shall be between 4.5V~1.0V.
R-1- ⓓ	R-FAN Error	Display error : In case of Feed Back signal line contact error, separation of motor wire, motor itself error during operation of applicable fan motor.	Voltage of MAIN PCB CN76 Yellow ↔ Gray : Shall be between 7V~12V.
R-1- ⓖ	R-DEF. Error	Fresh food Compartment Display error : In case of separation of defrost heater housing, contact error, disconnection, short circuit, or temperature fuse error. Display error : If defrost does not finish though the defrost of fresh food compartment is heating continuously for more than 80 minutes.	After separating MAIN PCB CN72 wire from PCB, the checked resistance value of CN70 White ↔ Orange shall be 103/397ohm ± 10% (Resistance value is varied by input power) ↔ Model without Ice maker (120ohm ± 10%) Check 0 Ohm for heater short, & ∞ Ohm for wire / bimetal Open.
F-1- ⓐ	Ambient-Sensor Error	Display error : In case of separation of sensor housing parts, contact error, disconnection, short circuit.	When checking the voltage of MAIN PCB CN31 #1 ↔ #3 : Shall be between 4.5V~1.0V.
F-1- ⓑ	F-Sensor Error	Display error by temperature : When the sensing temperature is more than 149°F (+65°C) or less than -58°F (-50°C).	When checking the voltage of MAIN PCB CN30 #5 ↔ #8 : Shall be between 4.5V~1.0V.
F-1- ⓒ	F-DEF-Sensor Error		When checking the voltage of MAIN PCB CN30 #6 ↔ #8 : Shall be between 4.5V~1.0V.
F-1- ⓓ	F-FAN Error	Display error : In case of Feed Back signal line contact error, separation of motor wire, motor itself error during operation of applicable fan motor.	Voltage of MAIN PCB CN76 Pink ↔ Gray : Shall be between 7V~12V.
F-1- ⓔ	C-FAN Error	Display error : In case of Feed Back signal line contact error, separation of motor wire, motor itself error during operation of applicable fan motor.	Voltage of MAIN PCB CN76 Blue ↔ Gray : Shall be between 7V~12V.
F-1- ⓖ	F-DEF. Error	Freeze Compartment Display error : In case of separation of defrost heater housing, contact error, disconnection, short circuit or temperature fuse error. Display error : If defrost does not finish though the defrost of freeze compartment is heating continuously for more than 70 minutes.	After separating MAIN PCB CN72 wire from PCB, the checked resistance value of CN70 Brown ↔ Orange shall be 66/240 ohm ± 10%. (Resistance value is varied by input power) Check 0 Ohm for heater short, & ∞ Ohm for wire / bimetal Open.



TROUBLESHOOTING

4-1-3. Display function of Load condition

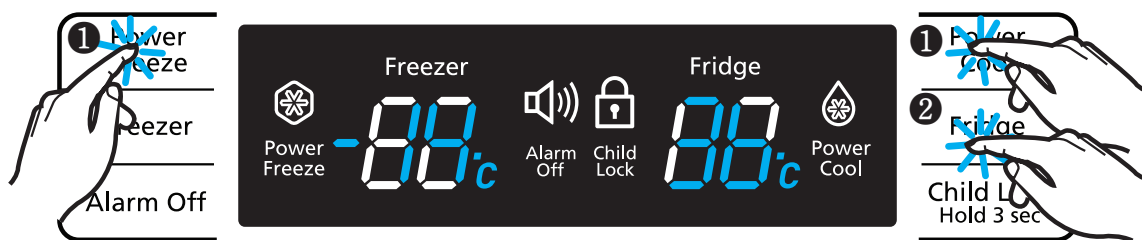

- ① If **Power Freeze Key + Power Cool Key** are pressed simultaneously for 6 seconds, **All ON/OFF will blink at 0.5 second intervals for 2 seconds.**
- ② If taking the finger off from the keys when above blinking condition and press **Fridge Key**, load condition mode will be started.

- 1) If Power Freeze Key + Power Cool Key are pressed simultaneously for 6 seconds, ALL ON/OFF will blink at 0.5 second intervals for 2 seconds.
- 2) At this moment, if taking the finger off from Power Freeze Key + Power Cool Key and pressing Fridge Key, load condition display mode will be returned with alarm ("Ding-dong").
- 3) Load condition display mode shows the load that MICOM signal is outputting. But, it means that MICOM signal is outputting and does not means whether load is operating or not actually. That is, though load operation is displayed, load could not be operated by actual load error, PCB relay error, or etc. And this function would be applied at Service (A/S).
- 4) Load condition display function will maintain for 30 seconds and then normal condition will be returned automatically.
- 5) Load condition display is as below.

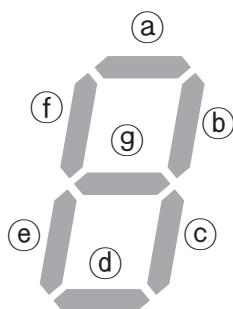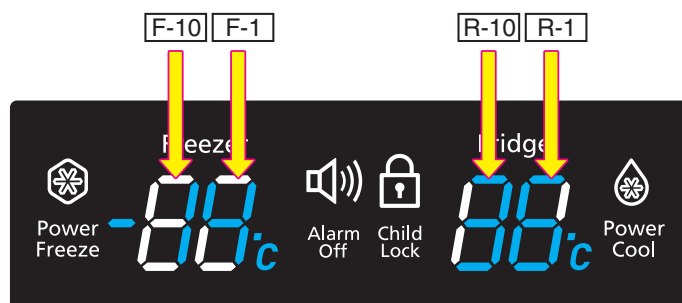

TROUBLESHOOTING

* Load mode Check list

Display LED	Display contents	Operation contents
R-1- ^(a)	R-FAN High	When fresh food compartment FAN High operates, applicable LED ON.
R-1- ^(b)	R-FAN Low	When fresh food compartment FAN Low operates, applicable LED ON.
R-1- ^(c)	R-DEF Heater	When fresh food compartment defrost heater operates, LED ON.
R-1- ^(d)	Start Mode	When initial power applied to refrigerator, LED ON.
R-1- ^(e)	Overload condition	When ambient temperature is more than 93°F(34°C), LED ON.
R-1- ^(f)	Low temperature condition	When ambient temperature is less than 72°F(22°C), LED ON.
F-1- ^{(e), (f)} ALL LED Off	Normal Condition	When the ambient temperature is between 73°F(23°C) ~ 91°F(33°C).
R1- ^(g)	Exhibition Mode	At the display mode, LED ON.
F-1- ^(a)	COMP.	When compressor operates, applicable LED ON.
F-1- ^(b)	F-FAN High	When freezer FAN High operates, applicable LED ON.
F-1- ^(c)	F-FAN Low	When freezer FAN Low operates, applicable LED ON.
F-1- ^(d)	F-DEF Heater	When freezer defrost heater operates, LED ON.
R-10- ^(e)	C-FAN High	When compressor FAN High operates, applicable LED ON.
R-10- ^(f)	C-FAN Low	When compressor FAN Low operates, applicable LED ON.

TROUBLESHOOTING

4-1-4. Display / Exhibition mode setting function




① If **Power Freeze Key + Freezer Key** are pressed for 3 seconds, exhibition / display mode will be started.

- 1) If **Power Freeze Key + Freezer Key** are pressed simultaneously for 3 seconds during normal operation, exhibition / display mode will be started with buzzer sound ("Ding-dong").
- 2) If above Power Freeze Key + Freezer Key are pressed repeatedly, exhibition / display mode will be canceled.
- 3) If exhibition / display mode is selected, "OF-OF" blinks on the temperature setting display of the panel and it indicates the refrigerator has entered the exhibition / display mood.
- 4) If fresh food and freezer compartments sensors are higher than 149°F (65°C) during exhibition / display mode, exhibition / display mode will be canceled automatically and cooling operation will be returned. (There is no buzzer sound when the exhibition/display mode is canceled by the temperature.)
- 5) Operation contents of exhibition/display mode
 - All function like display, fan motor, etc operate normally, but only compressor does not operates.
 - Defrost is not operated.
 - Display function of initial actual temperature is finished.
 - Exhibition/Display mode will be operated though Power ON after Power OFF under the exhibition/Display mode condition.

4-1-5. Option setting function


- If Freezer Key + Power Cool Key are pressed simultaneously for 12 seconds during normal operation, fresh food and freezer compartments temperature display will be changed to option setting mode.

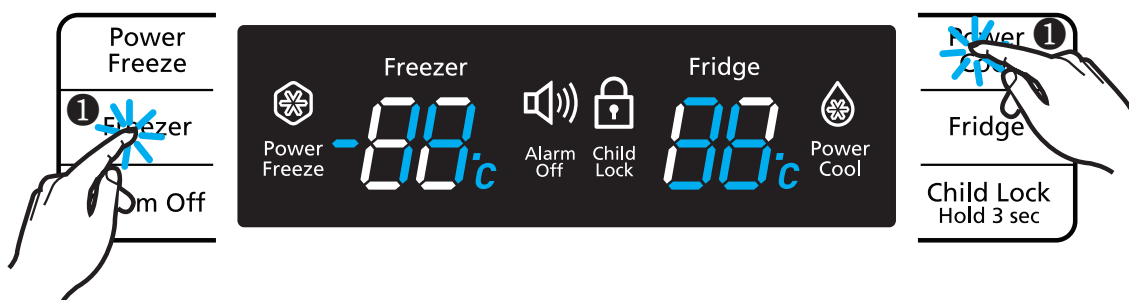

TROUBLESHOOTING

- ① If **Freezer Key + Power Cool Key** are pressed simultaneously for **12 seconds**, option setting mode will be started.


Key control method after changing to option mode.

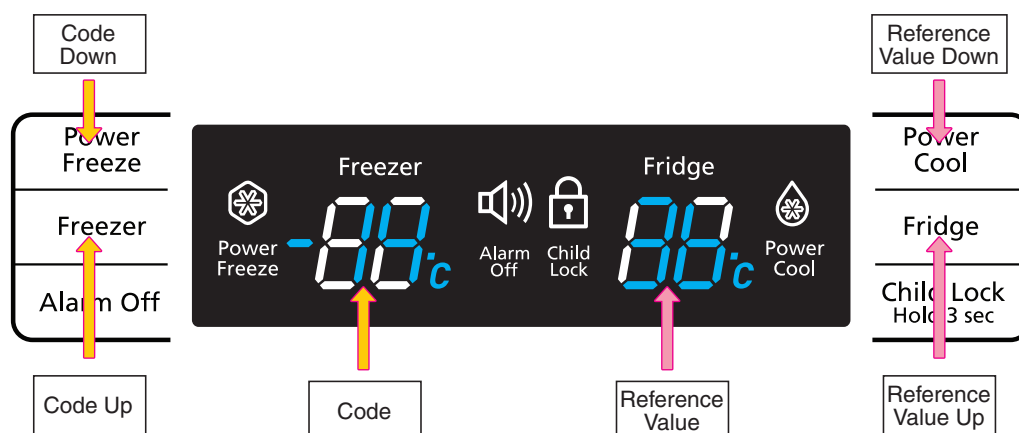

* Key control in option mode

Power Freeze Key	Code Down key
Freezer Key	Code Up key
Power Cool key	Reference Value down key
Fridge key	Reference Value Up key

- If the display changes to option setting mode, all displays will be off except freezer and fresh food compartments temperature display as below. (Fresh food and freezer compartments is explained only because all options are operated with the same method according to the option table.)

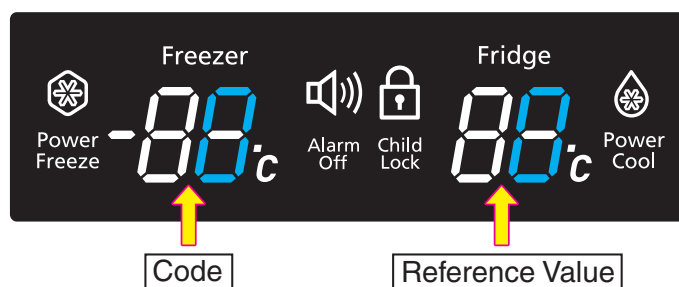

- For example, if you want to change freezer compartment standard temperature to -4°F (-2°C) by operating option, do as following. This function is for changing the standard temperature. In -2°F (-19°C) of current temperature of freezer compartment, if you make the temperature lower to 28.4°F (-2°C) by the option, the standard temperature would be controlled -6°F (-21°C). Therefore, if you changed the setting of temperature option to -2°F (-19°C) on the panel, the appliance will be operated with -6°F (-21°C). It means that standard temperature is controlled 28.4°F (-2°C) less than setting temperature in the display.




NOTE

Basically, option function has cleared data at shipping process. Therefore, all setting value are "0". But, check the quality information manual or specifications, because setting value could be changed particularly for the purpose of improving quality at mass producing process.

TROUBLESHOOTING

- 2) After changing to the option mode, fresh food compartment "0", freezer compartment "0" will be displayed. (Basically, fresh food compartment "0", freezer "0" would be set at shipping process, but setting value could be changed for the purpose of improving quality at mass producing process.)
 - If fresh food compartment "0" shows only, temperature reference value of freezer compartment will be set and current freezer compartment temperature code will be displayed on the freezer temperature display.
- 3) If freezer compartment "4" is set as below freezer compartment code after fresh food compartment "0" is set, standard temperature of freezer compartment will be lower than 28.4°F (-2.0°C). (Refer to the picture "Changing the freezer compartment temperature")

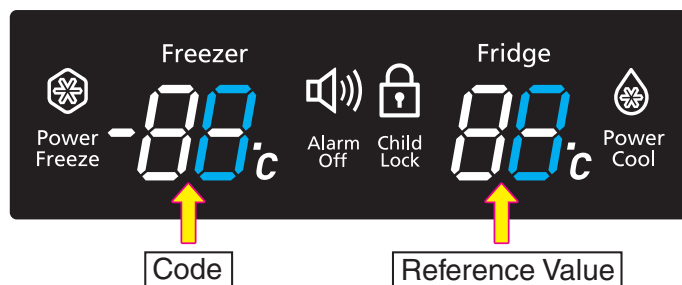

: If you wait for 20 seconds after completing the setting, MICOM will save the setting value to the EEPROM and normal display will be returned and the option setting mode will be canceled.

- 4) Option changing method as above is the same as all LMF model.
- 5) Option function is set in the EEPROM at shipping process in the factory. You would better not to change the option of your own. Completing the setting is that option function return to normal display after 20 seconds. Do not turn off the appliance before returning to the normal display mode.



NOTE

Option setting function exists in the other items. We will skip the explanation of the other functions by the option because it is associated with refrigerator control function and is not needed at SERVICE.

(Please do not set the other options except above SERVICE Manual.)


TROUBLESHOOTING

4-1-6. Option TABLE

1) Temperature changing table of freezer compartment

Setting ITEM	Freezer Temp Shift
Reference Value	Fridge Room 7-SEG
	0

Setting value	
Freezer Compartment Code	Temp. compensation
0	32°F(0.0°C)
1	31.1°F(-0.5°C)
2	30.2°F(-1.0°C)
3	29.3°F(-1.5°C)
4	28.4°F(-2.0°C)
5	27.5°F(-2.5°C)
6	26.6°F(-3.0°C)
7	25.7°F(-3.5°C)
8	32.9°F(+0.5°C)
9	33.8°F(+1.0°C)
10	34.7°F(+1.5°C)
11	35.6°F(+2.0°C)
12	36.5°F(+2.5°C)
13	37.4°F(+3.0°C)
14	38.3°F(+3.5°C)
15	39.2°F(+4.0°C)

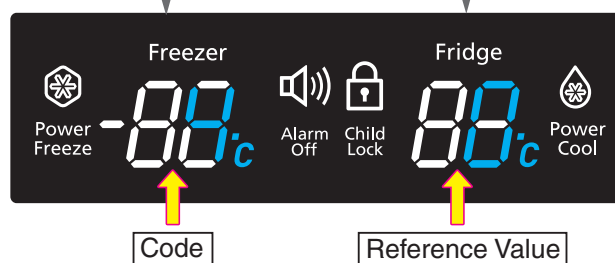


ex) If you want to change the freezer standard temperature to -28.4°F(-2°C)

2) Temperature changing table of fresh food compartment

Setting value	Fridge Temp Shift
Reference Value	Fridge Room 7-SEG
	1

Setting value	
Freezer compartment Code	Temp. compensation
0	32°F(0.0°C)
1	31.1°F(-0.5°C)
2	30.2°F(-1.0°C)
3	29.3°F(-1.5°C)
4	28.4°F(-2.0°C)
5	27.5°F(-2.5°C)
6	26.6°F(-3.0°C)
7	25.7°F(-3.5°C)
8	32.9°F(+0.5°C)
9	33.8°F(+1.0°C)
10	34.7°F(+1.5°C)
11	35.6°F(+2.0°C)
12	36.5°F(+2.5°C)
13	37.4°F(+3.0°C)
14	38.3°F(+3.5°C)
15	39.2°F(+4.0°C)

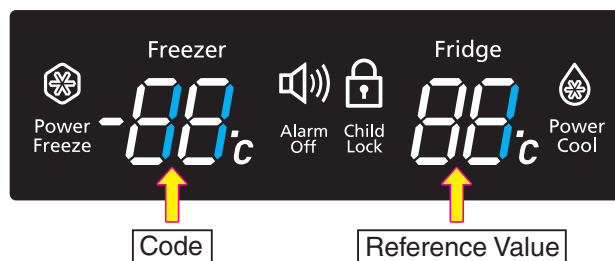

ex) If you want to change the freezer compartment standard temperature to 35.6°F(2°C).

TROUBLESHOOTING

4-2) Diagnostic method according to the trouble symptom(Flow Chart)

DATA1.Temperature table

Resistance value and MICOM port voltage of sensor according to the temperature



SENSOR CHIP : based on PX41C

°C	°F	Voltage	Resistance	°C	°F	Voltage	Resistance	°C	°F	Voltage	Resistance
-50	-58	4.694	153319	-5	23	3.107	16419	40	104	1.153	2997
-49	-56.2	4.677	144794	-4	24.8	3.057	15731	41	105.8	1.124	2899
-48	-54.4	4.659	136798	-3	26.6	3.006	15076	42	107.6	1.095	2805
-47	-52.6	4.641	129294	-2	28.4	2.955	14452	43	109.4	1.068	2714
-46	-50.8	4.622	122248	-1	30.2	2.904	13857	44	111.2	1.040	2627
-45	-49	4.602	115631	0	32	2.853	13290	45	113	1.014	2543
-44	-47.2	4.581	109413	1	33.8	2.802	12749	46	114.8	0.988	2462
-43	-45.4	4.560	103569	2	35.6	2.751	12233	47	116.6	0.963	2384
-42	-43.6	4.537	98073	3	37.4	2.700	11741	48	118.4	0.938	2309
-41	-41.8	4.514	92903	4	39.2	2.649	11271	49	120.2	0.914	2237
-40	-40	4.490	88037	5	41	2.599	10823	50	122	0.891	2167
-39	-38.2	4.465	83456	6	42.8	2.548	10395	51	123.8	0.868	2100
-38	-36.4	4.439	79142	7	44.6	2.498	9986	52	125.6	0.846	2036
-37	-34.6	4.412	75077	8	46.4	2.449	9596	53	127.4	0.824	1973
-36	-32.8	4.385	71246	9	48.2	2.399	9223	54	129.2	0.803	1913
-35	-31	4.356	67634	10	50	2.350	8867	55	131	0.783	1855
-34	-29.2	4.326	64227	11	51.8	2.301	8526	56	132.8	0.762	1799
-33	-27.4	4.296	61012	12	53.6	2.253	8200	57	134.6	0.743	1745
-32	-25.6	4.264	57977	13	55.4	2.205	7888	58	136.4	0.724	1693
-31	-23.8	4.232	55112	14	57.2	2.158	7590	59	138.2	0.706	1642
-30	-22	4.199	52406	15	59	2.111	7305	60	140	0.688	1594
-29	-20.2	4.165	49848	16	60.8	2.064	7032	61	141.8	0.670	1547
-28	-18.4	4.129	47431	17	62.6	2.019	6771	62	143.6	0.653	1502
-27	-16.6	4.093	45146	18	64.4	1.974	6521	63	145.4	0.636	1458
-26	-14.8	4.056	42984	19	66.2	1.929	6281	64	147.2	0.620	1416
-25	-13	4.018	40938	20	68	1.885	6052	65	149	0.604	1375
-24	-11.2	3.980	39002	21	69.8	1.842	5832	66	150.8	0.589	1335
-23	-9.4	3.940	37169	22	71.6	1.799	5621	67	152.6	0.574	1297
-22	-7.6	3.899	35433	23	73.4	1.757	5419	68	154.4	0.560	1260
-21	-5.8	3.858	33788	24	75.2	1.716	5225	69	156.2	0.546	1225
-20	-4	3.816	32230	25	77	1.675	5039	70	158	0.532	1190
-19	-2.2	3.773	30752	26	78.8	1.636	4861	71	159.8	0.519	1157
-18	-0.4	3.729	29350	27	80.6	1.596	4690	72	161.6	0.506	1125
-17	1.4	3.685	28021	28	82.4	1.558	4526	73	163.4	0.493	1093
-16	3.2	3.640	26760	29	84.2	1.520	4369	74	165.2	0.481	1063
-15	5	3.594	25562	30	86	1.483	4218	75	167	0.469	1034
-14	6.8	3.548	24425	31	87.8	1.447	4072	76	168.8	0.457	1006
-13	8.6	3.501	23345	32	89.6	1.412	3933	77	170.6	0.446	978
-12	10.4	3.453	22320	33	91.4	1.377	3799	78	172.4	0.435	952
-11	12.2	3.405	21345	34	93.2	1.343	3670	79	174.2	0.424	926
-10	14	3.356	20418	35	95	1.309	3547	80	176	0.414	902
-9	15.8	3.307	19537	36	96.8	1.277	3428	81	177.8	0.404	877
-8	17.6	3.258	18698	37	98.6	1.253	3344	82	179.6	0.394	854
-7	19.4	3.208	17901	38	100.4	1.213	3204	83	181.4	0.384	832
-6	21.2	3.158	17142	39	102.2	1.183	3098	84	183.2	0.375	810

TROUBLESHOOTING

2) If R Sensor has trouble

ERROR Code

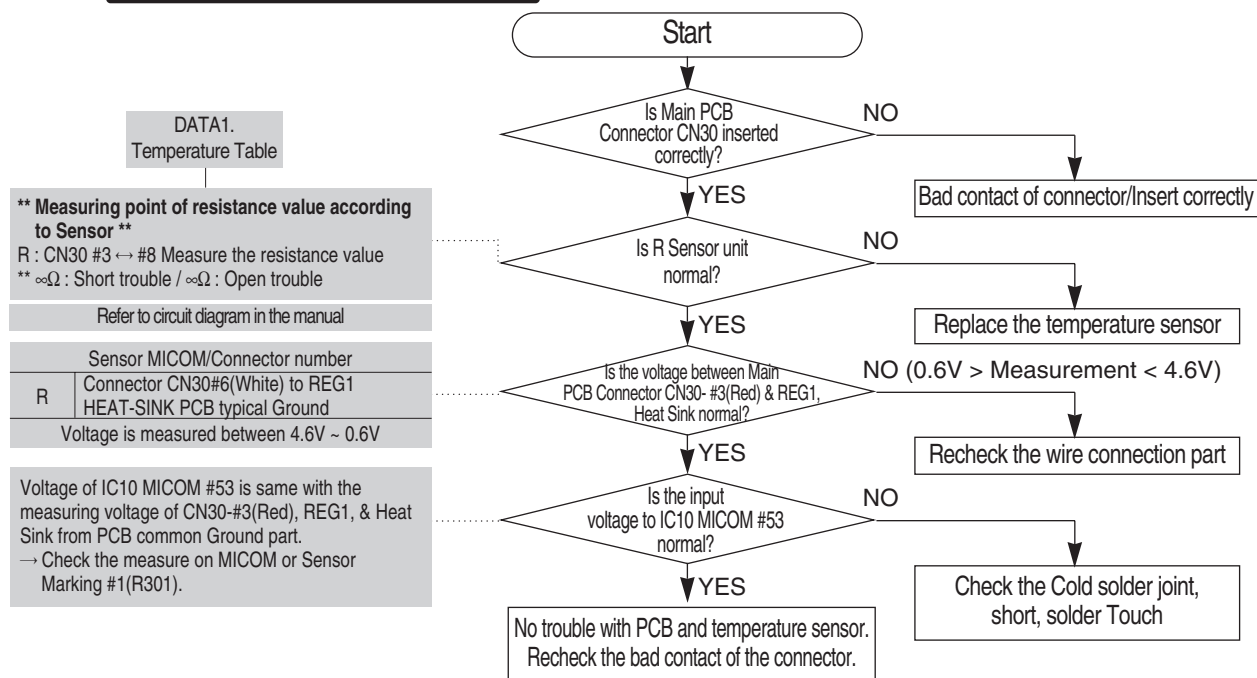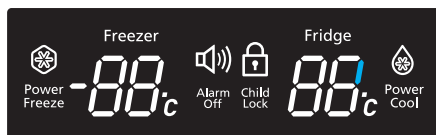


- ☞ Checking method of R Sensor resistance CN30-#3(White) ↔ #8(Grey)
- Compare with the temperature table after measuring



- ☞ Checking method of R Sensor voltage.
- Measure the voltage of Sensor Check Point #1(IC10 MICOM #53) on PCB or CN30-#3(Red) ↔ REG1, Heat Sink
 - Compare with the temperature table after measuring. Below is measuring voltage of CN30-#3(Red) ↔ REG1, Heat Sink.





Common PCB Ground of REG1, Heat Sink

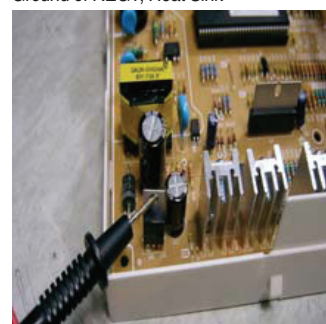

TROUBLESHOOTING

3) If R DEF Sensor has trouble

ERROR Code

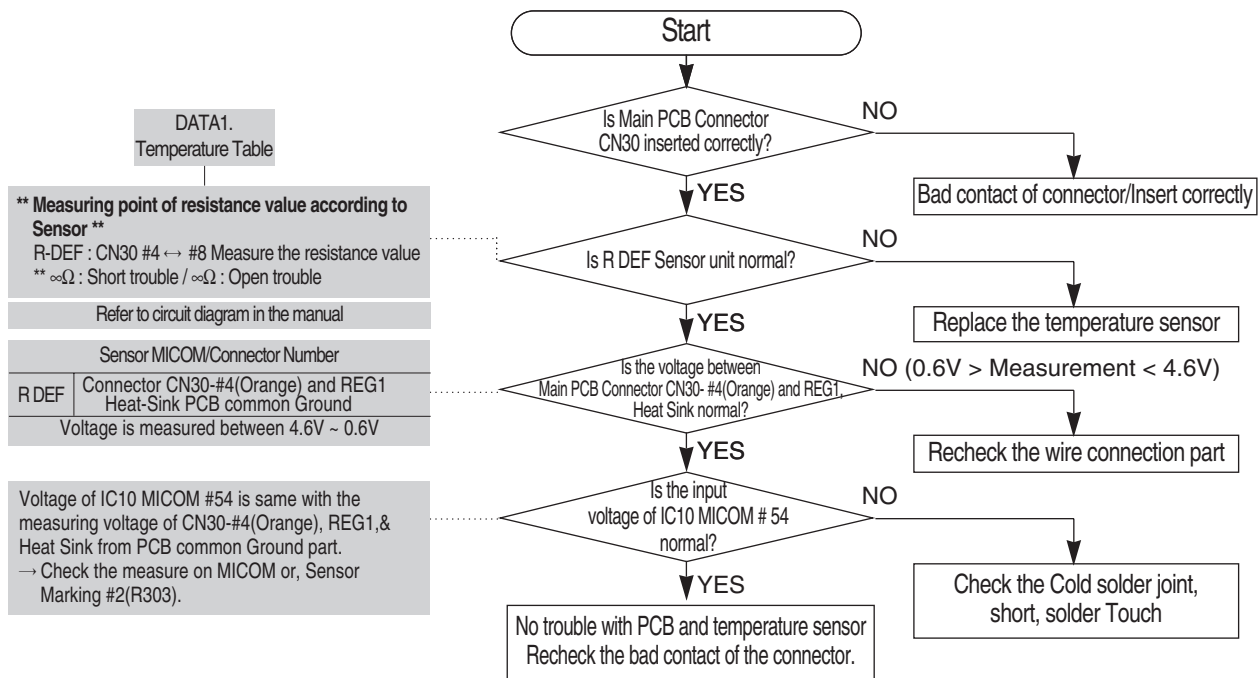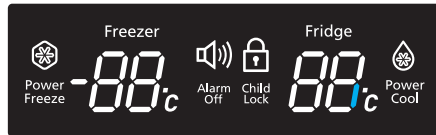


- ☞ Checking method of R DEF Sensor resistance
CN30-#4(Orange) ↔ #8(Grey)
- Compare with temperature table after measuring.



- ☞ Check method of R DEF Sensor voltage
- Measure the voltage of Sensor Check Point #2(IC10 MICOM #54) on PCB or CN30-#4(Orange) ↔ REG1, Heat Sink.
- Compare with temperature table after measuring.
Below is the measuring voltage of CN30-#4(Orange) ↔ REG1, Heat Sink





Common PCB
Ground of REG1 Heat Sink

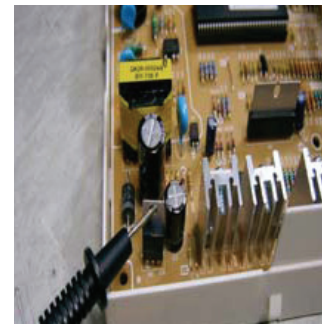

TROUBLESHOOTING

4) If Ambient Sensor has trouble

ERROR Code

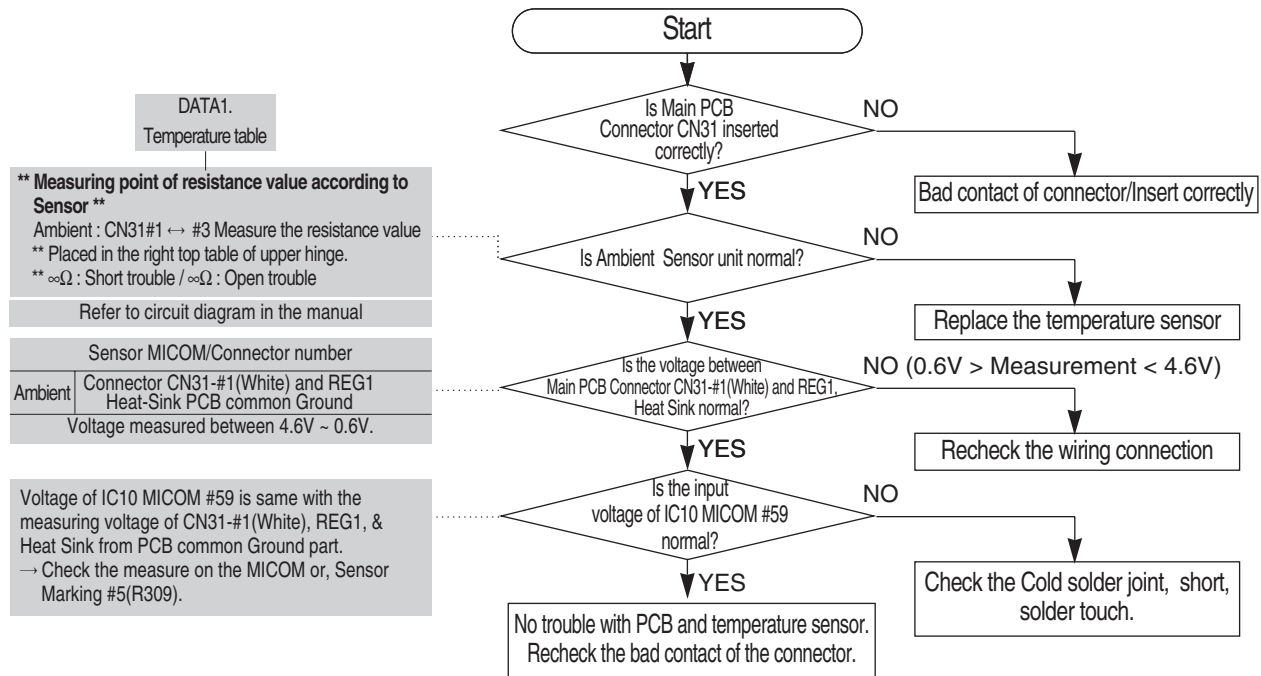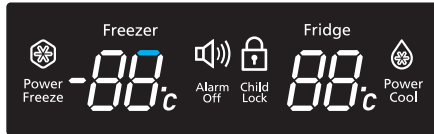


- ☞ Checking method of Ambient Sensor resistance
 CN31-#1(White) ↔ #3(White)
 - Compare with the temperature table after measuring.



- ☞ Checking method of Ambient Sensor voltage
 - Measure the voltage of Sensor Check Point #5(IC10 MICOM #59) on PCB or CN31-#1(White) ↔ REG1, Heat Sink.
 - Compare with the temperature table after measuring.
 Below is the measuring voltage of CN31-#1(White) ↔ REG1, Heat Sink





Common PCB
 Ground of REG1 Heater Sink

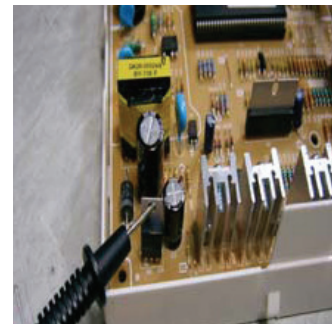


TROUBLESHOOTING

5) If F Sensor has trouble

ERROR Code

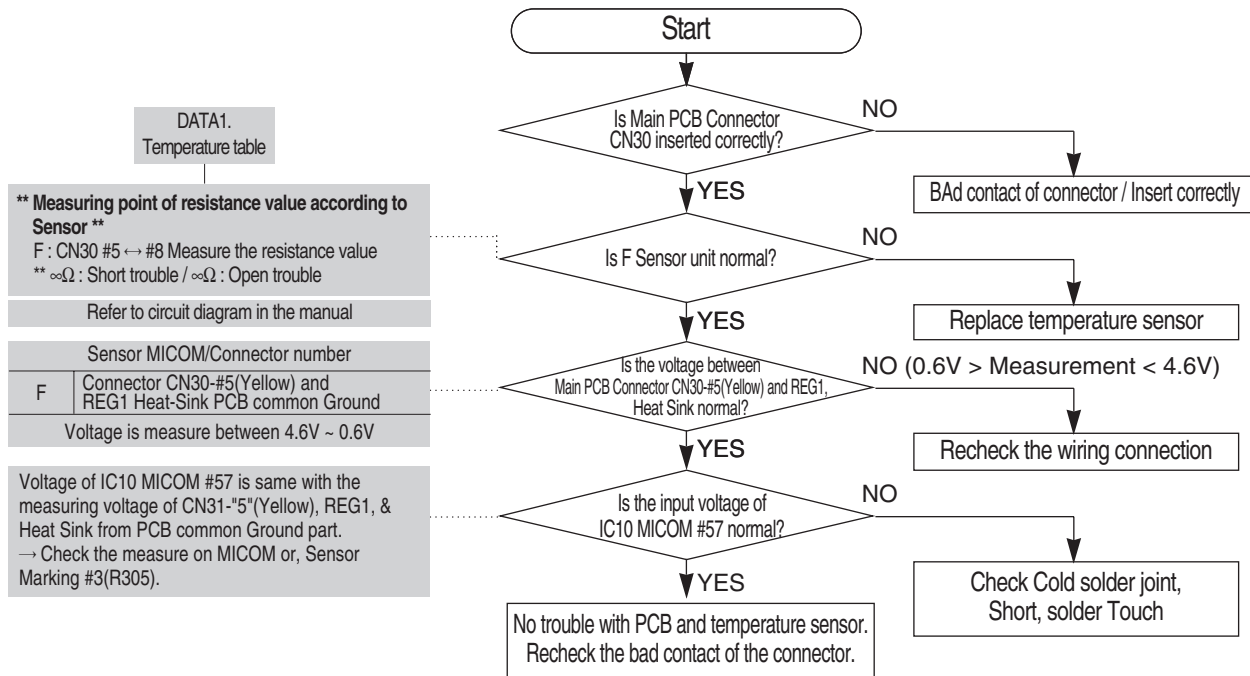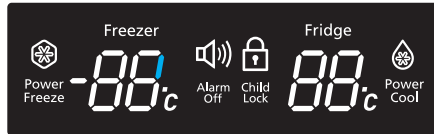


- ☞ Checking method of F Sensor resistance
 CN30-#5(Yellow) ↔ #8(Gray)
 -. Compare with the temperature table after measuring.

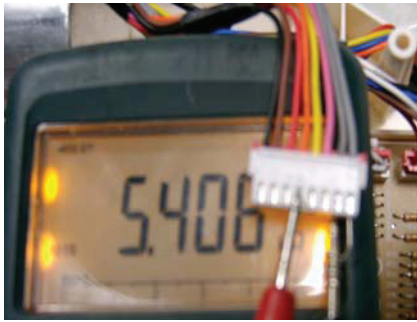

- ☞ Checking method of F Sensor voltage
 -. Measure the voltage of Sensor Check Point #3(IC10 MICOM #57) on PCB or CN30-#5(Yellow) ↔ REG1, Heat Sink.
 -. Compare with the temperature table after measuring.
 Below is the measuring voltage of CN30-5"(Yellow) ↔ REG1, Heat Sink.





common PCB
 Ground of REG1 Heater Sink

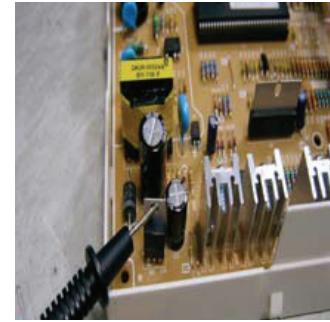

TROUBLESHOOTING

6) If F DEF Sensor has trouble


ERROR Code

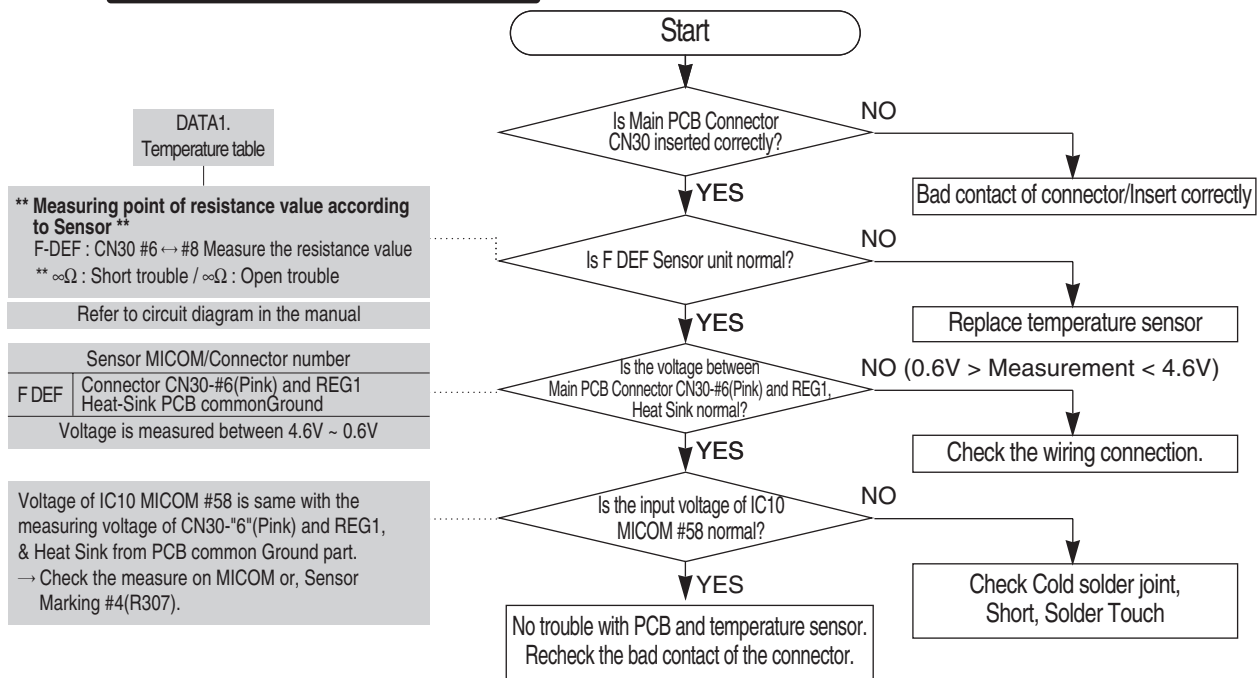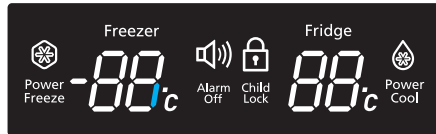

☞ Checking method of F DEF Sensor resistance
CN30-#6(Pink) ↔ #8(Gray)
-. Compare with the temperature table after measuring.



☞ Checking method of F DEF Sensor voltage
-. Measure the voltage of Sensor Check Point #4(IC10 MICOM #58) on PCB or CN30-#6(Pink) ↔ REG1, Heat Sink.
-. Compare with the temperature table after measuring.
Below is the measuring voltage of CN30-#6(Pink) ↔ REG1, Heat Sink

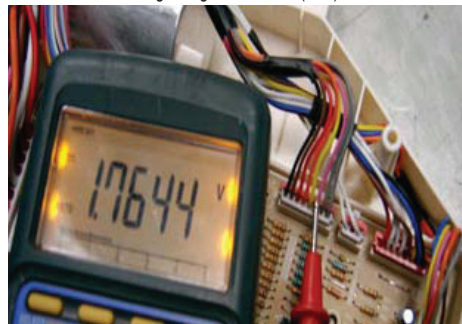




Common PCB
Ground of REG1 Heater Sink



TROUBLESHOOTING

4-2-1. If FAN does not operate (F, R, C - FAN)


- The refrigerator of this model has BLDC FAN motor. BLDC motor is driven by DC 7~12V.
- On the normal condition of COMP ON, it operates together with F-FAN motor.
If door is opened and closed once at a high ambient temperature, it will be operated after 1 minute delay.
Therefore, you are advised not to taken it for an error.
- If there is a trouble, you should select the self-diagnostic function to check the trouble before power off.

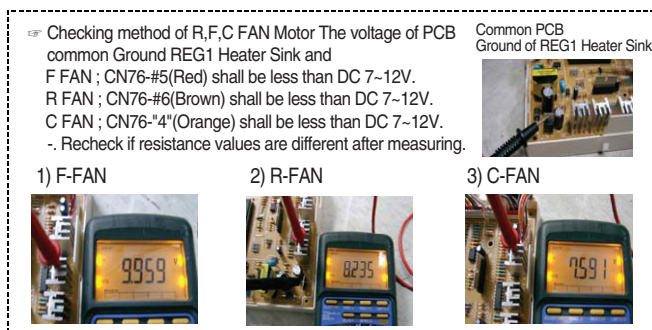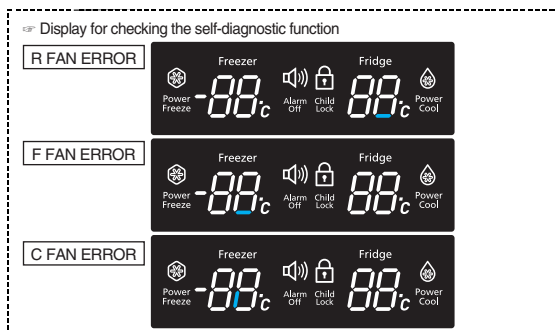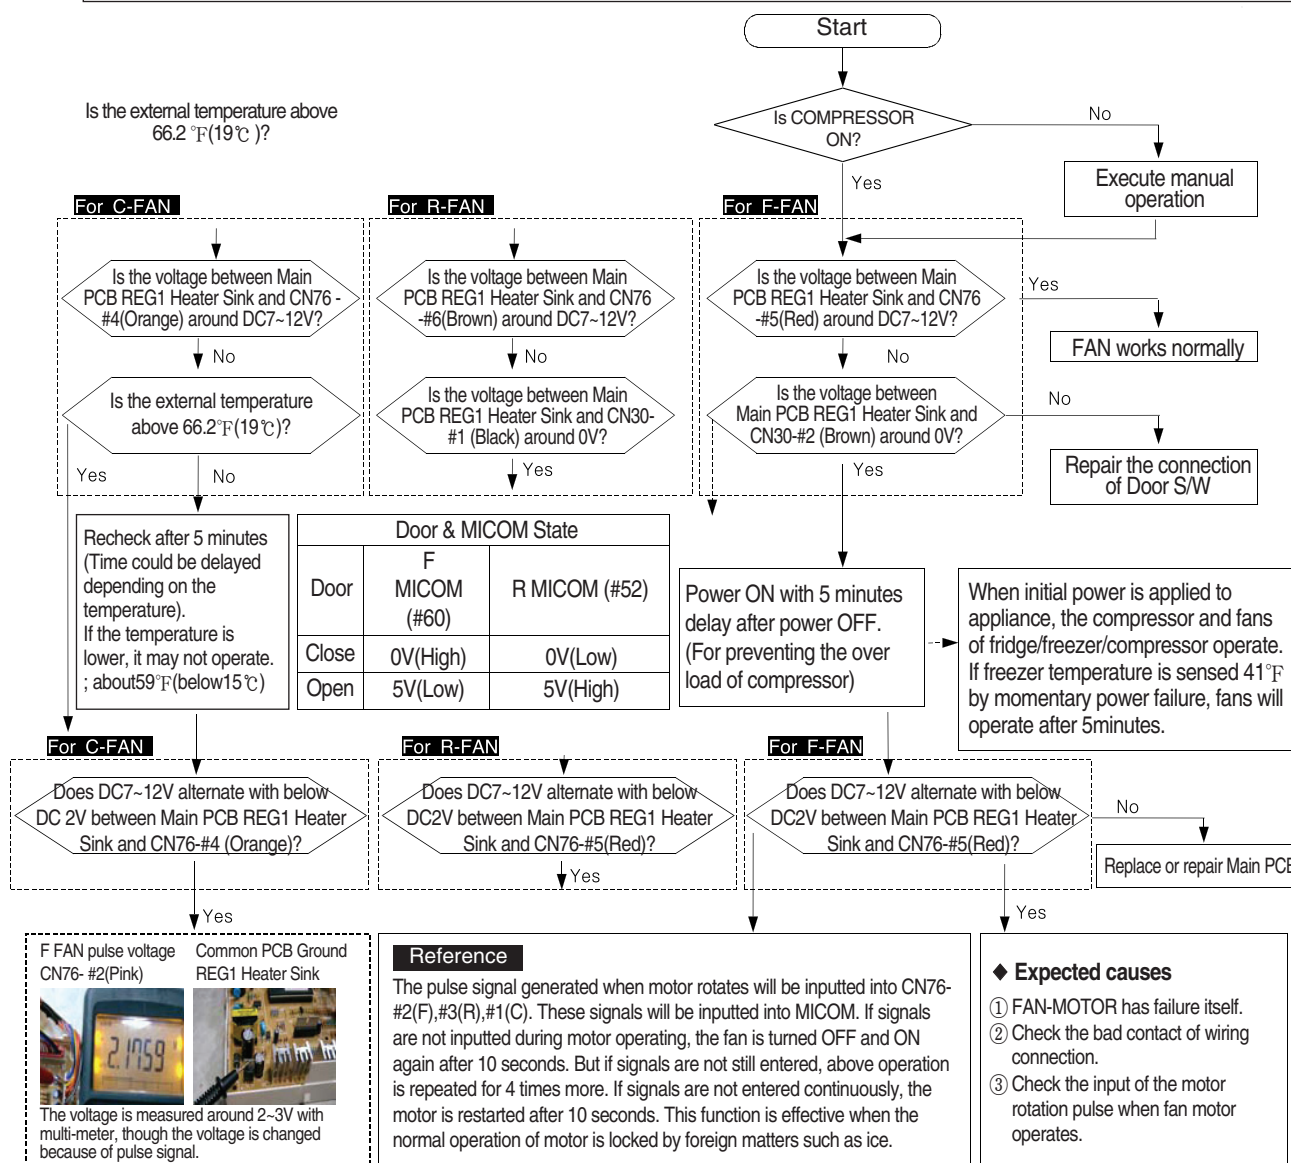

TROUBLESHOOTING

4-2-2. If defrost does not operate (F, R DEF Heater)

- If defrost has trouble, select the self-diagnostic function to detect the error of defrost heater before Power off. (Check the function with referring to the self-diagnostic function)

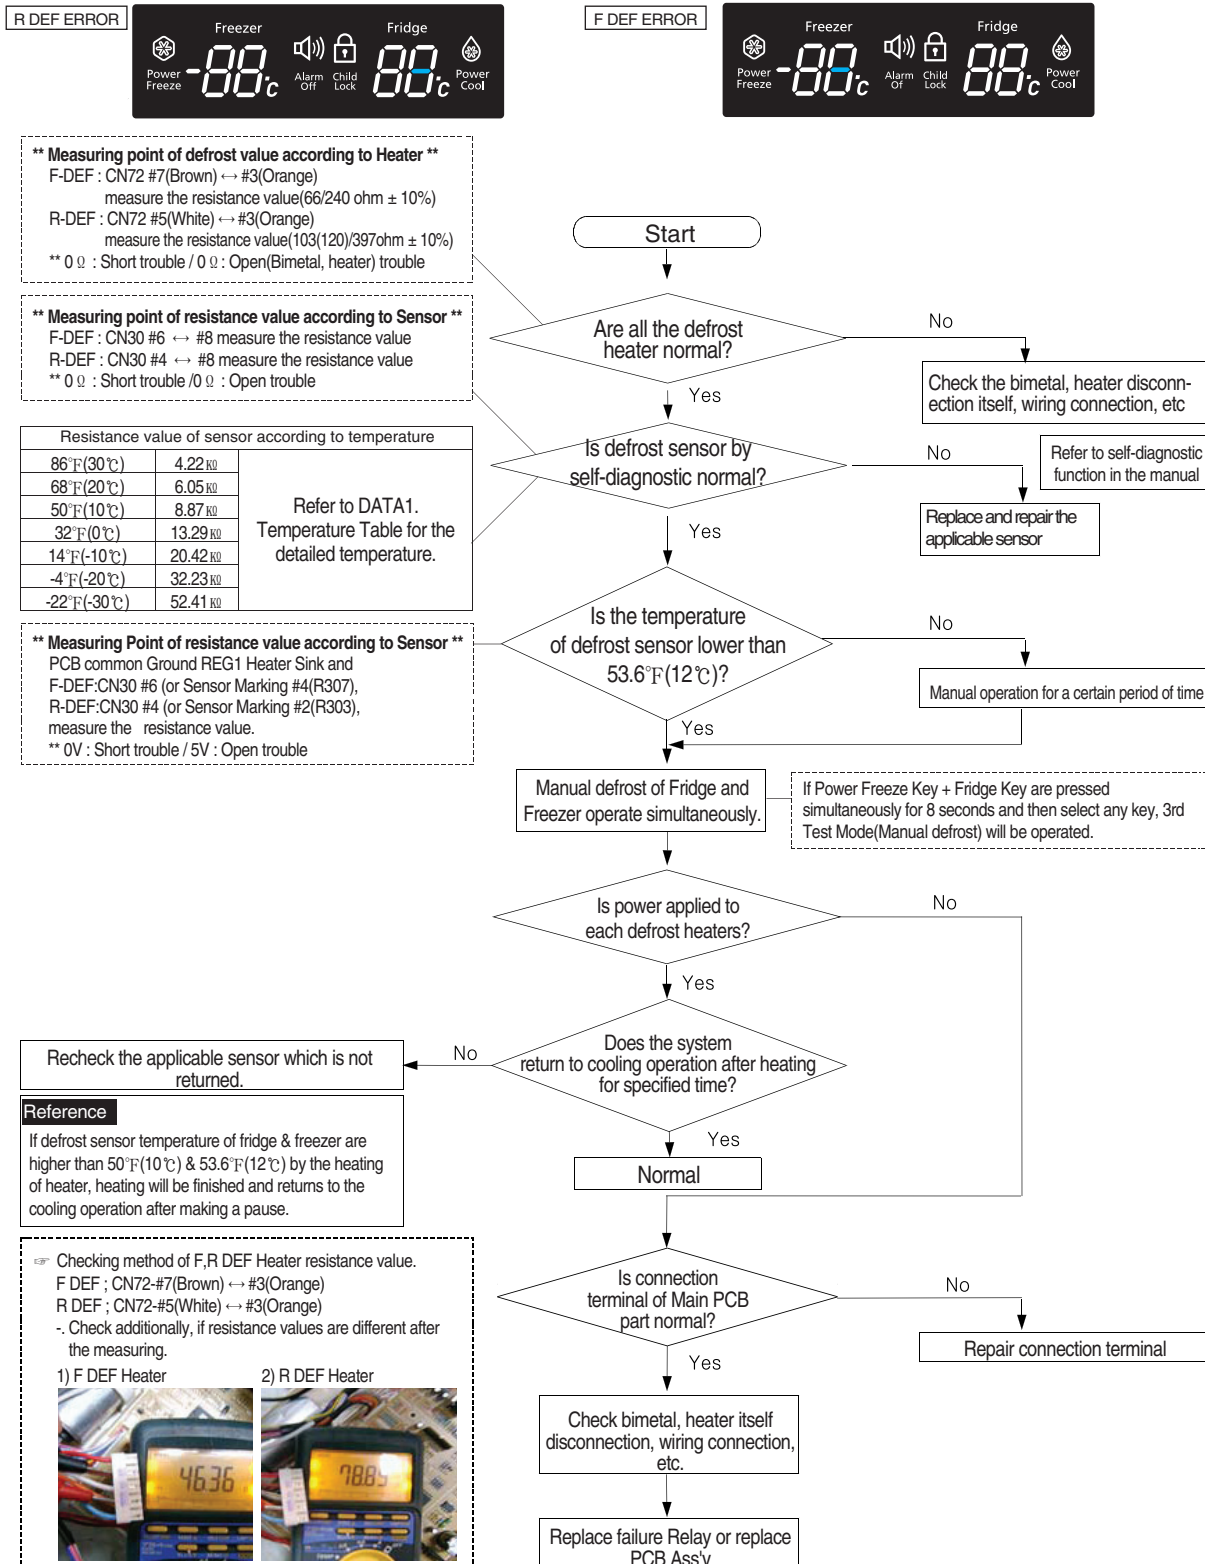

TROUBLESHOOTING

4-2-3. If Power is not supplied

Caution

At the power of main PCB, AC input power and a high voltage over DC170V(325V) are occurred. Please take care of yourself on repair and measurement.

Common PCB Ground
REG1 Heater Sink



Input Voltage
115V $\pm$ 15%

Check in SMPS part

☞ Checking method of voltage SMPS input ;
VAR1 both terminals, or CN10 both terminal
AC power.



☞ Checking method of DC secondary output voltage
REG1 input ; Regulator 7805 input → Same
with C111 both terminals.
DC 12.0V $\pm$ 0.8V




☞ Checking method of DC secondary output voltage
REG1 input ; Regulator 7805 input → Same
with C113 both terminals.
DC 5V $\pm$ 0.5V



- Check Main PCB connection
- Check the connections between upper hinge Cabi-Door
- Check Door Panel PCB connection

- Refer to function and 'reference' parts in the manual when checking Main PCB

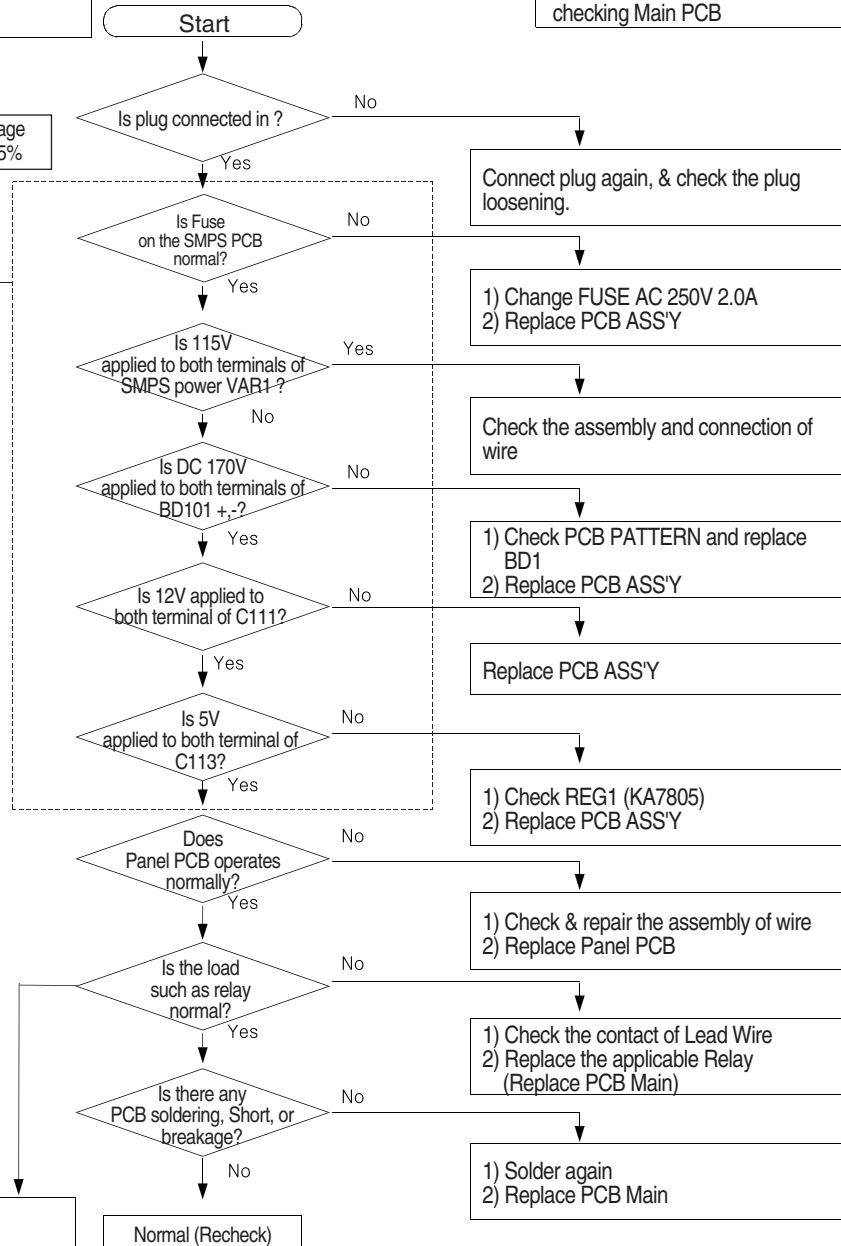


TROUBLESHOOTING

4-2-4. If compressor does not operate


Preliminary Inspection

"Check the compressor with selecting the manual operation"

1. Compressor does not work, unless 5mins pass after satisfying the temperature.
2. Compressor does not work during defrosting.
3. Compressor does not work because it sensing low temperature, unless the fridge & freeze sensor is connected.

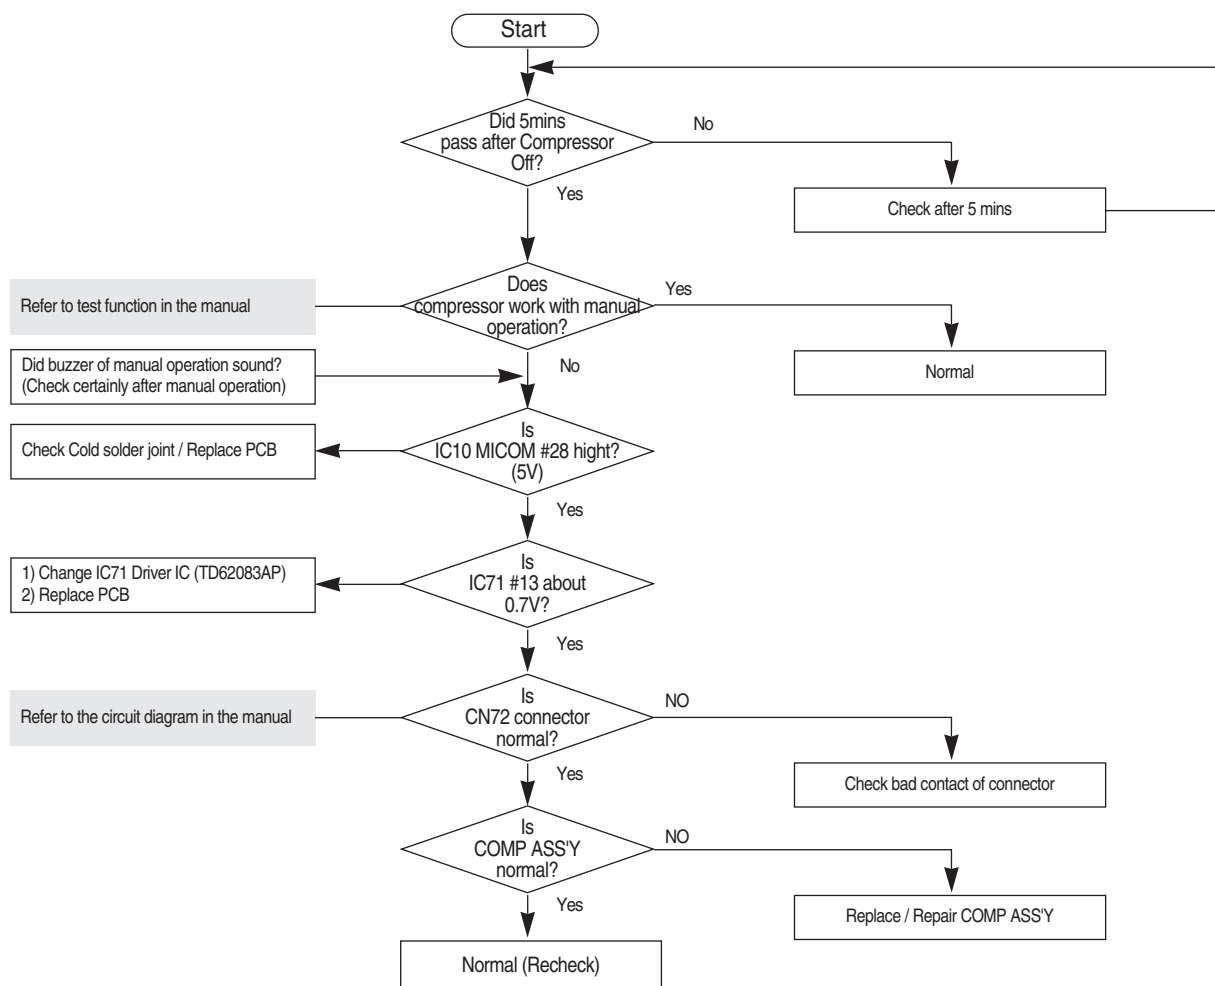


Checking method of voltage
PCB common Ground REG1 Heater Sink and
1) IC10 MICOM #28 ; Voltage is high
(5V $\pm$ 0.5V) when compressor is working.

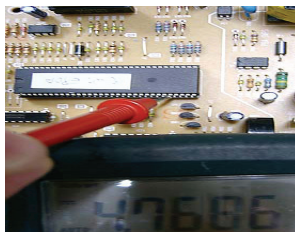

Checking method of voltage
PCB common Ground REG1 Heater Sink and
1) IC71 #13 ; Voltage is Low (0.7V) when
compressor is working.



Common PCB Ground
REG1 Heater Sink

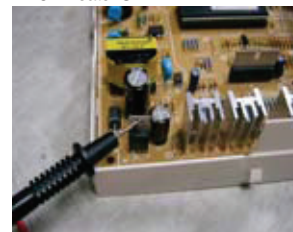


TROUBLESHOOTING

4-2-5. If alarm sounds continuously without stop (Related with buzzer sound)


Preliminary Inspection

1. The alarm of freezer / fridge will sound(Ding-dong) after 2minutes from initial door open, and it keeps sounding(ding-dong) at 1 minutes intervals when opening afterward.
2. The alarm sounds because MICOM sense as door-open when door is not pressed completely. So refrigerator inner lamp will be OFF after 10minutes from sensing door-open. In this case, the inner lamp will not ON though the door is opened actually.

① If 'ding-dong' sounds continuously.

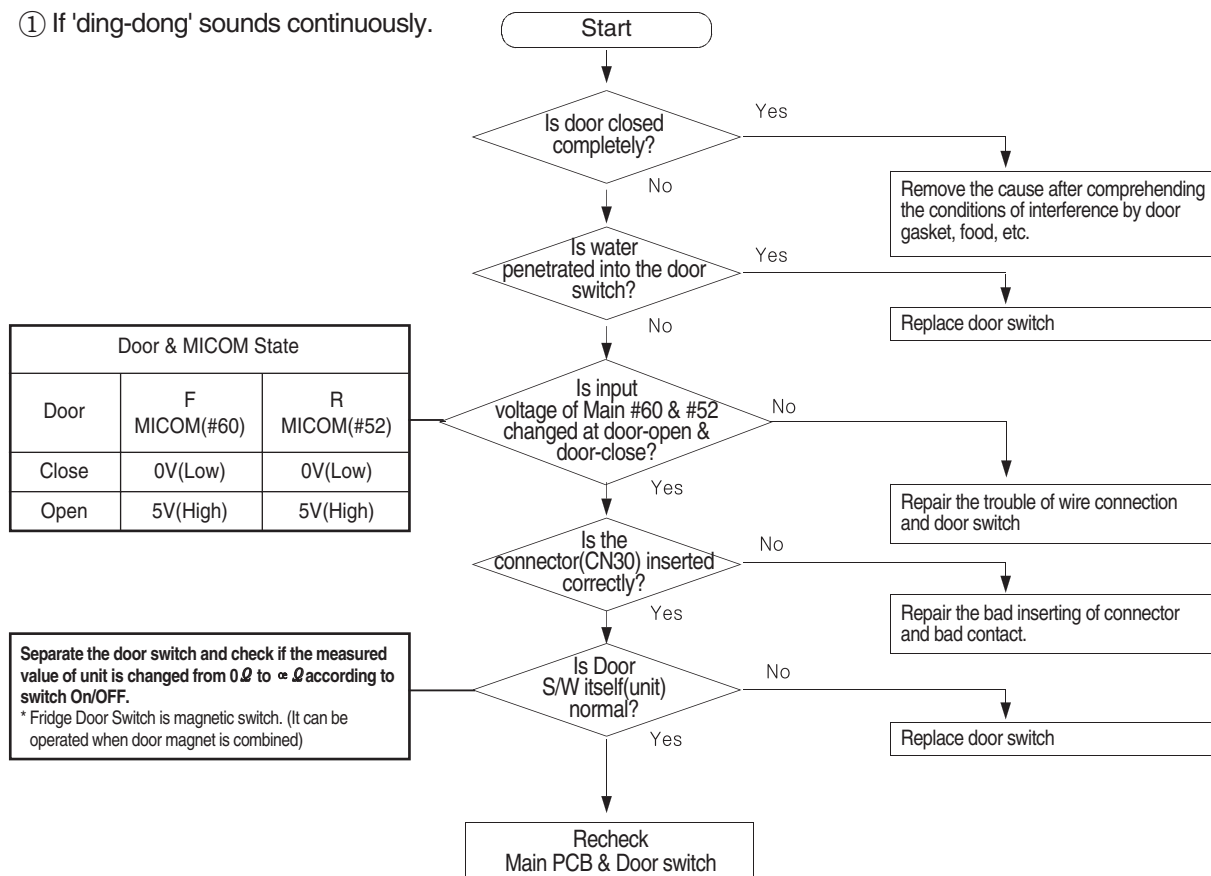

② If 'beep-beep' sounds continuously.

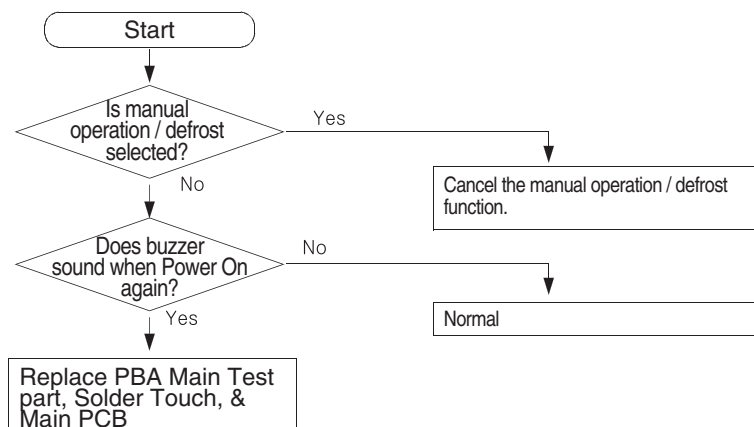


TROUBLESHOOTING

③ If buzzer does not sound

If buzzer does not sound when button is pressed, manual operation is started, or door is opened, separate Main PCB and then check the breakage of buzzer, bad soldering, etc.


(It is recommended to replace Main PCB when the failure of parts is occurred after checking.)

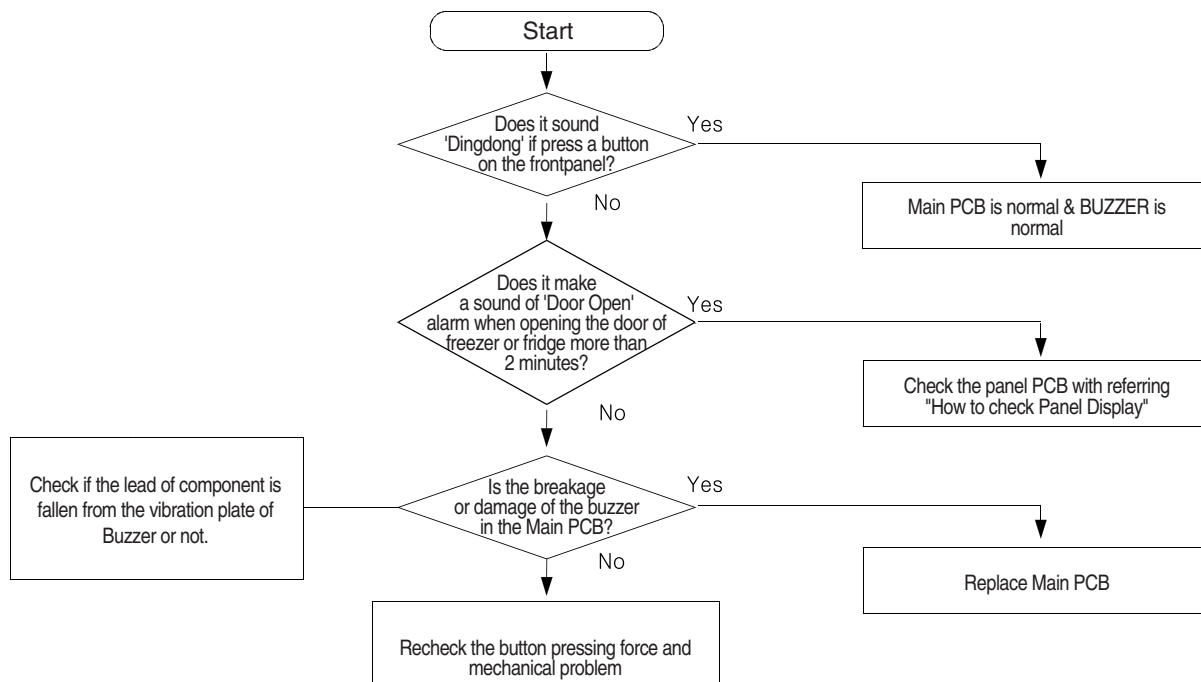

TROUBLESHOOTING


4-2-6. If Panel PCB does not work normally

① When lightning of Panel PCB is disabled

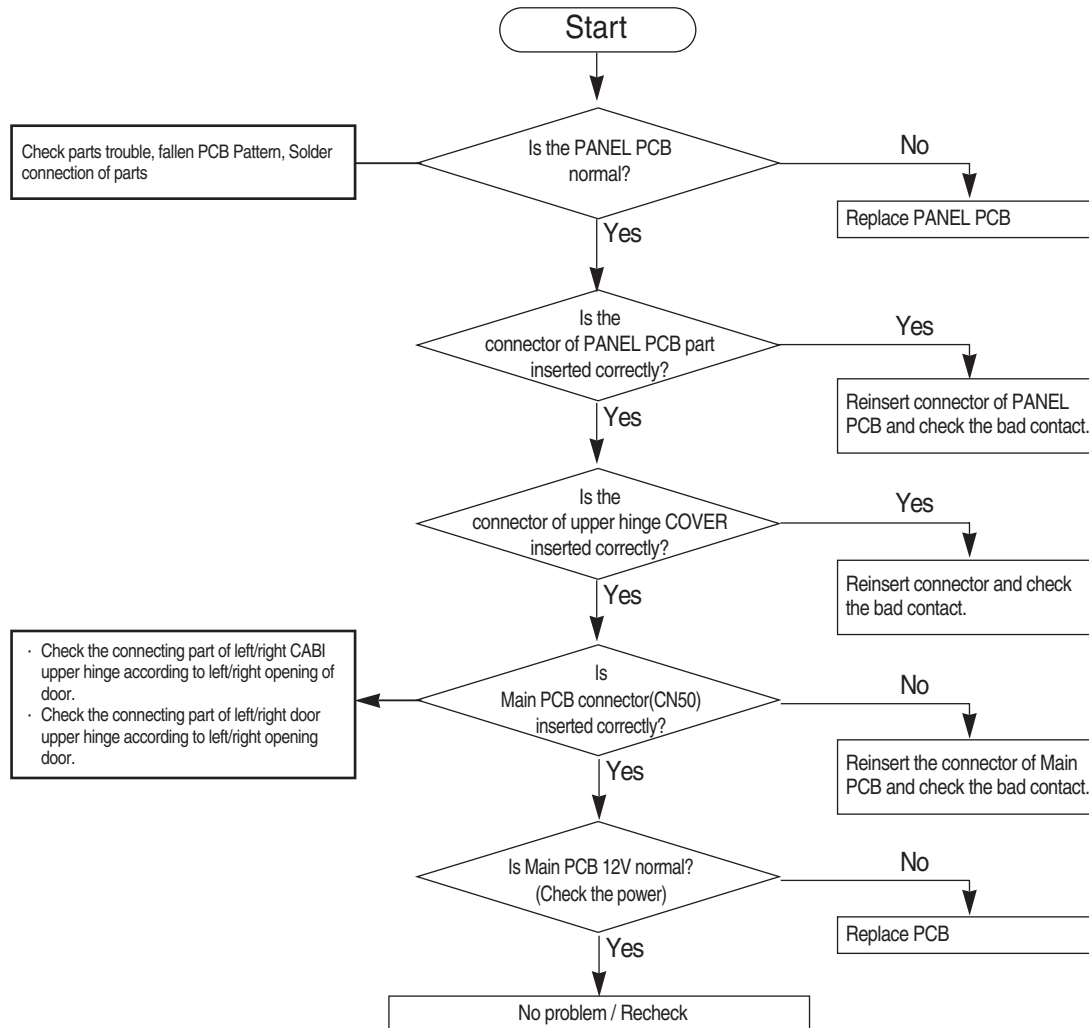

- ① Door Part - Check the connecting wire of upper hinge Panel - Check the disconnection & short between wires.
 ② Freezer upper CABl - Check the wires between Main PCB - Check the disconnection & short between wires.

② If Panel PCB Key is not selected

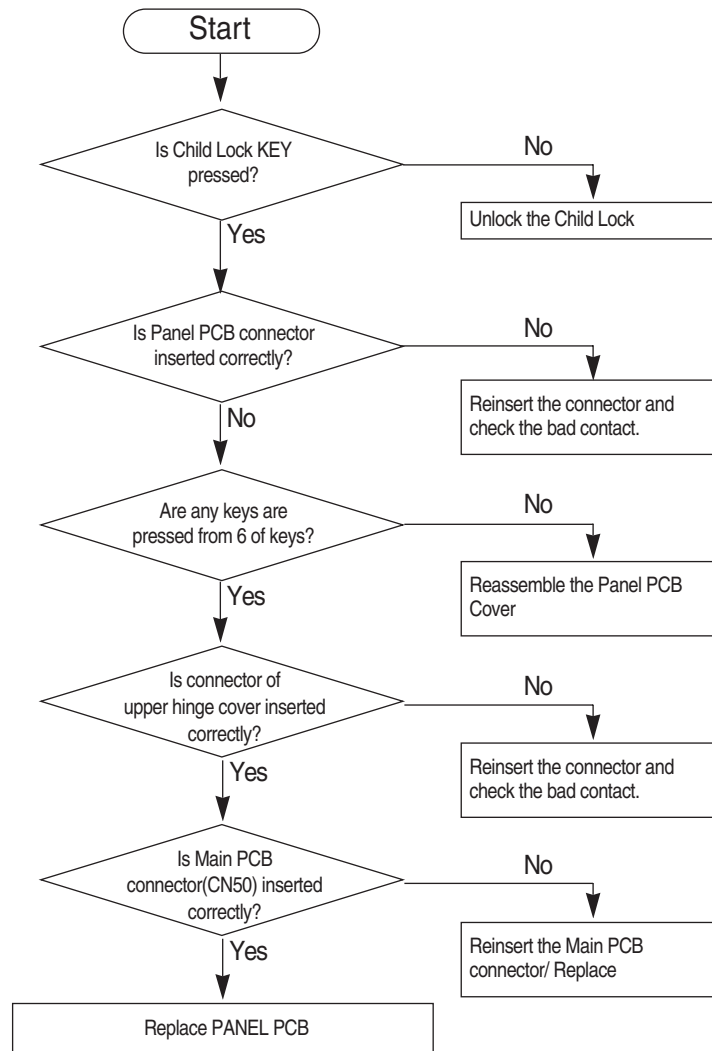


TROUBLESHOOTING

4-2-7. If refrigerator Room Lamp does not light up (F,R - Same condition)

1. When you replace the lamp of freezer/fridge, please power off/unplug AC Cord to avoid an electric shock.
2. Please keep in mind you could get burnt by the excessive heating of an incandescent light bulb.
3. Bimetal is installed in the refrigerator Lamp. Check that if Lamp may be OFF by bimetal. (It may be deleted per model.)

① When lightning of Panel PCB is disabled

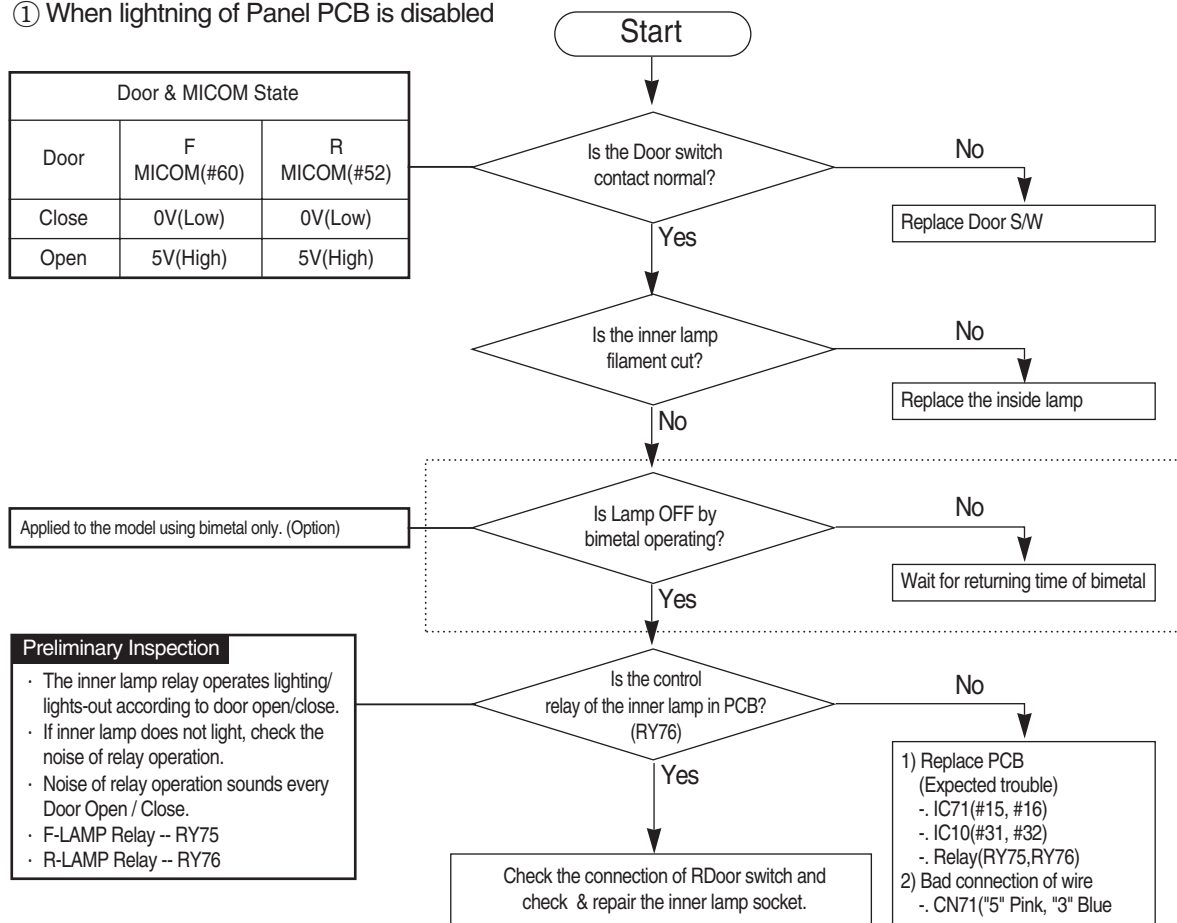

Preliminary Inspection

If the door is opened, the contact of door switch will be opened and MICOM will get applied 5V and finally it senses the door open. If it sense 5V for more 2 minutes afterward, Door-open alarm will sound "Ding-Dong" for 10 seconds in 1 minute cycle. Therefore, if the door switch has failure, the refrigerator can make a "Ding-Dong" sound per 1minute cycle. Please refer this for its service.

☞ When measure the lamp resistance to the wire, → Resistance can be changed by Lamp input voltage.
(Below is the actual measurement and the valued can be changed by function.)



☞ Fridge Lamp(Optional)
CN72-#9(Red) ↔ CN71#3(Blue)
; 270hm ± 10%
Lamp ; 40W (Basis on 120V)



☞ Freeze Lamp
CN72-#9(Red) ↔ CN71#5(Pink)
; 250hm ± 10%
Lamp ; 40W(Basis on120V)

☞ Checking method of Door Switch voltage

- PCB common Ground REG1 Heater Sink and CN30-"2"(Brown) : measure the voltage (R Door Switch)
- CN30-"1"(Black) : measure the voltage (F Door Switch)
- => See the R DOOR Switch at the following picture



CLOSE Common PCB Ground
REG1 Heater Sink




OPEN



5 . EXPLODED VIEW& PARTS LIST

5-1) Freezer

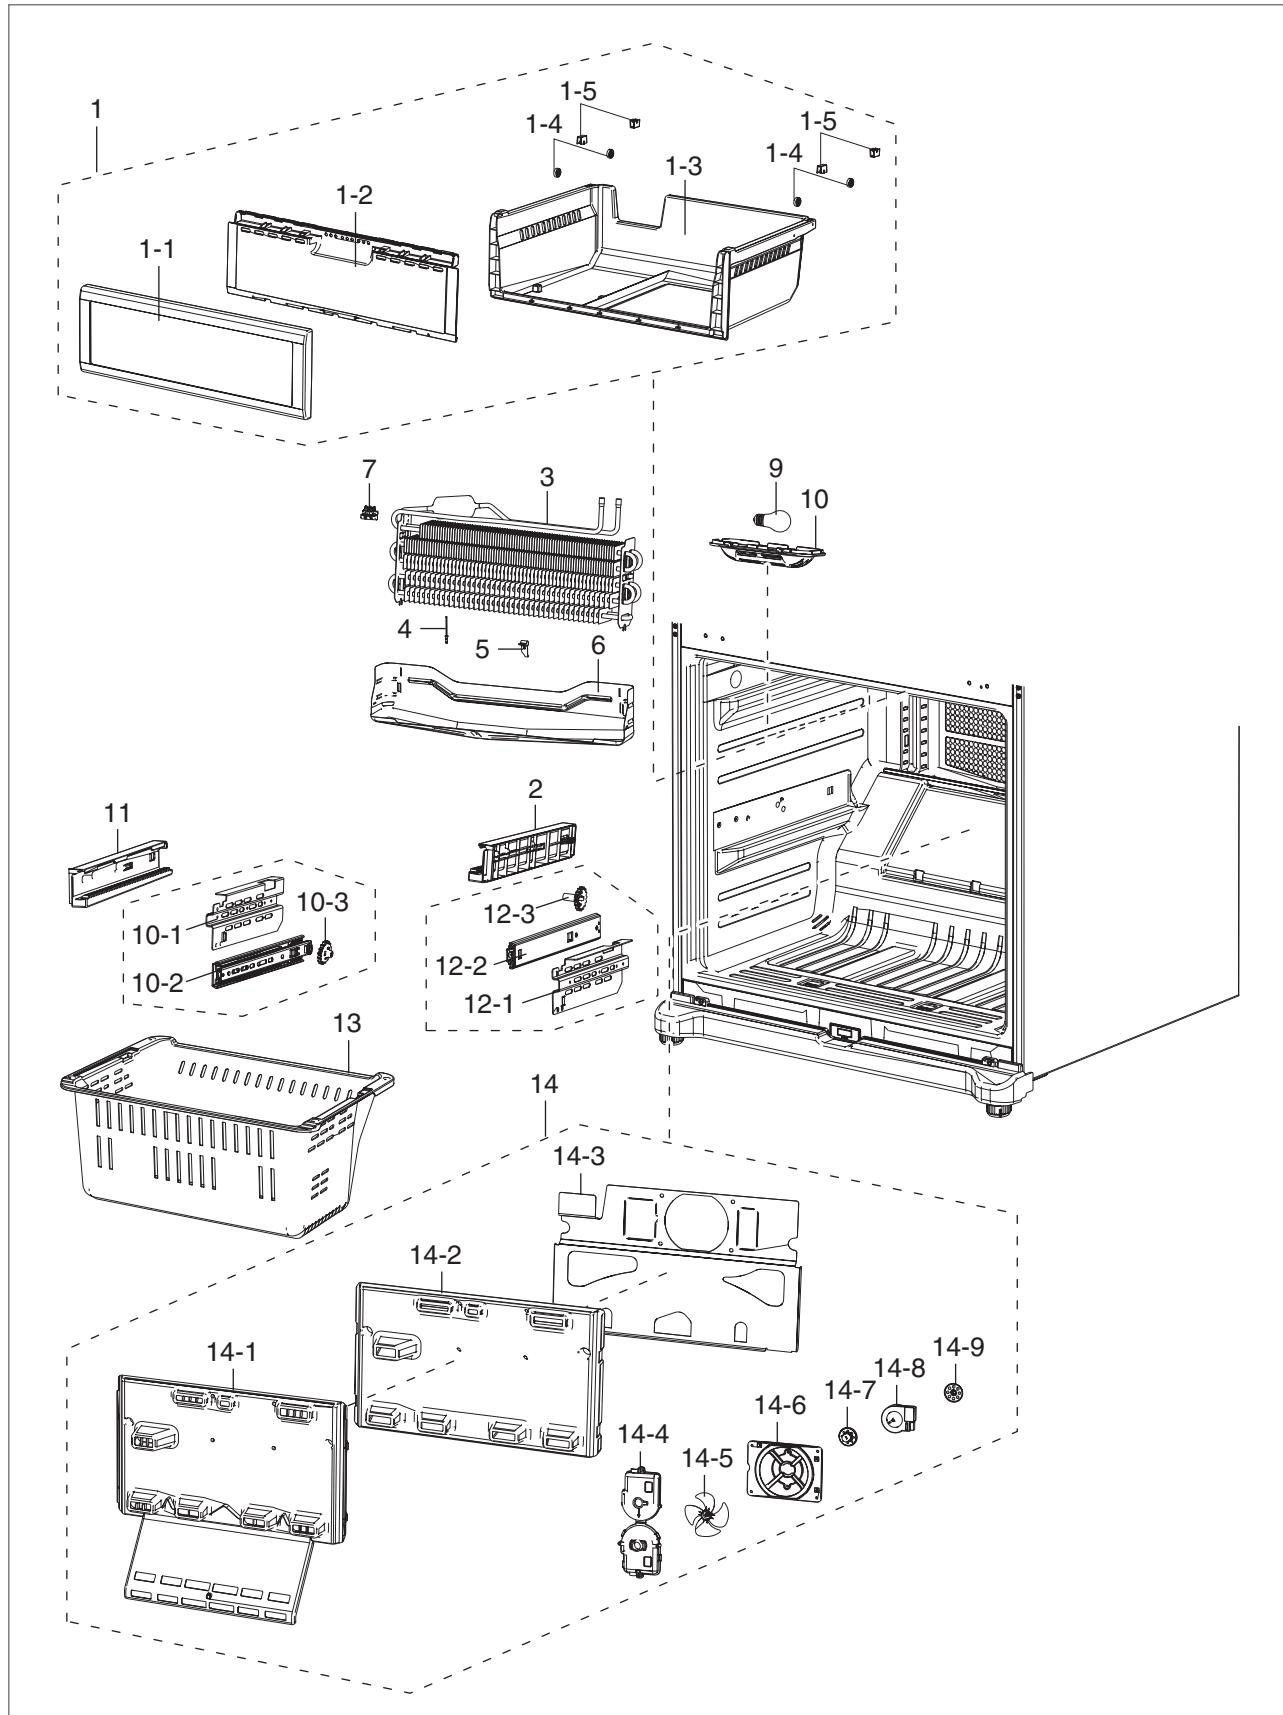

EXPLODED VIEW& PARTS LIST

■ Parts List of Freezer (RB216AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA97-06669A	ASSY TRAY-FRE UPP	NW2-PJT,-,-,-,21CU ft	1	RI242
1-1	DA63-04455A	COVER-TRAY FRE UPP A	NW2-PJT,HIPS,-,-,-,-,COOL WHT,-	1	RI064
1-2	DA63-04456A	COVER-TRAY FRE UPP B	NW2-PJT,GPPS,-,-,-,-,-	1	RI062
1-3	DA63-04457A	TRAY-FRE UPP	NW2-PJT,HIPS,-,-,-,-,COOL WHT,21INCH	1	RI064
1-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-	4	RW648
1-5	DA71-20145A	FIXER-ROLLER	61BU	4	RH029
2	DA61-04506A	SUPPORT-RAIL LOW R	NW2-PJT,ABS,-,-,-,COOL WHT,21CU ft	1	
3	DA96-00480A	ASSY EVAP-FRE	NW2-PJT,-,-,-,-,-,115V/240W,-	1	RF011
4	DA60-90005A	RIVET-AVEX	AL,D3.2,L9.83,-,-	1	
5	DA61-02901A	FIXER-SENSOR EVAP	CORE-PJT,PP,-,-,NTR,-	1	RI157
6	DA61-04462A	PLATE-DRAIN FRE	NW2-PJT,GALVANUME,T0.3,-,516,-,-	1	RF026
7	DA47-00243C	THERMO BIMETAL-PROTECTOR	AW-PJT(R),BT-121-M, PW-5M1N	1	RI074
8	DA63-04296A	COVER LAMP-FRE	AW2,PC,-,-,-,-,Transparent,-	1	RF031
9	4713-001206	LAMP-INCANDESCENT	120V,340mA,40W,FROST,-,-,-	1	RI081
10	DA97-06703A	ASSY RAIL-SLIDE LOW L	NW2-PJT,-,-,-,-,21Cu.ft	1	RI171
10-1	DA61-04464A	HANGER-RAIL LOW L	NW2-PJT,SECC1,T1.6,COOL WHT,-,-,-	1	RD094
10-2	DA61-04512A	RAIL-SLIDE LOW L	NW2-PJT,STS304,-,-,431,-,21Cu.ft	1	RI184
10-3	DA66-00436A	GEAR-L	AW-PJT,POM,-,-,-,NTR,-,-,-	1	RI242
11	DA61-04507A	SUPPORT-RAIL LOW L	NW2-PJT,ABS,-,-,-,COOL WHT,21CU ft	1	
12	DA97-06702A	ASSY RAIL-SLIDE LOW R	NW2-PJT,-,-,-,-,21Cu.ft	1	RI173
12-1	DA61-04465A	HANGER-RAIL LOW R	NW2-PJT,SECC1,T1.6,COOL WHT,-,-,-	1	RD095
12-2	DA61-04513A	RAIL-SLIDE LOW R	NW2-PJT,STS304,-,-,431,-,21Cu.ft	1	RI185
12-3	DA66-00436A	GEAR-L	AW-PJT,POM,-,-,-,NTR,-,-,-	1	RI242
13	DA63-04447A	TRAY-DRAWER BOX	NW2-PJT,PP,-,-,-,-,COOL WHITE,21INCH	1	
14	DA97-06657A	ASSY COVER-EVAP FRE	NW2-PJT,-,-,-,-,-,-	1	RF005
14-1	DA63-04444A	COVER-EVAP FRE	NW2-PJT,PP,-,-,-,-,-,COOL WHT,-	1	RF005
14-2	DA62-01942A	INSULATION-EVAP FRE	NW2-PJT,FOAM-PS,-,-,-,-,-,-	1	RI232
14-3	DA61-04461A	PLATE-INS EVAP FRE	NW2-PJT,GALVALUME,T0.3,-,-,-,-	1	RF092
14-4	DA63-01809A	COVER MOTOR-BLDC	BLDC-NEW,PP,NTR,-,-,-,-,BJ-730	1	RF083
14-5	DA31-00124A	FAN-AX100W4CC-T1	-,TD-PJT,ABS,-,-	1	RI085
14-6	DA61-03183A	CASE-MOTOR FRE	AW-PJT,BUBBLE PP,-,-,-,NTR,-	1	RF120
14-7	DA63-01808A	GROMMET-MOTOR,FRONT	BLDC,NBR,BLACK,-,-,-,-,H20	1	RO137
14-8	DA31-00146H	MOTOR BLDC	-,2950,-,DC12V,150mA,-,-,2.1W,-,-,-,-,-	1	RI089
14-9	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138


EXPLODED VIEW & PARTS LIST

■ Parts List of Freezer (RB196AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA97-06670A	ASSY TRAY-FRE UPP	NW2-PJT,-,-,-,19CU ft	1	RI242
1-1	DA63-04455A	COVER-TRAY FRE UPP A	NW2-PJT,HIPS,-,-,-,COOL WHT,-	1	RI064
1-2	DA63-04456A	COVER-TRAY FRE UPP B	NW2-PJT,GPPS,-,-,-,-	1	RI062
1-3	DA63-04450A	TRAY-FRE UPP	NW2-PJT,HIPS,-,-,-,COOL WHITE,19INCH	1	RF002
1-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-	4	RW648
1-5	DA71-20145A	FIXER-ROLLER	61BU	4	RH029
2	DA61-04509A	SUPPORT-RAIL LOW R	NW2-PJT,ABS,-,-,-,COOL WHT,19CU ft	1	
3	DA96-00480A	ASSY EVAP-FRE	NW2-PJT,-,-,-,-,115V/240W,-	1	RF011
4	DA60-90005A	RIVET-AVEX	AL,D3.2,L9.83,-,-	1	
5	DA61-02901A	FIXER-SENSOR EVAP	CORE-PJT,PP,-,-,NTR,-	1	RI157
6	DA61-04462A	PLATE-DRAIN FRE	NW2-PJT,GALVANUME,T0.3,-,516,-,-	1	RF026
7	DA47-00243C	THERMO BIMETAL-PROTECTOR	AW-PJT(R),BT-121-M, PW-5M1N	1	RI074
8	DA63-04296A	COVER LAMP-FRE	AW2,PC,-,-,-,Transparent,-	1	RF031
9	4713-001206	LAMP-INCANDESCENT	120V,340mA,40W,FROST,-,-,-	1	RI081
10	DA97-06720A	ASSY RAIL-SLIDE LOW L	NW2,-,-,-,19cu.ft	1	RI171
10-1	DA61-04464A	HANGER-RAIL LOW L	NW2-PJT,SECC1,T1.6,COOL WHT,-,-,-	1	RD094
10-2	DA61-04516A	RAIL-SLIDE LOW L	NW2,STS304,-,-,-,19cu.ft	1	RI184
10-3	DA66-00436A	GEAR-L	AW-PJT,POM,-,-,-,NTR,-,-,-	1	RI242
11	DA61-04508A	SUPPORT-RAIL LOW L	NW2-PJT,ABS,-,-,-,COOL WHT,19CU ft	1	
12	DA97-06718A	ASSY RAIL-SLIDE LOW R	NW2,-,-,-,19cu.ft	1	RI173
12-1	DA61-04465A	HANGER-RAIL LOW R	NW2-PJT,SECC1,T1.6,COOL WHT,-,-,-	1	RD095
12-2	DA61-04515A	RAIL-SLIDE LOW R	NW2,STS304,-,-,-,19cu.ft	1	RI185
12-3	DA66-00436A	GEAR-L	AW-PJT,POM,-,-,-,NTR,-,-,-	1	RI242
13	DA63-04446A	TRAY-DRAWER BOX	NW2-PJT,PP,-,-,-,COOL WHT,19INCH	1	RI237
14	DA97-06657A	ASSY COVER-EVAP FRE	NW2-PJT,-,-,-,-,-	1	RF005
14-1	DA63-04444A	COVER-EVAP FRE	NW2-PJT,PP,-,-,-,COOL WHT,-	1	RF005
14-2	DA62-01942A	INSULATION-EVAP FRE	NW2-PJT,FOAM-PS,-,-,-,-	1	RI232
14-3	DA61-04461A	PLATE-INS EVAP FRE	NW2-PJT,GALVALUME,T0.3,-,-,-,-	1	RF092
14-4	DA63-01809A	COVER MOTOR-BLDC	BLDC-NEW,PP,NTR,-,-,-,BJ-730	1	RF083
14-5	DA31-00124A	FAN-AX100W4CC-T1	-,TD-PJT,ABS,-,-	1	RI085
14-6	DA61-03183A	CASE-MOTOR FRE	AW-PJT,BUBBLE PP,-,-,-,NTR,-	1	RF120
14-7	DA63-01808A	GROMMET-MOTOR,FRONT	BLDC,NBR,BLACK,-,-,-,H20	1	RO137
14-8	DA31-00146H	MOTOR BLDC	-,2950,-,DC12V,150mA,-,-,2.1W,-,-,-,-,-	1	RI089
14-9	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138

EXPLODED VIEW & PARTS LIST

5-2) Refrigerator

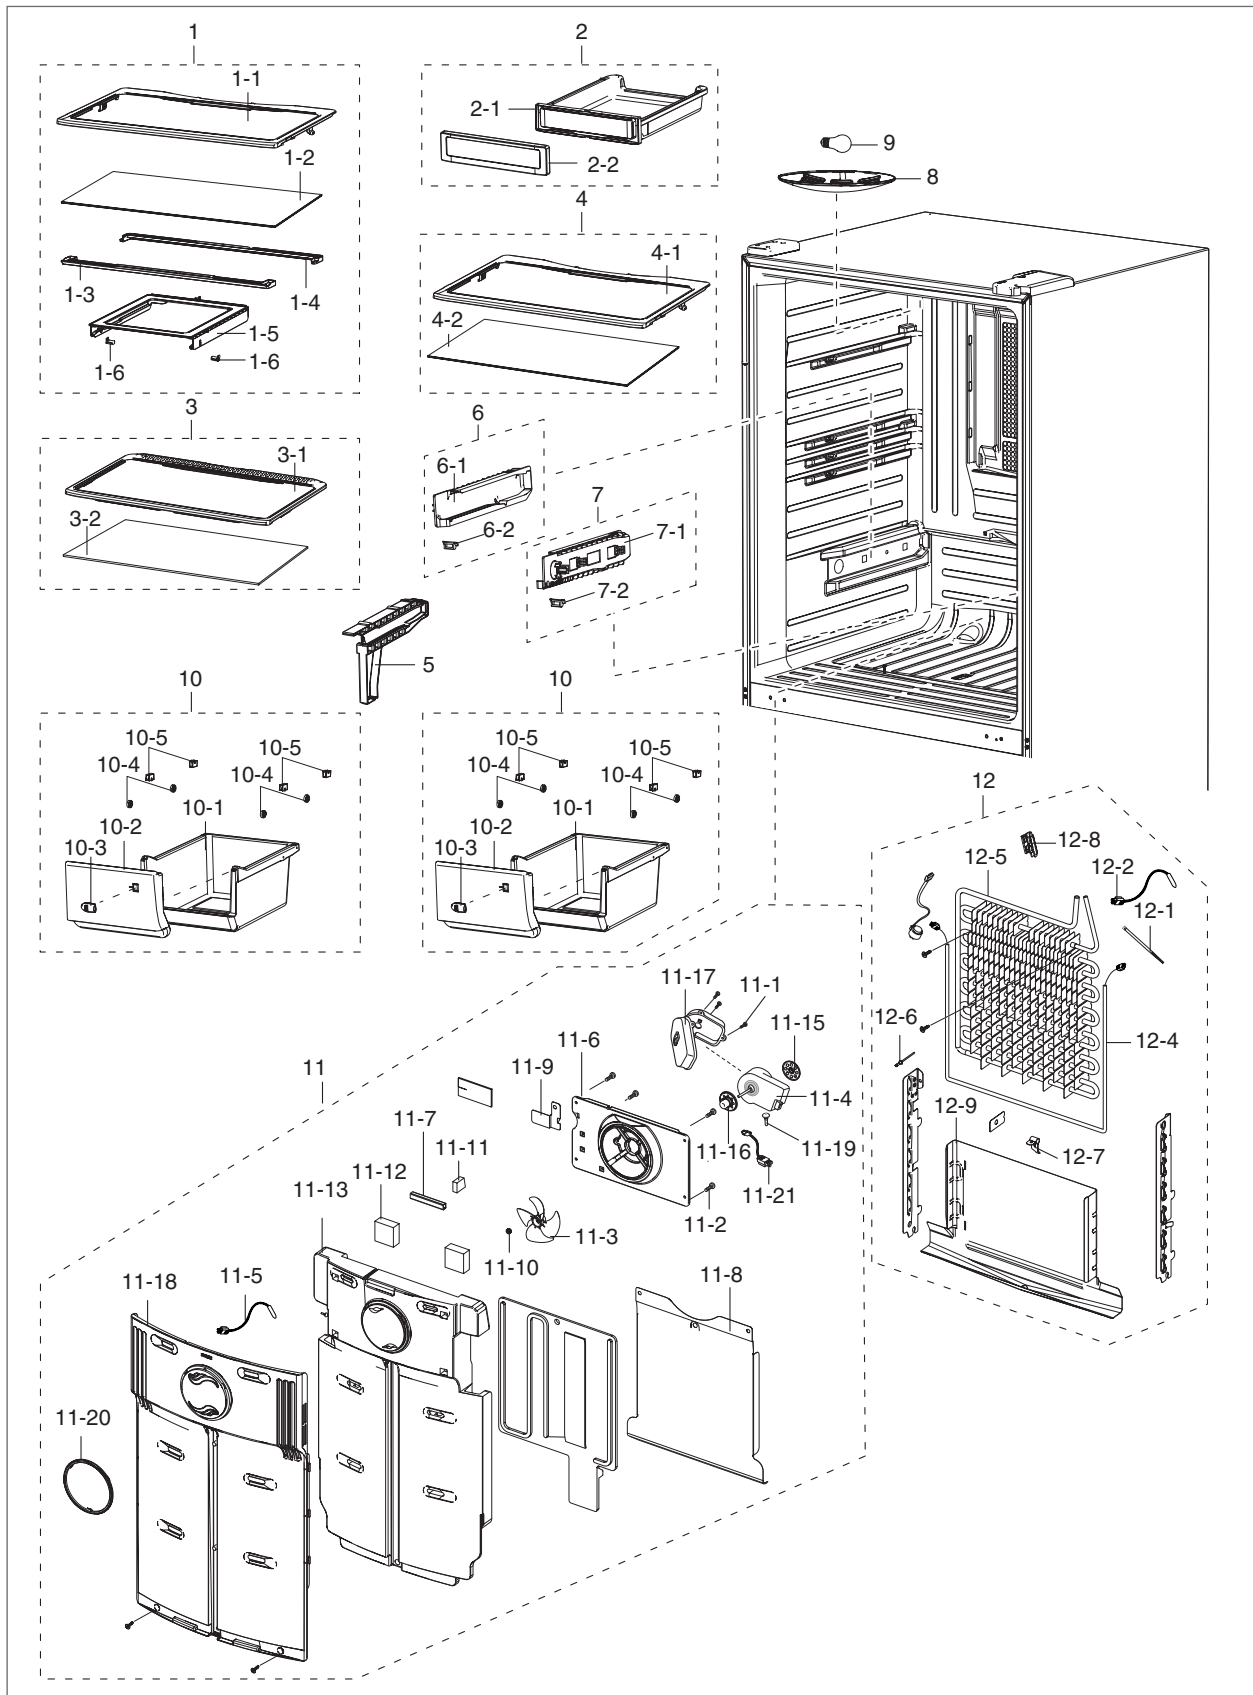

EXPLODED VIEW& PARTS LIST

■ Parts List of Refrigerator (RB216AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA97-06686A	ASSY SHELF-REF UPP	NW2,19cu.ft	1	RI041
1-1	DA64-02645A	TRIM SHELF-REF	NW2,HIPS,-,-,COOL WHITE,21cu.ft	1	RI079
1-2	DA64-02647A	GLASS-SHELF	NW2,GLASS,T4.0,-,-,-,-	1	RI037
1-3	DA61-04511A	SUPPORT-GUIDE RAIL FRONT	NW2,HIPS,-,-,COOL WHITE,-	1	
1-4	DA61-04510A	SUPPORT-GUIDE RAIL REAR	NW2,HIPS,-,-,COOL WHITE,-	1	
1-5	DA61-04505A	GUIDE-RAIL	NW2,HIPS,-,-,COOL WHITE,-	1	
1-6	DA63-00202A	GROMMET-RAIL	-,NY-6,-,-,-,-,-	2	RI088
2	DA97-06674A	ASSY TRAY-CHILLED ROOM	NW2,-,-,-,19cu.ft	1	RI018
2-1	DA63-04464A	TRAY CHIL ROOM	NW2,GPPS,-,-,-,-,-	1	RI018
2-2	DA63-04465A	COVER-TRAY CHIL ROOM	NW2,HIPS,-,-,-,-,COOL WHITE,-	1	
3	DA97-06675A	ASSY SHELF-TRIM REF MID	NW2,-	1	
3-1	DA64-02645A	TRIM SHELF-REF	NW2,HIPS,-,-,COOL WHITE,21cu.ft	1	RI079
3-2	DA64-02647A	GLASS-SHELF	NW2,GLASS,T4.0,-,-,-,-,-	1	RI037
4	DA97-00663H	ASSY COVER-VEG	W2-PJT(55), ABS+SHELF,GLASS(T5.0),cool white	1	RI997
4-1	DA64-00448B	TRIM-COVER VEG	W2-PJT(55),ABS,-,T2.5,L403,W717,cool white	1	RI091
4-2	DA67-01807H	SHELF-GLASS	W2-PJT(55), GLASS,T5,W708.5,L346,-,COVER-VEG	1	RF183
5	DA61-00760B	RAIL-VEG, MID	W2-PJT(55),ABS,T2.5,-,-,COOL-WHITE,SC-02740R	1	RI030
6	DA97-00103N	ASSY RAIL-VEG, L	W2-PJT,ABS,L341.5,SC-02740R,cool white,-	1	RI028
6-1	DA61-60126E	RAIL-VEG	W2-PJT,ABS,T3.0,-,LEFT,COOL-WHITE,SC-02740R	1	RI028
6-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,-,RAIL	1	RW374
7	DA97-00103P	ASSY RAIL-VEG, R	W2-PJT,ABS,L341.5,SC-02740R,cool white,-	1	RI029
7-1	DA61-60127E	RAIL-VEG	W2-PJT,ABS,T3.0,-,RIGHT,COOL-WHITE,SC-02740R	1	RI028
7-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,-,RAIL	1	RW374
8	DA63-02799A	COVER LAMP-REF	W2-05,PC,-,-,-,-,-,LOW'S	1	
9	4713-001206	LAMP-INCANDESCENT	120V,340mA,40W,FROST,-,-,-	1	RI081
10	DA97-06700A	ASSY CASE-VEG REF	NW2-PJT,-,-,-,-,-	2	RI999
10-1	DA61-00762A	CASE-VEG,REF	W2-PJT(55),HIPS,-,-,-,WHITE,HG-1760	1	RI999
10-2	DA63-04445A	COVER-VEG REF	NW2-PJT,SAN,-,-,-,-,-,NATURAL,-	1	RI010
10-3	DA64-00656A	KNOB-HUMIDITY	W2-PJT,ABS,-,-,-,-,W9540,-,BEST BYE	1	RW508
10-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-	4	RW648
10-5	DA71-20145A	FIXER-ROLLER	-,PA,-,-,-	4	RH029
11	DA96-00365E	ASSY EVAP-REF	AW-PJT(265,266),-,-,-,115V/120W,-,-,-,-	1	
11-1	6002-000213	SCREW-TAPPING	TH,+,-,1,M4,L12,ZPC(WHT),SWRCH18A,-	3	RS047
11-2	6002-000215	SCREW-TAPPING	TH,+,-,1,M4.0,L16,ZPC(WHT),SWRCH18A,-	4	RS080
11-3	DA31-00124A	FAN-AX100W4CC-T1	-,TD-PJT,ABS,-,-	1	RI085
11-4	DA31-00146H	MOTOR BLDC	2950,-,DC12V,150mA,-,-,2.1W,-,-,-,-,-	1	RI089
11-5	DA32-10105X	SENSOR TEMP	PX-41C,QUEEN PJT,-10,5V,-,-,F-SENSOR,YELLOW	1	RQ684
11-6	DA61-03181A	CASE-MOTOR REF	AW-PJT,BUBBLE PP,-,-,-,NTR,-	1	RF121
11-7	DA61-03182A	GUIDE-INS EVAP REF	AW-PJT,ABS,-,-,-,NTR,-	1	RI210
11-8	DA61-03186A	PLATE-INS EVAP REF	AW-PJT,GALVANUM,T0.4,-,-,-,-	1	
11-9	DA61-03599A	PLATE-HOUSING REF	AW-PJT,GALVALUME,T0.3,-,-,-,-	1	RI307
11-10	DA61-20128A	SPRING ETC-FAN	-,STS304,PI7.8,-,OD1.0,-,-,-,-,FD	1	RW716
11-11	DA62-01383A	INSULATION-EVAP SUB	AW-PJT,FOAM-PS,-,-,-,-,-,-	1	RI232
11-12	DA62-01423A	INSULATION-EVAP DUCT	AW-PJT,FOAM-PS,T20,W44.5,L45,-,-,-,-	2	RI236
11-13	DA62-01941A	INSULATION-EVAP REF	NW2-PJT,FOAM-PS,-,-,-,-,-,-	1	RI231
11-14	DA62-01969A	INSULATION-EVAP REAR	NW2-PJT,FOAM-PS,-,-,-,-,-,-	1	RI233
11-15	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138
11-16	DA63-01808A	GROMMET-MOTOR,FRONT	BLDC,NBR,BLACK,-,-,-,-,H20	1	RO137
11-17	DA63-01809A	COVER MOTOR-BLDC	BLDC-NEW,PP,NTR,-,-,-,-,BJ-730	1	RF083
11-18	DA63-04439A	COVER-EVAP REF	NW2-PJT,PP,-,-,-,-,COOL WHT,-	1	RI024
11-19	DA63-40167A	GROMMET-COVER CHIL	T3.0,SILICON,-,-,-,-,-,NTR	1	RI087
11-20	DA64-02065A	TRIM-COVER EVAP REF	AW-PJT,ABS,-,-,-,COOL WHITE,-	1	RI241

EXPLODED VIEW & PARTS LIST

■ Parts List of Refrigerator (RB216AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
11-21	DA96-00042J	ASSY-HARNESS MOTOR	AW-PJT,R-Fan/ F-Fan	1	
12	DA96-00365E	ASSY EVAP-REF	AW-PJT(265,266),-, -, -, 115V/120W, -, -, -, -	4	
12-1	6501-000123	CABLE TIE	DACT-140, -, W3.6, L146, NTR, NYLON66	1	RO101
12-2	DA32-00027B	SENSOR TEMP	502AT, AW-PJT, -40~110°, 5V, -, -, R-DEF-SENSOR	1	
12-3	DA47-00243S	THERMO BIMETAL-PROTECTOR	AW-PJT(R), BT-121-M, PW-5M1N, 125 / 250V, 10	1	
12-4	DA47-00244D	HEATER-METAL SHEATH	AW-PJT, -, 120W, -, 115V, 110.2 β Y, R-ROOM	1	
12-5	DA59-00357B	EVAP REF	-, -, -, -, -, -, AW-PJT, -	1	RI016
12-6	DA60-90005A	RIVET-AVEX	AL, D3.2, L9.83, -, -	1	
12-7	DA61-03644A	PLATE-EVAP HEATER	AW-PJT, AL, T0.7, -, -, -, -	1	RF170
12-8	DA61-03683A	FIXER-SENSER	AW-PJT, ABS, -, NTR, -	1	RM017
12-9	DA61-04148A	PLATE-DRAIN REF	AW-PJT('08), GALVANUM, T0.3, -, -, -, -		RF026

EXPLODED VIEW& PARTS LIST

■ Parts List of Refrigerator (RB196AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA90-04893C	ASSY SHELF-REF UPP	RB196,PLATINUM INOX,-,-,-,-,-	1	
1-1	DA64-02644A	TRIM SHELF-REF	NW2,HIPS,-,-,-,COOL WHITE,19cu.ft	1	RI079
1-2	DA64-02646A	GLASS-SHELF	NW2,GLASS,T4.0,-,-,-,-	1	RI037
1-3	DA61-04511A	SUPPORT-GUIDE RAIL FRONT	NW2,HIPS,-,-,-,COOL WHITE,-	1	
1-4	DA61-04510A	SUPPORT-GUIDE RAIL REAR	NW2,HIPS,-,-,-,COOL WHITE,-	1	
1-5	DA61-04503A	GUIDE-RAIL	NW2,HIPS,-,-,-,COOLWHITE,19cu.ft	1	
1-6	DA63-00202A	GROMMET-RAIL	-,NY-6,-,-,-,-,-	2	RI088
2	DA97-06677A	ASSY TRAY-CHILLED ROOM	NW2,-,-,-,19cu.ft	1	RI018
2-1	DA63-04463A	TRAY CHIL ROOM	NW2,GPPS,-,-,-,-,19cu.ft	1	RI018
2-2	DA63-04465A	COVER-TRAY CHIL ROOM	NW2,HIPS,-,-,-,-,COOL WHITE,-	1	
3	DA97-06687A	ASSY SHELF-TRIM REF MID	NW2,19cu.ft	1	RI040
3-1	DA64-02644A	TRIM SHELF-REF	NW2,HIPS,-,-,-,COOL WHITE,19cu.ft	1	RI079
3-2	DA64-02646A	GLASS-SHELF	NW2,GLASS,-,-,-,-,19cu.ft	1	RI037
4	DA97-00663G	ASSY COVER-VEG	W2-PJT, ABS+SHELF,GLASS(T5.0), SC-02740R, cool white	1	RI997
4-1	DA64-00449B	TRIM-COVER VEG	W2-PJT,ABS,-,T2.5,SC-02740R,cool white,-	1	RI091
4-2	DA67-01807G	SHELF-GLASS	W2-PJT(50), GLASS, T5, W708.5, L296,-, COVER-VEG(50)	1	RF183
5	DA61-00761B	RAIL-VEG, MID	W2-PJT,ABS,T2.5,-,-,COOL-WHITE,SC-02740R	1	RI030
6	DA97-00103N	ASSY RAIL-VEG, L	W2-PJT,ABS,L341.5,SC-02740R,cool white,-	1	RI028
6-1	DA61-60126E	RAIL-VEG	W2-PJT,ABS,T3.0,-,LEFT,COOL-WHITE,SC-02740R	1	RI028
6-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,-RAIL	1	RW374
7	DA97-00103P	ASSY RAIL-VEG, R	W2-PJT,ABS,L341.5,SC-02740R,cool white,-	1	RI029
7-1	DA61-60127E	RAIL-VEG	W2-PJT,ABS,T3.0,-,RIGHT,COOL-WHITE,SC-02740R	1	RI028
7-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,-RAIL	1	RW374
8	DA63-04296A	COVER LAMP-REF	AW2,PC,-,-,-,-,Transparent,-	1	RF031
9	4713-001206	LAMP-INCANDESCENT	120V,340mA,40W,FROST,-,-,-	1	RI081
10	DA97-06725A	ASSY CASE-VEG REF	NW2,-,-,-,19cu.ft,-	2	RI998
10-1	DA61-00759B	CASE-VEG,REF	W2-PJT,HIPS,-,SC-02740R,-,COOL-WHITE,-	1	RI998
10-2	DA63-04445A	COVER-VEG REF	NW2-PJT,SAN,-,-,-,-,NATURAL,-	1	RI010
10-3	DA64-00656A	KNOB-HUMIDITY	W2-PJT,ABS,-,-,-,-,W9540,-,BEST BYE	1	RW508
10-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-	4	RW648
10-5	DA71-20145A	FIXER-ROLLER	-,PA,-,-	4	RH029
11	DA96-00365E	ASSY EVAP-REF	AW-PJT(265,266),-,-,-,115V/120W,-,-,-,-	1	
11-1	6002-000213	SCREW-TAPPING	TH,+,-,1,M4,L12,ZPC(WHT),SWRCH18A,-	3	RS047
11-2	6002-000215	SCREW-TAPPING	TH,+,-,1,M4.0,L16,ZPC(WHT),SWRCH18A,-	4	RS080
11-3	DA31-00124A	FAN-AX100W4CC-T1	-,TD-PJT,ABS,-,-	1	RI085
11-4	DA31-00146H	MOTOR BLDC	2950,-,DC12V,150mA,-,-,2.1W,-,-,-,-,-	1	RI089
11-5	DA32-10105X	SENSOR TEMP	PX-41C,QUEEN PJT,-10,5V,-,-,F-SENSOR,YELLOW	1	RQ684
11-6	DA61-03181A	CASE-MOTOR REF	AW-PJT,BUBBLE PP,-,-,-,NTR,-	1	RF121
11-7	DA61-03182A	GUIDE-INS EVAP REF	AW-PJT,ABS,-,-,-,NTR,-	1	RI210
11-8	DA61-03186A	PLATE-INS EVAP REF	AW-PJT,GALVANUME,T0.4,-,-,-,-	1	
11-9	DA61-03599A	PLATE-HOUSING REF	AW-PJT,GALVALUME,T0.3,-,-,-,-	1	RI307
11-10	DA61-20128A	SPRING ETC-FAN	-,STS304,PI7.8,-,OD1.0,-,-,-,-,FD	1	RW716
11-11	DA62-01383A	INSULATION-EVAP SUB	AW-PJT,FOAM-PS,-,-,-,-,-	1	RI232
11-12	DA62-01423A	INSULATION-EVAP DUCT	AW-PJT,FOAM-PS,T20,W44.5,L45,-,-,-,-	2	RI236
11-13	DA62-01941A	INSULATION-EVAP REF	NW2-PJT,FOAM-PS,-,-,-,-,-	1	RI231
11-14	DA62-01969A	INSULATION-EVAP REAR	NW2-PJT,FOAM-PS,-,-,-,-,-	1	RI233
11-15	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138
11-16	DA63-01808A	GROMMET-MOTOR,FRONT	BLDC,NBR,BLACK,-,-,-,-,H20	1	RO137
11-17	DA63-01809A	COVER MOTOR-BLDC	BLDC-NEW,PP,NTR,-,-,-,-,BJ-730	1	RF083
11-18	DA63-04439A	COVER-EVAP REF	NW2-PJT,PP,-,-,-,-,COOL WHT,-	1	RI024
11-19	DA63-40167A	GROMMET-COVER CHIL	T3.0,SILICON,-,-,-,-,-,NTR	1	RI087
11-20	DA64-02065A	TRIM-COVER EVAP REF	AW-PJT,ABS,-,-,-,-,COOL WHITE,-	1	RI241


EXPLODED VIEW & PARTS LIST

■ Parts List of Refrigerator (RB196AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
11-21	DA96-00042J	ASSY-HARNESS MOTOR	AW-PJT,R-Fan/ F-Fan	1	
12	DA96-00365E	ASSY EVAP-REF	AW-PJT(265,266),-, -, -, 115V/120W, -, -, -, -	4	
12-1	6501-000123	CABLE TIE	DACT-140, -, W3.6, L146, NTR, NYLON66	1	RO101
12-2	DA32-00027B	SENSOR TEMP	502AT, AW-PJT, -40~110°C, 5V, -, -, R-DEF-SENSOR	1	
12-3	DA47-00243S	THERMO BIMETAL-PROTECTOR	AW-PJT(R), BT-121-M, PW-5M1N, 125 / 250V, 10	1	
12-4	DA47-00244D	HEATER-METAL SHEATH	AW-PJT, -, 120W, -, 115V, 110.2 β Y, -, -, R-ROOM	1	
12-5	DA59-00357B	EVAP REF	-, -, -, -, -, -, AW-PJT, -	1	RI016
12-6	DA60-90005A	RIVET-AVEX	AL, D3.2, L9.83, -, -	1	
12-7	DA61-03644A	PLATE-EVAP HEATER	AW-PJT, AL, T0.7, -, -, -, -	1	RF170
12-8	DA61-03683A	FIXER-SENSER	AW-PJT, ABS, -, NTR, -	1	RM017
12-9	DA61-04148A	PLATE-DRAIN REF	AW-PJT('08), GALVANUM, T0.3, -, -, -, -		RF026

EXPLODED VIEW& PARTS LIST

5-3) Cabinet

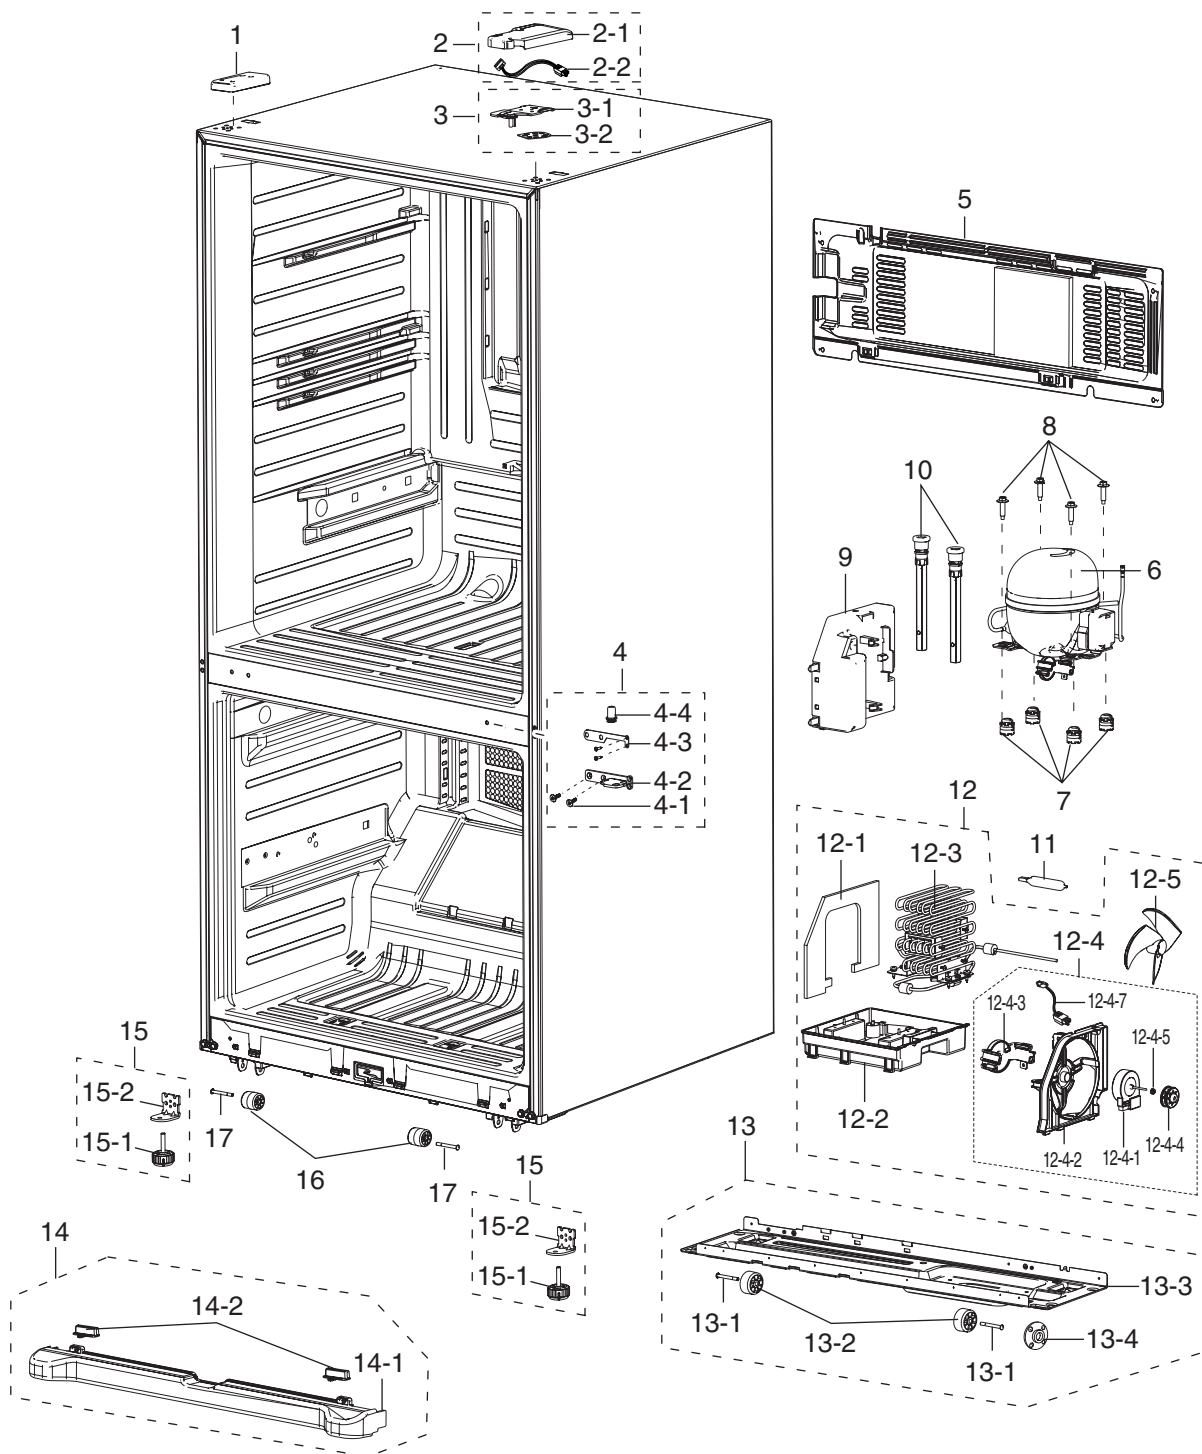

EXPLODED VIEW& PARTS LIST

■ Parts List of Cabinet (RB216AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA63-02520A	COVER HINGE-UPP L	W2-PJT(05),ABS,-,-,-,-,SC-00477R,HG-0760H	1	
2	DA97-06705A	ASSY COVER HINGE-UPP R	NW2,ABS,-,-,-,-,Creamy STS(SC-07009R),-	1	RO045
2-1	DA63-04441A	COVER HINGE-UPP R	NW2-PJT,ABS,T2.0,-,-,-,-,Creamy STS(SC-07009R),-	1	RO045
2-2	DA34-00043C	SWITCH REED-ASS'Y	200VDC,1.5A,-	1	RO150
3	DA97-06716A	ASSY HINGE UPP-R	NW2,T3.0,-,-,-,-,-	1	RO042
3-1	DA61-04476A	HINGE-UPP R	NW2-PJT,SHP1,T3.0,-,-,-,-,-	1	RO128
3-2	DA63-02527A	SHIM HINGE-UPP	W2-PJT(05),HIPS,T1.0,-,-,-,-,-	1	RO067
4	DA97-06695A	ASSY HINGE-MID R	NW2,T4.5,-,-,-,-,-	1	
4-1	6009-001548	SCREW-SPECIAL	FH,HEX,-,M6,L20,ZPC3(WHT),SWRCH18(A),,-	1	RQ747
4-2	DA61-04433B	HINGE-MID R	NW2,SHP1,T4.5,-,-,-,Ni-Cr Plated,-,DRAWER Type	1	RO123
4-3	DA63-03463A	SHIM-HINGE MID	AW-PJT,RD-PVC,T1.0,-,-,-,-,-	1	RO067
4-4	DA66-00611A	SHAFT HINGE-MID	NW2,SM45C,-,-,-,-,DRAWER	1	
5	DA97-00408E	ASSY COVER-COMP	W2-05,-,T0.35,-,-,-,-,-	1	
6	MK162DL1U/E09	COMPRESSOR	6.15CC,115/127V~60HZ,RSCR	1	RH002
7	DA63-02017A	GROMMET COMP	QUEEN,EPDM,-,-,-,-,-,BLACK,-	4	RH015
8	DA60-20008A	BOLT-HEX	S25C,M6,-,-,L42.6,WHITE,-,ZPC	4	RW074
9	DA63-01866A	COVER RELAY	NORYL,T2.0,-,-,-,SSEC,BLACK,HOOK	1	RH004
10	DA97-04049A	ASSY CAP-DRAIN	EPEL,ASSY,-,-,L224.5,-,SOFT-PVC	2	RZ110
11	DA62-01514A	DRYER	C1220T,OD18.70,L114,-,-,-,-	1	RH014
12	DA97-06698A	ASSY TRAY-DRAIN WATER	NW2,-,-,-,-,-	1	RH003
12-1	DA62-00954A	SEAL-SUB COND	W2-05,FOAM-PE,-,T7,-,-,-,-	1	RH030
12-2	DA63-04466A	TRAY DRAIN-WATER	NW2,PP,-,-,-,-,NTR,-	1	RH003
12-3	DA97-02791B	ASSY PIPE-SUB COND	NW2-PJT,-	1	RW005
12-4	DA97-03145L	ASSY SUPPORT-CIRCUIT MOTOR	AW2-PJT,-,-,-,-,1550RPM,2.7W	1	RO132
12-4-1	DA31-00146B	MOTOR BLDC	DRCP5030LA,1560,-,DC12V,230mA,-,-,2.7W,ATOP	1	RI089
12-4-2	DA61-02349B	SUPPORT-CIRCUIT MOTOR	NEXT,ABS,-,-,-,-,NTR,-	1	RF033
12-4-3	DA61-02355B	BRACKET-CIRCUIT MOTOR	ABS,NEXT,-,-,-,-,NTR,-	1	RH039
12-4-4	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138
12-4-5	DA63-40167A	GROMMET-COVER CHIL	SILICON,T3.0,-,L16,-,-,BLACK,-	1	RI087
12-4-6	DA96-00042A	ASSY-HARNESS MOTOR	A-TOP UL(MOTOR),C-FAN,350MM	1	RI133
12-5	DA31-00010D	FAN-ASS'Y	ET,ZIPEL,ASSY,-,UNIT,-,150	1	RI085
13	DA97-06815A	ASSY CHASSIS COMP	NW2,T1.2,-,-,-,-,-	1	
13-1	DA60-90146A	PIN-CASTER	MSWR10,OD6.0,L40,ZPC2,SR-289-4	2	RH019
13-2	DA61-40126B	CASTER-REAR	REF-ALL,PP,-,PI 44,NTR,W22,-	2	RH011
13-3	DA64-02694A	CHASSIS COMP	NW2,SBHG1,T1.2,-,-,-,-,-	1	RO002
13-4	DA71-50240A	BRACKET-CABI	ALL,SBHG1,T1.6,-,-,-,-,-	1	
14	DA97-06673A	ASSY COVER LEG FRONT	NW2,-,-,-,-,-,CREAMY STS,-	1	RO003
14-1	DA63-04462A	COVER LEG-FRONT	NW2,PP,-,-,-,-,CREAMY STS,-	1	RO003
14-2	DA67-02071A	CAP LEG FRONT	NW2,PP,-,-,-,CREAMY STS,-	2	
15	DA97-06688A	ASSY SUPPORT-FOOT FRONT	NW2,-,-,-,-,-	2	
15-1	DA61-00805D	FOOT-FRONT	AW2-PJT,PP+MSWR10,-,BLACK,-,-,-	1	RO001
15-2	DA61-04490A	SUPPORT-FOOT FRONT	NW2,SHP1,T4.0,-,-,-,-,-	1	RO158
16	DA61-00176A	CASTER-FRONT	PP,-,OD40,NTR,-,-	2	RH009
17	DA60-90124A	RIVET	MSWR10,OD6.0,-,-,L56,-,-,-	2	RH012
18	DA97-06707A	ASSY VALVE WATER-HOSE	NW2,DISP,-,-,-,-	1	


EXPLODED VIEW& PARTS LIST

■ Parts List of Cabinet (RB196AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA63-02520A	COVER HINGE-UPP L	W2-PJT(05),ABS,-,-,-,-,SC-00477R,HG-0760H	1	
2	DA97-06705A	ASSY COVER HINGE-UPP R	NW2,ABS,-,-,-,-,Creamy STS(SC-07009R),-	1	RO045
2-1	DA63-04441A	COVER HINGE-UPP R	NW2-PJT,ABS,T2.0,-,-,-,-,Creamy STS(SC-07009R),-	1	RO045
2-2	DA34-00043C	SWITCH REED-ASS'Y	200VDC,1.5A,-	1	RO150
3	DA97-06716A	ASSY HINGE UPP-R	NW2,T3.0,-,-,-,-	1	RO042
3-1	DA61-04476A	HINGE-UPP R	NW2-PJT,SHP1,T3.0,-,-,-,-	1	RO128
3-2	DA63-02527A	SHIM HINGE-UPP	W2-PJT(05),HIPS,T1.0,-,-,-,-	1	RO067
4	DA97-06695A	ASSY HINGE-MID R	NW2,T4.5,-,-,-,-	1	
4-1	6009-001548	SCREW-SPECIAL	FH,HEX,-,M6,L20,ZPC3(WHT),SWRCH18(A),-,-	1	RQ747
4-2	DA61-04433B	HINGE-MID R	NW2,SHP1,T4.5,-,-,Ni-Cr Plated,-,DRAWER Type	1	RO123
4-3	DA63-03463A	SHIM-HINGE MID	AW-PJT,RD-PVC,T1.0,-,-,-,-	1	RO067
4-4	DA66-00611A	SHAFT HINGE-MID	NW2,SM45C,-,-,-,-,DRAWER	1	
5	DA97-00408E	ASSY COVER-COMP	W2-05,-,T0.35,-,-,-,-,-	1	
6	MK162DL1U/E09	COMPRESSOR	6.15CC,115/127V~60HZ,RSCR	1	RH002
7	DA63-02017A	GROMMET COMP	QUEEN,EPDM,-,-,-,-,-,BLACK,-	4	RH015
8	DA60-20008A	BOLT-HEX	S25C,M6,-,-,L42.6,WHITE,-,ZPC	4	RW074
9	DA63-01866A	COVER RELAY	NORYL,T2.0,-,-,-,SSEC,BLACK,HOOK	1	RH004
10	DA97-04049A	ASSY CAP-DRAIN	EPEL,ASSY,-,-,L224.5,-,SOFT-PVC	2	RZ110
11	DA62-01514A	DRYER	C1220T,OD18.70,L114,-,-,-,-	1	RH014
12	DA97-06698A	ASSY TRAY-DRAIN WATER	NW2,-,-,-,-,-	1	RH003
12-1	DA62-00954A	SEAL-SUB COND	W2-05,FOAM-PE,-,T7,-,-,-	1	RH030
12-2	DA63-04466A	TRAY DRAIN-WATER	NW2,PP,-,-,-,-,NTR,-	1	RH003
12-3	DA97-02791B	ASSY PIPE-SUB COND	NW2-PJT,-	1	RW005
12-4	DA97-03145L	ASSY SUPPORT-CIRCUIT MOTOR	AW2-PJT,-,-,-,-,1550RPM,2.7W	1	RO132
12-4-1	DA31-00146B	MOTOR BLDC	DRCP5030LA,1560,-,DC12V,230mA,-,-,2.7W,ATOP	1	RI089
12-4-2	DA61-02349B	SUPPORT-CIRCUIT MOTOR	NEXT,ABS,-,-,-,-,NTR,-	1	RF033
12-4-3	DA61-02355B	BRACKET-CIRCUIT MOTOR	ABS,NEXT,-,-,-,-,NTR,-	1	RH039
12-4-4	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138
12-4-5	DA63-40167A	GROMMET-COVER CHIL	SILICON,T3.0,-,L16,-,-,BLACK,-	1	RI087
12-4-6	DA96-00042A	ASSY-HARNESS MOTOR	A-TOP UL(MOTOR),C-FAN,350MM	1	RI133
12-5	DA31-00010D	FAN-ASS'Y	ET,ZIPEL,ASSY,-,UNIT,-,150	1	RI085
13	DA97-06815A	ASSY CHASSIS COMP	NW2,T1.2,-,-,-,-	1	
13-1	DA60-90146A	PIN-CASTER	MSWR10,OD6.0,L40,ZPC2,SR-289-4	2	RH019
13-2	DA61-40126B	CASTER-REAR	REF-ALL,PP,-,PI 44,NTR,W22,-	2	RH011
13-3	DA64-02694A	CHASSIS COMP	NW2,SBHG1,T1.2,-,-,-,-	1	RO002
13-4	DA71-50240A	BRACKET-CABI	ALL,SBHG1,T1.6,-,-,-,-	1	
14	DA97-06673A	ASSY COVER LEG FRONT	NW2,-,-,-,-,-,CREAMY STS,-	1	RO003
14-1	DA63-04462A	COVER LEG-FRONT	NW2,PP,-,-,-,-,CREAMY STS,-	1	RO003
14-2	DA67-02071A	CAP LEG FRONT	NW2,PP,-,-,-,-,CREAMY STS,-	2	
15	DA97-06688A	ASSY SUPPORT-FOOT FRONT	NW2,-,-,-,-,-	2	
15-1	DA61-00805D	FOOT-FRONT	AW2-PJT,PP+MSWR10,-,BLACK,-,-,-	1	RO001
15-2	DA61-04490A	SUPPORT-FOOT FRONT	NW2,SHP1,T4.0,-,-,-,-	1	RO158
16	DA61-00176A	CASTER-FRONT	PP,-,OD40,NTR,-,-	2	RH009
17	DA60-90124A	RIVET	MSWR10,OD6.0,-,-,L56,-,-,-	2	RH012
18	DA97-06707A	ASSY VALVE WATER-HOSE	NW2,DISP,-,-,-	1	

EXPLODED VIEW & PARTS LIST

5-4) Disassembly of Freezer Door

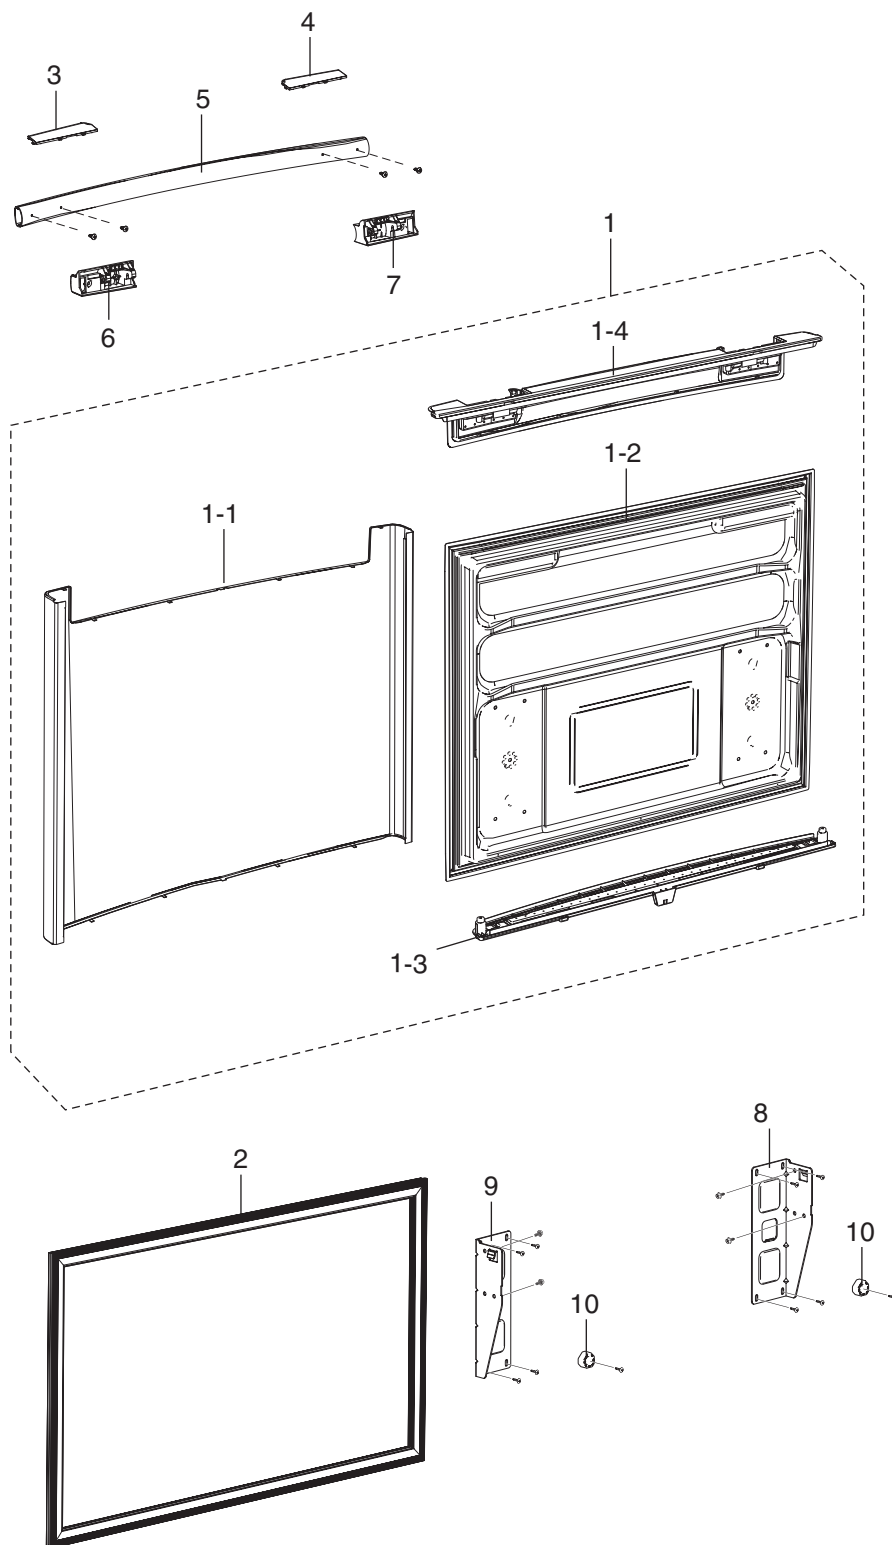

EXPLODED VIEW& PARTS LIST

■ Parts List of Freezer Door (RB216AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA90-04786A	ASSY DOOR FRE	NW2,-,-,Versailles STS,EASY HANDLE,-,-,-,-,-,-,-,-,-	1	
1-1	DA64-02639A	PANEL DOOR-FRE	NW2,ABS,-,-,-,-,COOL WHITE,-	1	
1-2	DA61-04473D	PLATE-DOOR FRE	NW2,STSD11,T0.6,-,-,PLATINUM INOX,DRAWER	1	RD162
1-3	DA97-06712A	ASSY CAP DOOR FRE-LOW	NW2,-,-,-,DRAWING,CREAMY STS,SC-07009R	1	
1-4	DA97-06713A	ASSY CAP DOOR FRE-UPP	NW2,-,-,-,EASYHANDLE,CREAMY STS,SC-07009R	1	
2	DA97-06694A	ASSY-GASKET DOOR FRE	NW2,SF-PVC,-,-	1	RD012
3	DA63-04451A	COVER HANDLE-FRE L	NW2,ABS,-,-,-,-,CREAMY STS,-	1	
4	DA63-04452A	COVER HANDLE-FRE R	NW2,ABS,-,-,-,-,CREAMY STS,-	1	
5	DA64-02638D	HANDLE BAR-FRE	NW2,AL,-,-,-,-,SNOW WHITE,SPRAY	1	
6	DA67-02067A	CAP-HANDLE FRE R	NW2,ABS,-,-,-,-,CREAMY STS,SC-07009R	1	RD153
7	DA67-02073A	CAP-HANDLE FRE L	NW2,ABS,-,-,-,-,CREAMY STS,SC-07009R	1	RD152
8	DA61-03153B	HANGER-RAIL FRONT L	AW-PJT,SECC1,T2.0,COOL-WHITE,-,-,RESTRIKING	1	RD092
9	DA61-03155B	HANGER-RAIL FRONT R	AW-PJT,SECC1,T2.0,COOL-WHITE,-,-,RESTRIKING	1	RD093
10	DA61-02904B	SUPPORT-DOOR POSITION,IN	AW-PJT,HIPS,-,-,-,-,NTR,-	2	RD086


EXPLODED VIEW& PARTS LIST

■ Parts List of Freezer Door (RB196AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA90-04786A	ASSY DOOR FRE	NW2,-,-,Versailles STS,EASY HANDLE,-,-,-,-,-,-,-,-,-,-	1	
1-1	DA64-02639A	PANEL DOOR-FRE	NW2,ABS,-,-,-,-,COOL WHITE,-	1	
1-2	DA61-04473D	PLATE-DOOR FRE	NW2,STSD11,T0.6,-,-,PLATINUM INOX,DRAWER	1	RD162
1-3	DA97-06712A	ASSY CAP DOOR FRE-LOW	NW2,-,-,-,DRAWING,CREAMY STS,SC-07009R	1	
1-4	DA97-06713A	ASSY CAP DOOR FRE-UPP	NW2,-,-,-,EASYHANDLE,CREAMY STS,SC-07009R	1	
2	DA97-06694A	ASSY-GASKET DOOR FRE	NW2,SF-PVC,-,-	1	RD012
3	DA63-04451A	COVER HANDLE-FRE L	NW2,ABS,-,-,-,-,CREAMY STS,-	1	
4	DA63-04452A	COVER HANDLE-FRE R	NW2,ABS,-,-,-,-,CREAMY STS,-	1	
5	DA64-02638D	HANDLE BAR-FRE	NW2,AL,-,-,-,-,SNOW WHITE,SPRAY	1	
6	DA67-02067A	CAP-HANDLE FRE R	NW2,ABS,-,-,-,-,CREAMY STS,SC-07009R	1	RD153
7	DA67-02073A	CAP-HANDLE FRE L	NW2,ABS,-,-,-,-,CREAMY STS,SC-07009R	1	RD152
8	DA61-03153B	HANGER-RAIL FRONT L	AW-PJT,SECC1,T2.0,COOL-WHITE,-,-,RESTRIKING	1	RD092
9	DA61-03155B	HANGER-RAIL FRONT R	AW-PJT,SECC1,T2.0,COOL-WHITE,-,-,RESTRIKING	1	RD093
10	DA61-02904B	SUPPORT-DOOR POSITION,IN	AW-PJT,HIPS,-,-,-,-,NTR,-	2	RD086

EXPLODED VIEW & PARTS LIST

5-5) Disassembly of Refrigerator Door Left

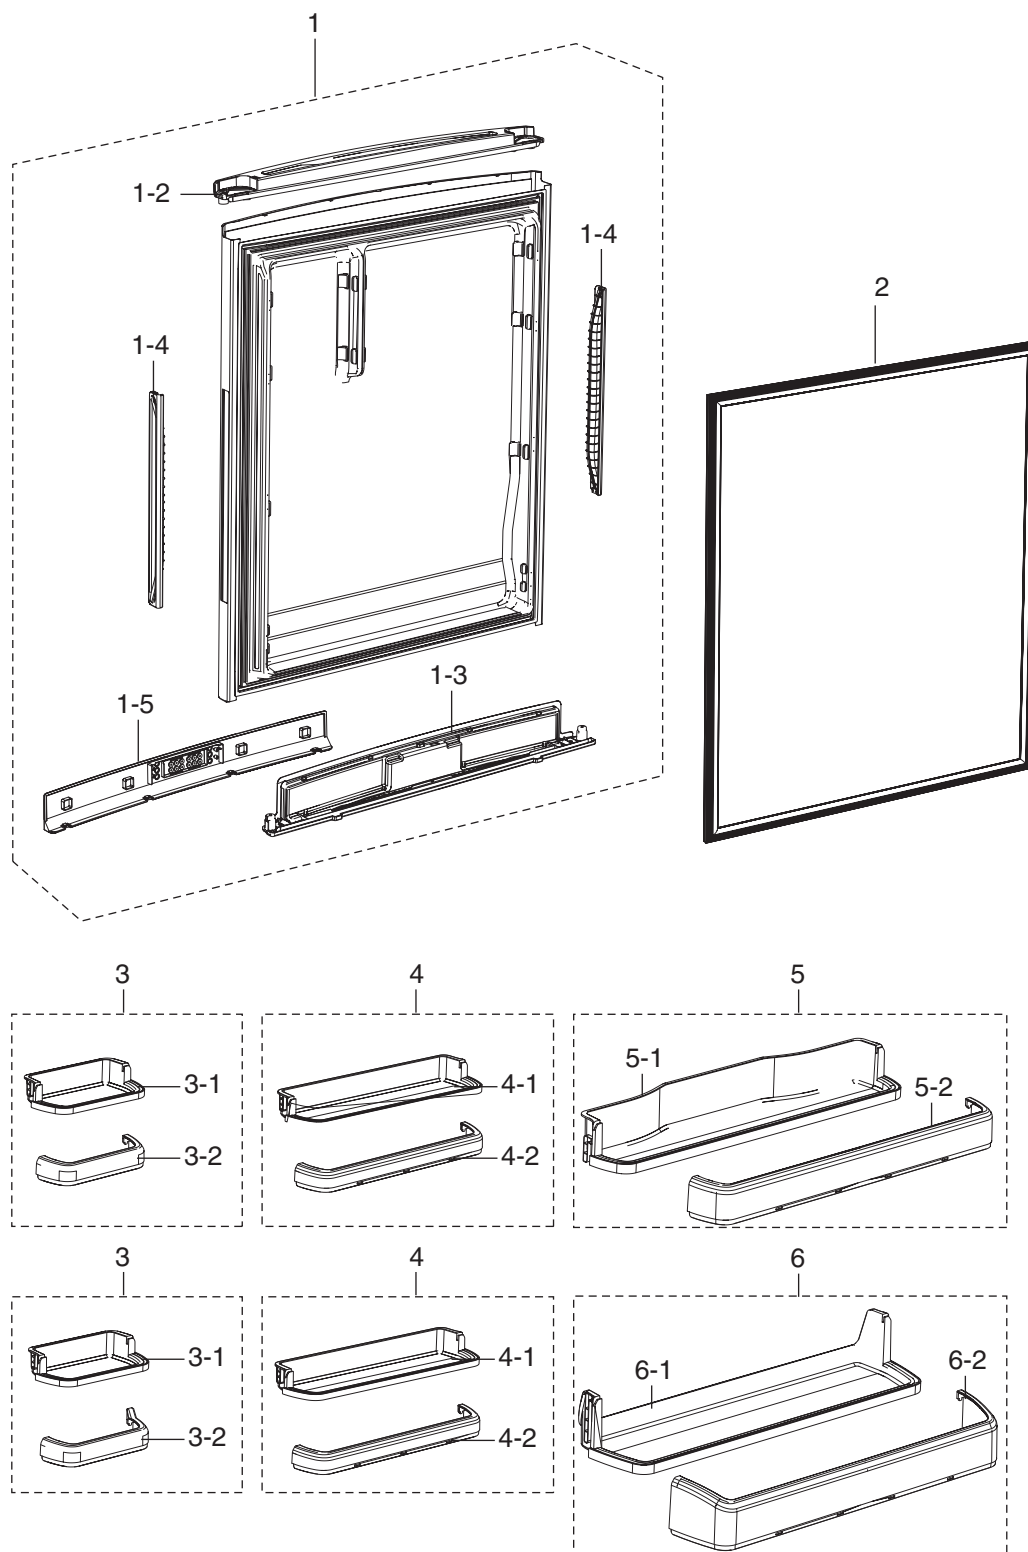

EXPLODED VIEW& PARTS LIST

■ Parts List of Refrigerator Door-Left (RB216AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA91-02758D	ASSY DOOR FOAM REF	NW2,PLATINUM INOX (DAC-GR0701TV),-,-,-,BASIC	1	RE001
1-1	DA64-02636A	PANEL DOOR-REF	NW2-PJT,ABS,-,-,-,-,COOL WHITE(SC-02740R),-	1	
1-2	DA97-06660A	ASSY CAP DOOR-REF UPP	NW2-PJT,-,-,-,-,Creamy STS(SC-07009R),-	1	
1-3	DA97-06658A	ASSY CAP DOOR-REF LOW	-,-,-,W40,1RL,-,-,-	1	
1-4	DA64-02633A	HANDLE REF-SIDE	NW2-PJT,ABS,-,-,-,-,Creamy STS(SC-07009R),-	2	
1-5	DA97-06661A	ASSY COVER CONTROL-FRONT	NW2-PJT,-,-,-,-,-,Creamy STS(SC-07009R),-	1	RE014
2	DA97-06693A	ASSY-GASKET DOOR REF	NW2-PJT,ABS,-,-,-,-,-,Creamy STS(SC-07009R),-	1	RE016
3	DA97-06719A	ASSY GUARD REF-UPP R	NW2-PJT,-,-,-,-,COOL WHT,-	2	
3-1	DA63-04468A	GUARD REF-UPP R	NW2-PJT,ABS,-,-,-,-,COOL WHT,-	1	
3-2	DA63-04472A	COVER-GUARD REF UPP R	NW2-PJT,-,-,-,-,-,COOL WHT,-	1	
4	DA97-06721A	ASSY GUARD REF-UPP L	NW2-PJT,-,-,-,-,-,COOL WHT,-	2	
4-1	DA63-04469A	GUARD REF-UPP L	NW2-PJT,ABS,-,-,-,-,-,COOL WHT,-	1	
4-2	DA63-04473A	COVER-GUARD REF UPP L	NW2-PJT,SAN,-,-,-,-,-,-	1	
5	DA97-06722A	ASSY GUARD REF-MID	NW2-PJT,-,-,-,-,-,COOL WHT,-	1	RE025
5-1	DA63-04470A	GUARD REF-MID	NW2-PJT,ABS,-,-,-,-,-,COOL WHT,-	1	RE057
5-2	DA63-04474A	COVER-GUARD REF MID	NW2-PJT,SAN,-,-,-,-,-,-	1	RE142
6	DA97-06724A	ASSY GUARD REF-LOW	NW2-PJT,-,-,-,-,-,COOL WHT,-	1	RE025
6-1	DA63-04471A	GUARD REF-LOW	NW2-PJT,ABS,-,-,-,-,-,COOL WHT,-	1	RE025
6-2	DA63-04475A	COVER-GUARD REF LOW	NW2-PJT,SAN,-,-,-,-,-,-	1	RE091


EXPLODED VIEW& PARTS LIST

■ Parts List of Refrigerator Door-Left (RB196AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA91-02758D	ASSY DOOR FOAM REF	NW2,PLATINUM INOX (DAC-GR0701TV),-,-,-,BASIC	1	RE001
1-1	DA64-02636A	PANEL DOOR-REF	NW2-PJT,ABS,-,-,-,COOL WHITE(SC-02740R),-	1	
1-2	DA97-06660A	ASSY CAP DOOR-REF UPP	NW2-PJT,-,-,-,Creamy STS(SC-07009R),-	1	
1-3	DA97-06658A	ASSY CAP DOOR-REF LOW	-,-,-,W40,1RL,-,-,-	1	
1-4	DA64-02633A	HANDLE REF-SIDE	NW2-PJT,ABS,-,-,-,Creamy STS(SC-07009R),-	2	
1-5	DA97-06661A	ASSY COVER CONTROL-FRONT	NW2-PJT,-,-,-,-,Creamy STS(SC-07009R),-	1	RE014
2	DA97-06693A	ASSY-GASKET DOOR REF	NW2-PJT,ABS,-,-,-,-,Creamy STS(SC-07009R),-	1	RE016
3	DA97-06719A	ASSY GUARD REF-UPP R	NW2-PJT,-,-,-,-,COOL WHT,-	2	
3-1	DA63-04468A	GUARD REF-UPP R	NW2-PJT,ABS,-,-,-,COOL WHT,-	1	
3-2	DA63-04472A	COVER-GUARD REF UPP R	NW2-PJT,-,-,-,-,COOL WHT,-	1	
4	DA97-06721A	ASSY GUARD REF-UPP L	NW2-PJT,-,-,-,-,COOL WHT,-	2	
4-1	DA63-04469A	GUARD REF-UPP L	NW2-PJT,ABS,-,-,-,COOL WHT,-	1	
4-2	DA63-04473A	COVER-GUARD REF UPP L	NW2-PJT,SAN,-,-,-,-,-	1	
5	DA97-06722A	ASSY GUARD REF-MID	NW2-PJT,-,-,-,-,COOL WHT,-	1	RE025
5-1	DA63-04470A	GUARD REF-MID	NW2-PJT,ABS,-,-,-,COOL WHT,-	1	RE057
5-2	DA63-04474A	COVER-GUARD REF MID	NW2-PJT,SAN,-,-,-,-,-	1	RE142
6	DA97-06724A	ASSY GUARD REF-LOW	NW2-PJT,-,-,-,-,COOL WHT,-	1	RE025
6-1	DA63-04471A	GUARD REF-LOW	NW2-PJT,ABS,-,-,-,COOL WHT,-	1	RE025
6-2	DA63-04475A	COVER-GUARD REF LOW	NW2-PJT,SAN,-,-,-,-,-	1	RE091

5 . EXPLODED VIEW& PARTS LIST

5-1) Freezer

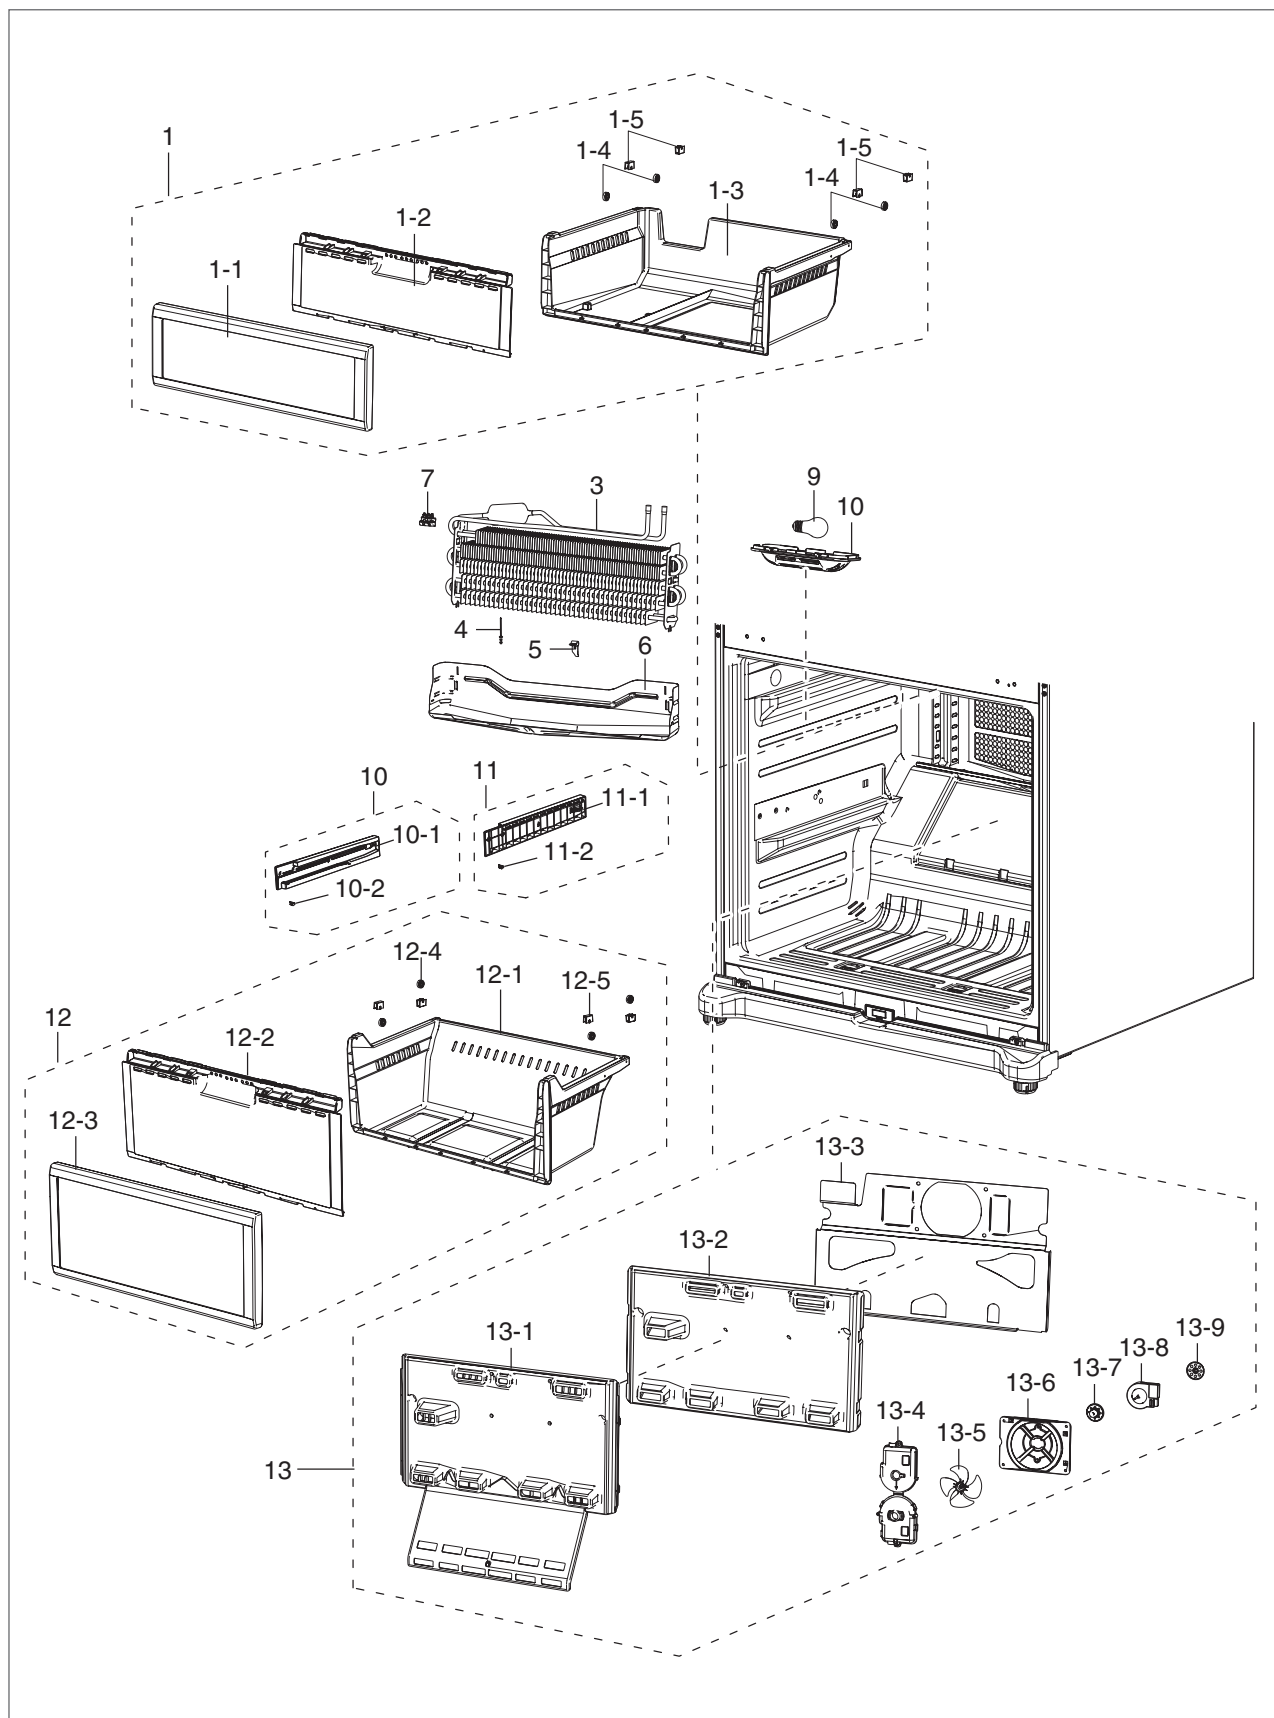

EXPLODED VIEW& PARTS LIST

■ Parts List of Freezer (RB214AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA97-06669A	ASSY TRAY-FRE UPP	NW2-PJT,-,-,-,21CU ft	1	RI242
1-1	DA63-04455A	COVER-TRAY FRE UPP A	NW2-PJT,HIPS,-,-,-,-,COOL WHT,-	1	RI064
1-2	DA63-04456A	COVER-TRAY FRE UPP B	NW2-PJT,GPPS,-,-,-,-,-	1	RI062
1-3	DA63-04457A	TRAY-FRE UPP	NW2-PJT,HIPS,-,-,-,-,COOL WHT,21INCH	1	RI064
1-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-,	4	RW648
1-5	DA71-20145A	FIXER-ROLLER	61BU	4	RH029
2	DA97-06657A	ASSY COVER-EVAP FRE	NW2-PJT,-,-,-,-,-,-	1	RF005
2-1	DA63-04444A	COVER-EVAP FRE	NW2-PJT,PP,-,-,-,-,COOL WHT,-	1	RF005
2-2	DA62-01942A	INSULATION-EVAP FRE	NW2-PJT,FOAM-PS,-,-,-,-,-	1	RI232
2-3	DA61-04461A	PLATE-INS EVAP FRE	NW2-PJT,GALVALUME,T0.3,-,-,-,-	1	RF092
2-4	DA63-01809A	COVER MOTOR-BLDC	BLDC-NEW,PP,NTR,-,-,-,-,BJ-730	1	RF083
2-5	DA31-00124A	FAN-AX100W4CC-T1	-,TD-PJT,ABS,-,-	1	RI085
2-6	DA61-03183A	CASE-MOTOR FRE	AW-PJT,BUBBLE PP,-,-,-,NTR,-	1	RF120
2-7	DA63-01808A	GROMMET-MOTOR,FRONT	BLDC,NBR,BLACK,-,-,-,-,H20	1	RO137
2-8	DA31-00146H	MOTOR BLDC	-,2950,-,DC12V,150mA,-,-,2.1W,-,-,-,-,-	1	RI089
2-9	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138
3	DA96-00480A	ASSY EVAP-FRE	NW2-PJT,-,-,-,-,-,115V/240W,-	1	RF011
4	DA60-90005A	RIVET-AVEX	AL,D3.2,L9.83,-,-	1	
5	DA61-02901A	FIXER-SENSOR EVAP	CORE-PJT,PP,-,NTR,-	1	RI157
6	DA61-04462A	PLATE-DRAIN FRE	NW2-PJT,GALVANUME,T0.3,-,516,-,-	1	RF026
7	DA47-00243C	THERMO BIMETAL-PROTECTOR	AW-PJT(R),BT-121-M, PW-5M1N	1	RI074
8	DA63-04296A	COVER LAMP-FRE	AW2,PC,-,-,-,-,Transparent,-	1	RF031
9	4713-001206	LAMP-INCANDESCENT	120V,340mA,40W,FROST,-,-,-	1	RI081
10	DA97-06667A	ASSY RAIL-FRE LOW R	NW2-PJT,-,-,-,-,21INCH	1	
10-1	DA61-04482A	RAIL-FRE LOW R	NW2-PJT,ABS,-,-,-,COOL WHT,21INCH	1	RF171
10-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,RAIL	1	RW374
11	DA97-06668A	ASSY RAIL-FRE LOW L	NW2-PJT,-,-,-,-,21INCH	1	
11-1	DA61-04481A	RAIL-FRE LOW L	NW2-PJT,ABS,-,-,-,COOL WHT,21INCH	1	RF085
11-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,RAIL	1	RW374
12	DA97-06671A	ASSY TRAY-FRE LOW	NW2-PJT,-,-,-,-,21CU ft	1	RI057
12-1	DA63-04459A	TRAY-FRE LOW	NW2-PJT,HIPS,-,-,-,-,COOL WHT,21INCH	1	RI057
12-2	DA63-04460A	COVER-TRAY FRE LOW B	NW2-PJT,GPPS,-,-,-,-,-	1	
12-3	DA63-04461A	COVER-TRAY FRE LOW A	NW2-PJT,HIPS,-,-,-,-,COOL WHT,-	1	
12-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-,	4	RW648
12-5	DA71-20145A	FIXER-ROLLER	-,PA,-,-	4	RH029


EXPLODED VIEW& PARTS LIST

■ Parts List of Freezer (RB194AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA97-06670A	ASSY TRAY-FRE UPP	NW2-PJT,-,-,-,19CU ft	1	RI242
1-1	DA63-04455A	COVER-TRAY FRE UPP A	NW2-PJT,HIPS,-,-,-,-,COOL WHT,-	1	RI064
1-2	DA63-04456A	COVER-TRAY FRE UPP B	NW2-PJT,GPPS,-,-,-,-,-	1	RI062
1-3	DA63-04450A	TRAY-FRE UPP	NW2-PJT,HIPS,-,-,-,-,COOL WHITE,19INCH	1	RF002
1-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-,	4	RW648
1-5	DA71-20145A	FIXER-ROLLER	61BU	4	RH029
2	DA97-06657A	ASSY COVER-EVAP FRE	NW2-PJT,-,-,-,-,-,-	1	RF005
2-1	DA63-04444A	COVER-EVAP FRE	NW2-PJT,PP,-,-,-,-,COOL WHT,-	1	RF005
2-2	DA62-01942A	INSULATION-EVAP FRE	NW2-PJT,FOAM-PS,-,-,-,-,-,-	1	RI232
2-3	DA61-04461A	PLATE-INS EVAP FRE	NW2-PJT,GALVALUME,T0.3,-,-,-,-	1	RF092
2-4	DA63-01809A	COVER MOTOR-BLDC	BLDC-NEW,PP,NTR,-,-,-,-,BJ-730	1	RF083
2-5	DA31-00124A	FAN-AX100W4CC-T1	-,TD-PJT,ABS,-,-	1	RI085
2-6	DA61-03183A	CASE-MOTOR FRE	AW-PJT,BUBBLE PP,-,-,-,NTR,-	1	RF120
2-7	DA63-01808A	GROMMET-MOTOR,FRONT	BLDC,NBR,BLACK,-,-,-,-,H20	1	RO137
2-8	DA31-00146H	MOTOR BLDC	-,2950,-,DC12V,150mA,-,-,2.1W,-,-,-,-,-	1	RI089
2-9	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDCNW2-PJT,-,-,-	1	RO138
3	DA96-00480A	ASSY EVAP-FRE	,-,-,-,115V/240W,-	1	RF011
4	DA60-90005A	RIVET-AVEX	AL,D3.2,L9.83,-,-	1	
5	DA61-02901A	FIXER-SENSOR EVAP	CORE-PJT,PP,-,-,NTR,-	1	RI157
6	DA61-04462A	PLATE-DRAIN FRE	NW2-PJT,GALVANUME,T0.3,-,516,-,-	1	RF026
7	DA47-00243C	THERMO BIMETAL-PROTECTOR	AW-PJT(R),BT-121-M, PW-5M1N	1	RI074
8	DA63-04296A	COVER LAMP-FRE	AW2,PC,-,-,-,-,Transparent,-	1	RF031
9	4713-001206	LAMP-INCANDESCENT	120V,340mA,40W,FROST,-,-,-	1	RI081
10	DA97-06666A	ASSY RAIL-FRE LOW R	NW2-PJT,-,-,-,-,19INCH	1	
10-1	DA61-04483A	RAIL-FRE LOW R	W2-PJT,ABS,-,-,-,COOL WHT,19INCH	1	RF171
10-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,-,RAIL	1	RW374
11	DA97-06665A	ASSY RAIL-FRE LOW L	NW2-PJT,-,-,-,-,19INCH	1	
11-1	DA61-04484A	RAIL-FRE LOW L	NW2-PJT,ABS,-,-,-,COOL WHT,19INCH	1	RF085
11-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,-,RAIL	1	RW374
12	DA97-06671A	ASSY TRAY-FRE LOW	NW2-PJT,-,-,-,-,19CU ft	1	
12-1	DA63-04458A	TRAY-FRE LOW	NW2-PJT,HIPS,-,-,-,-,COOL WHT,19INCH	1	RI057
12-2	DA63-04460A	COVER-TRAY FRE LOW B	NW2-PJT,GPPS,-,-,-,-,-	1	
12-3	DA63-04461A	COVER-TRAY FRE LOW A	NW2-PJT,HIPS,-,-,-,-,COOL WHT,-	1	
12-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-,	4	RW648
12-5	DA71-20145A	FIXER-ROLLER	-,PA,-,-,-	4	RH029

EXPLODED VIEW & PARTS LIST

5-2) Refrigerator

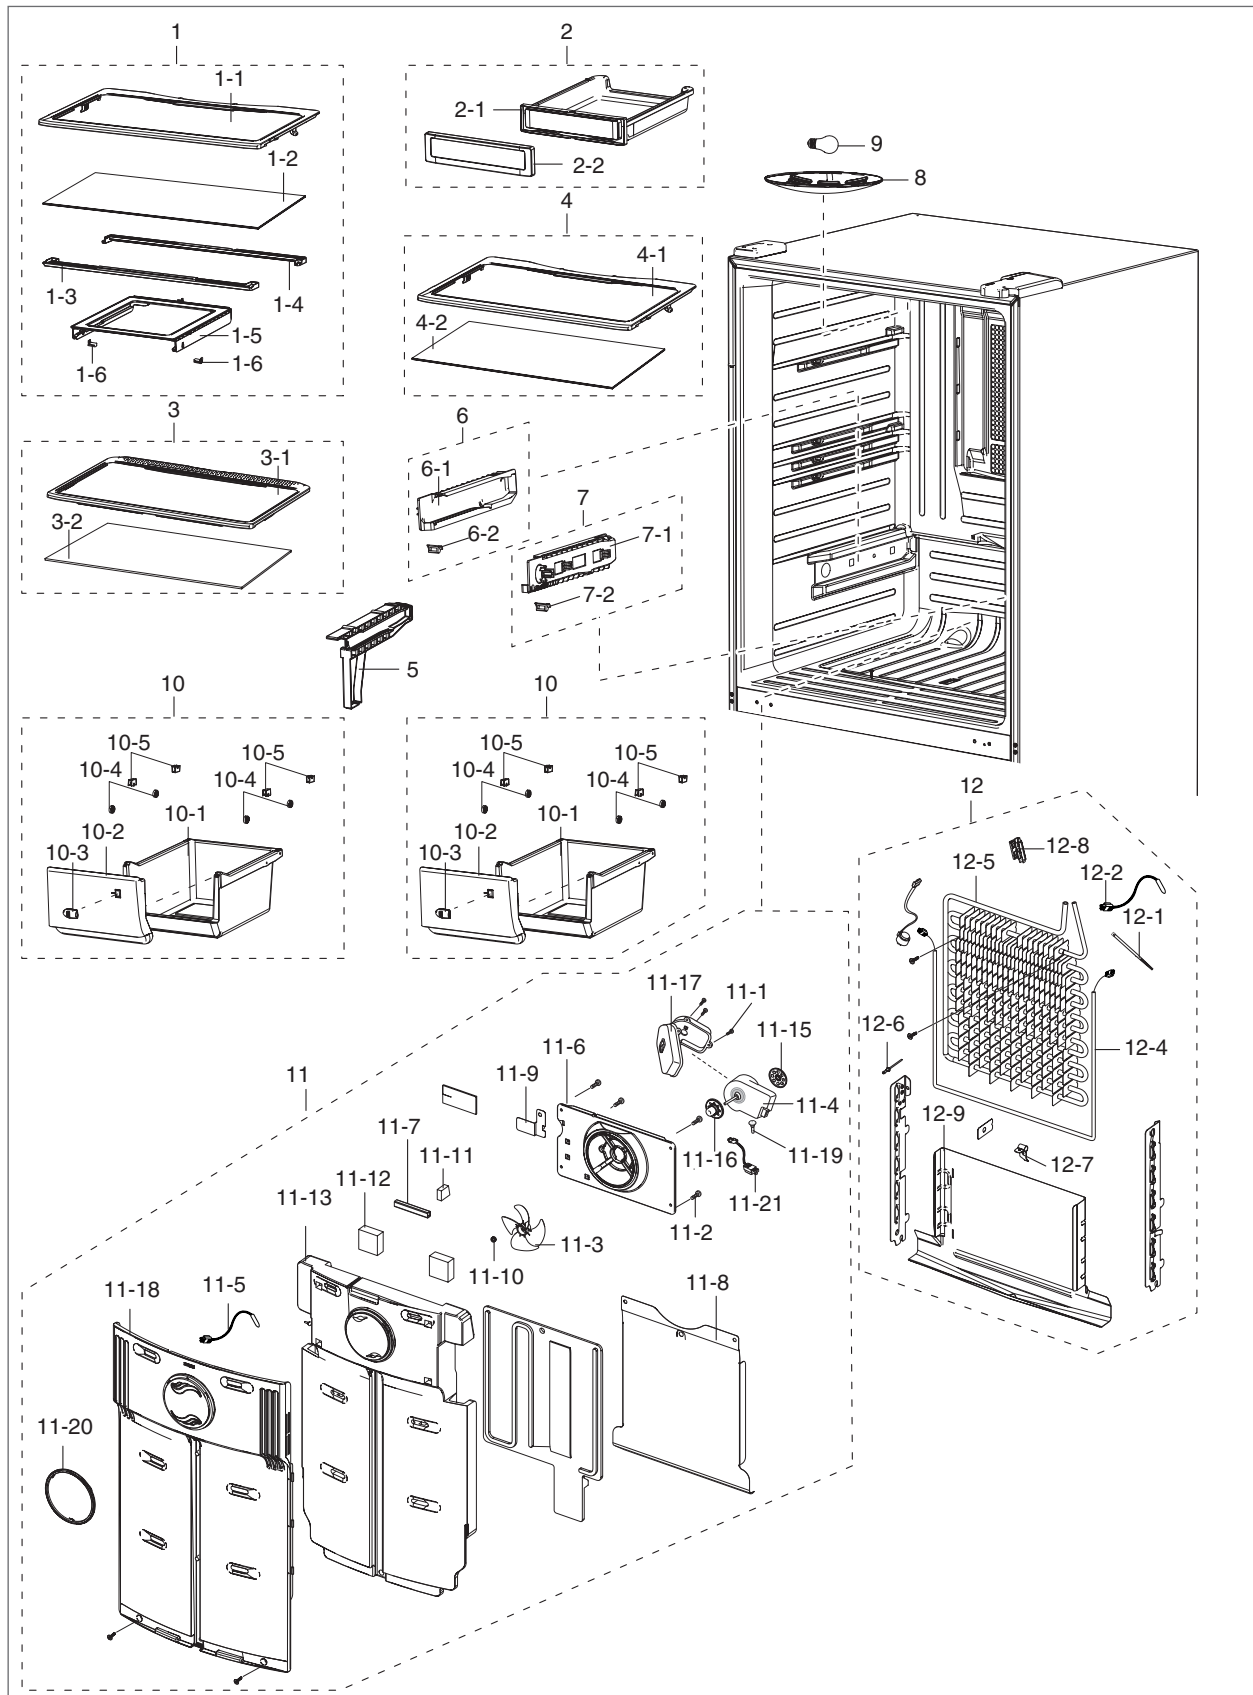

EXPLODED VIEW& PARTS LIST

■ Parts List of Refrigerator (RB214AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA97-06686A	ASSY SHELF-REF UPP	NW2,19cu.ft	1	RI041
1-1	DA64-02645A	TRIM SHELF-REF	NW2,HIPS,-,-,COOL WHITE,21cu.ft	1	RI079
1-2	DA64-02647A	GLASS-SHELF	NW2,GLASS,T4.0,-,-,-,-	1	RI037
1-3	DA61-04511A	SUPPORT-GUIDE RAIL FRONT	NW2,HIPS,-,-,COOL WHITE,-	1	
1-4	DA61-04510A	SUPPORT-GUIDE RAIL REAR	NW2,HIPS,-,-,COOL WHITE,-	1	
1-5	DA61-04505A	GUIDE-RAIL	NW2,HIPS,-,-,COOL WHITE,-	1	
1-6	DA63-00202A	GROMMET-RAIL	-,NY-6,-,-,-,-,-	2	RI088
2	DA97-06674A	ASSY TRAY-CHILLED ROOM	NW2,-,-,-,19cu.ft	1	RI018
2-1	DA63-04464A	TRAY CHIL ROOM	NW2,GPPS,-,-,-,-,-	1	RI018
2-2	DA63-04465A	COVER-TRAY CHIL ROOM	NW2,HIPS,-,-,-,COOL WHITE,-	1	
3	DA97-06675A	ASSY SHELF-TRIM REF MID	NW2,-	1	
3-1	DA64-02645A	TRIM SHELF-REF	NW2,HIPS,-,-,COOL WHITE,21cu.ft	1	RI079
3-2	DA64-02647A	GLASS-SHELF	NW2,GLASS,T4.0,-,-,-,-	1	RI037
4	DA97-00663H	ASSY COVER-VEG	W2-PJT(55), ABS+SHELF,GLASS(T5.0),cool white	1	RI997
4-1	DA64-00448B	TRIM-COVER VEG	W2-PJT(55),ABS,-,T2.5,L403,W717,cool white	1	RI091
4-2	DA67-01807H	SHELF-GLASS	W2-PJT(55), GLASS,T5,W708.5,L346,-,COVER-VEG	1	RF183
5	DA61-00760B	RAIL-VEG, MID	W2-PJT(55),ABS,T2.5,-,-,COOL-WHITE,SC-02740R	1	RI030
6	DA97-00103N	ASSY RAIL-VEG, L	W2-PJT,ABS,L341.5,SC-02740R,cool white,-	1	RI028
6-1	DA61-60126E	RAIL-VEG	W2-PJT,ABS,T3.0,-,LEFT,COOL-WHITE,SC-02740R	1	RI028
6-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,-,RAIL	1	RW374
7	DA97-00103P	ASSY RAIL-VEG, R	W2-PJT,ABS,L341.5,SC-02740R,cool white,-	1	RI029
7-1	DA61-60127E	RAIL-VEG	W2-PJT,ABS,T3.0,-,RIGHT,COOL-WHITE,SC-02740R	1	RI028
7-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,-,RAIL	1	RW374
8	DA63-02799A	COVER LAMP-REF	W2-05,PC,-,-,-,-,-,LOW'S	1	
9	4713-001206	LAMP-INCANDESCENT	120V,340mA,40W,FROST,-,-,-	1	RI081
10	DA97-06700A	ASSY CASE-VEG REF	NW2-PJT,-,-,-,-,-	2	RI999
10-1	DA61-00762A	CASE-VEG,REF	W2-PJT(55),HIPS,-,-,WHITE,HG-1760	1	RI999
10-2	DA63-04445A	COVER-VEG REF	NW2-PJT,SAN,-,-,-,-,-,NATURAL,-	1	RI010
10-3	DA64-00656A	KNOB-HUMIDITY	W2-PJT,ABS,-,-,-,W9540,-,BEST BYE	1	RW508
10-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-,	4	RW648
10-5	DA71-20145A	FIXER-ROLLER	-,PA,-,-,-	4	RH029
11	DA96-00365E	ASSY EVAP-REF	AW-PJT(265,266),-,-,-,115V/120W,-,-,-,-	1	
11-1	6002-000213	SCREW-TAPPING	TH,+,-,1,M4,L12,ZPC(WHT),SWRCH18A,-	3	RS047
11-2	6002-000215	SCREW-TAPPING	TH,+,-,1,M4.0,L16,ZPC(WHT),SWRCH18A,-	4	RS080
11-3	DA31-00124A	FAN-AX100W4CC-T1	-,TD-PJT,ABS,-,-	1	RI085
11-4	DA31-00146H	MOTOR BLDC	2950,-,DC12V,150mA,-,-,2.1W,-,-,-,-,-	1	RI089
11-5	DA32-10105X	SENSOR TEMP	PX-41C,QUEEN PJT,-10,5V,-,-,F-SENSOR,YELLOW	1	RQ684
11-6	DA61-03181A	CASE-MOTOR REF	AW-PJT,BUBBLE PP,-,-,-,NTR,-	1	RF121
11-7	DA61-03182A	GUIDE-INS EVAP REF	AW-PJT,ABS,-,-,-,NTR,-	1	RI210
11-8	DA61-03186A	PLATE-INS EVAP REF	AW-PJT,GALVANUME,T0.4,-,-,-,-	1	
11-9	DA61-03599A	PLATE-HOUSING REF	AW-PJT,GALVALUME,T0.3,-,-,-,-	1	RI307
11-10	DA61-20128A	SPRING ETC-FAN	-,STS304,PI7.8,-,OD1.0,-,-,-,-,FD	1	RW716
11-11	DA62-01383A	INSULATION-EVAP SUB	AW-PJT,FOAM-PS,-,-,-,-,-	1	RI232
11-12	DA62-01423A	INSULATION-EVAP DUCT	AW-PJT,FOAM-PS,T20,W44.5,L45,-,-,-,-	2	RI236
11-13	DA62-01941A	INSULATION-EVAP REF	NW2-PJT,FOAM-PS,-,-,-,-,-	1	RI231
11-14	DA62-01969A	INSULATION-EVAP REAR	NW2-PJT,FOAM-PS,-,-,-,-,-	1	RI233
11-15	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138
11-16	DA63-01808A	GROMMET-MOTOR,FRONT	BLDC,NBR,BLACK,-,-,-,-,H20	1	RO137
11-17	DA63-01809A	COVER MOTOR-BLDC	BLDC-NEW,PP,NTR,-,-,-,-,BJ-730	1	RF083
11-18	DA63-04439A	COVER-EVAP REF	NW2-PJT,PP,-,-,-,-,COOL WHT,-	1	RI024
11-19	DA63-40167A	GROMMET-COVER CHIL	T3.0,SILICON,-,-,-,-,-,NTR	1	RI087
11-20	DA64-02065A	TRIM-COVER EVAP REF	AW-PJT,ABS,-,-,-,COOL WHITE,-	1	RI241

EXPLODED VIEW& PARTS LIST

■ Parts List of Refrigerator (RB214AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
11-21	DA96-00042J	ASSY-HARNESS MOTOR	AW-PJT,R-Fan/ F-Fan	1	
12	DA96-00365E	ASSY EVAP-REF	AW-PJT(265,266),-, -, -, 115V/120W, -, -, -, -	4	
12-1	6501-000123	CABLE TIE	DACT-140, -, W3.6, L146, NTR, NYLON66	1	RO101
12-2	DA32-00027B	SENSOR TEMP	502AT, AW-PJT, -40~110°, 5V, -, -, R-DEF-SENSOR	1	
12-3	DA47-00243S	THERMO BIMETAL-PROTECTOR	AW-PJT(R), BT-121-M, PW-5M1N, 125 / 250V, 10	1	
12-4	DA47-00244D	HEATER-METAL SHEATH	AW-PJT, -, 120W, -, 115V, 110.2 β Y, R-ROOM	1	
12-5	DA59-00357B	EVAP REF	-, -, -, -, -, -, AW-PJT, -	1	RI016
12-6	DA60-90005A	RIVET-AVEX	AL, D3.2, L9.83, -, -	1	
12-7	DA61-03644A	PLATE-EVAP HEATER	AW-PJT, AL, T0.7, -, -, -, -	1	RF170
12-8	DA61-03683A	FIXER-SENSER	AW-PJT, ABS, -, NTR, -	1	RM017
12-9	DA61-04148A	PLATE-DRAIN REF	AW-PJT('08), GALVANUME, T0.3, -, -, -, -		RF026

EXPLODED VIEW& PARTS LIST

■ Parts List of Refrigerator (RB194AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA97-06685A	ASSY SHELF-REF UPP	NW2,19cu.ft	1	RI041
1-1	DA64-02644A	TRIM SHELF-REF	NW2,HIPS,-,-,COOL WHITE,19cu.ft	1	RI079
1-2	DA64-02646A	GLASS-SHELF	NW2,GLASS,-,-,-,19cu.ft	1	RI037
1-3	DA61-04511A	SUPPORT-GUIDE RAIL FRONT	NW2,HIPS,-,-,COOL WHITE,-	1	
1-4	DA61-04510A	SUPPORT-GUIDE RAIL REAR	NW2,HIPS,-,-,COOL WHITE,-	1	
1-5	DA61-04503A	GUIDE-RAIL	NW2,HIPS,-,-,COOLWHITE,19cu.ft	1	
1-6	DA63-00202A	GROMMET-RAIL	-,NY-6,-,-,-,-	2	RI088
2	DA97-06677A	ASSY TRAY-CHILLED ROOM	NW2,-,-,-,19cu.ft	1	RI018
2-1	DA63-04463A	TRAY CHIL ROOM	NW2,GPPS,-,-,-,-,19cu.ft	1	RI018
2-2	DA63-04465A	COVER-TRAY CHIL ROOM	NW2,HIPS,-,-,-,-,COOL WHITE,-	1	
3	DA97-06687A	ASSY SHELF-TRIM REF MID	NW2,19cu.ft	1	RI040
3-1	DA64-02644A	TRIM SHELF-REF	NW2,HIPS,-,-,COOL WHITE,19cu.ft	1	RI079
3-2	DA64-02646A	GLASS-SHELF	NW2,GLASS,-,-,-,-,19cu.ft	1	RI037
4	DA97-00663G	ASSY COVER-VEG	W2-PJT, ABS+SHELF,GLASS(T5.0), SC-02740R, cool white	1	RI997
4-1	DA64-00449B	TRIM-COVER VEG	W2-PJT,ABS,-,T2.5,SC-02740R,cool white,-	1	RI091
4-2	DA67-01807G	SHELF-GLASS	W2-PJT(50), GLASS, T5, W708.5, L296,-, COVER-VEG(50)	1	RF183
5	DA61-00761B	RAIL-VEG, MID	W2-PJT,ABS,T2.5,-,-,COOL-WHITE,SC-02740R	1	RI030
6	DA97-00103N	ASSY RAIL-VEG, L	W2-PJT,ABS,L341.5,SC-02740R,cool white,-	1	RI028
6-1	DA61-60126E	RAIL-VEG	W2-PJT,ABS,T3.0,-,LEFT,COOL-WHITE,SC-02740R	1	RI028
6-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,RAIL	1	RW374
7	DA97-00103P	ASSY RAIL-VEG, R	W2-PJT,ABS,L341.5,SC-02740R,cool white,-	1	RI029
7-1	DA61-60127E	RAIL-VEG	W2-PJT,ABS,T3.0,-,RIGHT,COOL-WHITE,SC-02740R	1	RI028
7-2	DA63-40006A	GROMMET	RAIL,NY-6,-,-,-,-,RAIL	1	RW374
8	DA63-02799A	COVER LAMP-REF	W2-05,PC,-,-,-,-,LOW'S	1	
9	4713-001206	LAMP-INCANDESCENT	120V,340mA,40W,FROST,-,-,-	1	RI081
10	DA97-06725A	ASSY CASE-VEG REF	NW2,-,-,-,19cu.ft,-	2	RI998
10-1	DA61-00759B	CASE-VEG,REF	W2-PJT,HIPS,-,SC-02740R,-,COOL-WHITE,-	1	RI998
10-2	DA63-04445A	COVER-VEG REF	NW2-PJT,SAN,-,-,-,-,NATURAL,-	1	RI010
10-3	DA64-00656A	KNOB-HUMIDITY	W2-PJT,ABS,-,-,-,-,W9540,-,BEST BYE	1	RW508
10-4	DA66-10104A	ROLLER-FRE	POM,-,-,D22,-,-,	4	RW648
10-5	DA71-20145A	FIXER-ROLLER	-,PA,-,-,	4	RH029
11	DA96-00365E	ASSY EVAP-REF	AW-PJT(265,266),-,-,-,115V/120W,-,-,-,-	1	
11-1	6002-000213	SCREW-TAPPING	TH,+,-,1,M4,L12,ZPC(WHT),SWRCH18A,-	3	RS047
11-2	6002-000215	SCREW-TAPPING	TH,+,-,1,M4.0,L16,ZPC(WHT),SWRCH18A,-	4	RS080
11-3	DA31-00124A	FAN-AX100W4CC-T1	-,TD-PJT,ABS,-,-	1	RI085
11-4	DA31-00146H	MOTOR BLDC	2950,-,DC12V,150mA,-,-,2.1W,-,-,-,-,-	1	RI089
11-5	DA32-10105X	SENSOR TEMP	PX-41C,QUEEN PJT,-10,5V,-,-,F-SENSOR,YELLOW	1	RQ684
11-6	DA61-03181A	CASE-MOTOR REF	AW-PJT,BUBBLE PP,-,-,-,NTR,-	1	RF121
11-7	DA61-03182A	GUIDE-INS EVAP REF	AW-PJT,ABS,-,-,-,NTR,-	1	RI210
11-8	DA61-03186A	PLATE-INS EVAP REF	AW-PJT,GALVANUME,T0.4,-,-,-,-	1	
11-9	DA61-03599A	PLATE-HOUSING REF	AW-PJT,GALVALUME,T0.3,-,-,-,-	1	RI307
11-10	DA61-20128A	SPRING ETC-FAN	-,STS304,PI7.8,-,OD1.0,-,-,-,-,FD	1	RW716
11-11	DA62-01383A	INSULATION-EVAP SUB	AW-PJT,FOAM-PS,-,-,-,-,-	1	RI232
11-12	DA62-01423A	INSULATION-EVAP DUCT	AW-PJT,FOAM-PS,T20,W44.5,L45,-,-,-,-	2	RI236
11-13	DA62-01941A	INSULATION-EVAP REF	NW2-PJT,FOAM-PS,-,-,-,-,-	1	RI231
11-14	DA62-01969A	INSULATION-EVAP REAR	NW2-PJT,FOAM-PS,-,-,-,-,-	1	RI233
11-15	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138
11-16	DA63-01808A	GROMMET-MOTOR,FRONT	BLDC,NBR,BLACK,-,-,-,-,H20	1	RO137
11-17	DA63-01809A	COVER MOTOR-BLDC	BLDC-NEW,PP,NTR,-,-,-,-,BJ-730	1	RF083
11-18	DA63-04439A	COVER-EVAP REF	NW2-PJT,PP,-,-,-,-,COOL WHT,-	1	RI024
11-19	DA63-40167A	GROMMET-COVER CHIL	T3.0,SILICON,-,-,-,-,-,NTR	1	RI087
11-20	DA64-02065A	TRIM-COVER EVAP REF	AW-PJT,ABS,-,-,-,-,COOL WHITE,-	1	RI241


EXPLODED VIEW& PARTS LIST

■ Parts List of Refrigerator (RB194AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
11-21	DA96-00042J	ASSY-HARNESS MOTOR	AW-PJT,R-Fan/ F-Fan	1	
12	DA96-00365E	ASSY EVAP-REF	AW-PJT(265,266),-, -, -, 115V/120W, -, -, -, -	4	
12-1	6501-000123	CABLE TIE	DACT-140, -, W3.6, L146, NTR, NYLON66	1	RO101
12-2	DA32-00027B	SENSOR TEMP	502AT, AW-PJT, -40~110°, 5V, -, -, R-DEF-SENSOR	1	
12-3	DA47-00243S	THERMO BIMETAL-PROTECTOR	AW-PJT(R), BT-121-M, PW-5M1N, 125 / 250V, 10	1	
12-4	DA47-00244D	HEATER-METAL SHEATH	AW-PJT, -, 120W, -, 115V, 110.2 β Y, R-ROOM	1	
12-5	DA59-00357B	EVAP REF	-, -, -, -, -, -, AW-PJT, -	1	RI016
12-6	DA60-90005A	RIVET-AVEX	AL, D3.2, L9.83, -, -	1	
12-7	DA61-03644A	PLATE-EVAP HEATER	AW-PJT, AL, T0.7, -, -, -, -	1	RF170
12-8	DA61-03683A	FIXER-SENSER	AW-PJT, ABS, -, NTR, -	1	RM017
12-9	DA61-04148A	PLATE-DRAIN REF	AW-PJT('08), GALVANUME, T0.3, -, -, -, -		RF026

EXPLODED VIEW & PARTS LIST

5-3) Cabinet

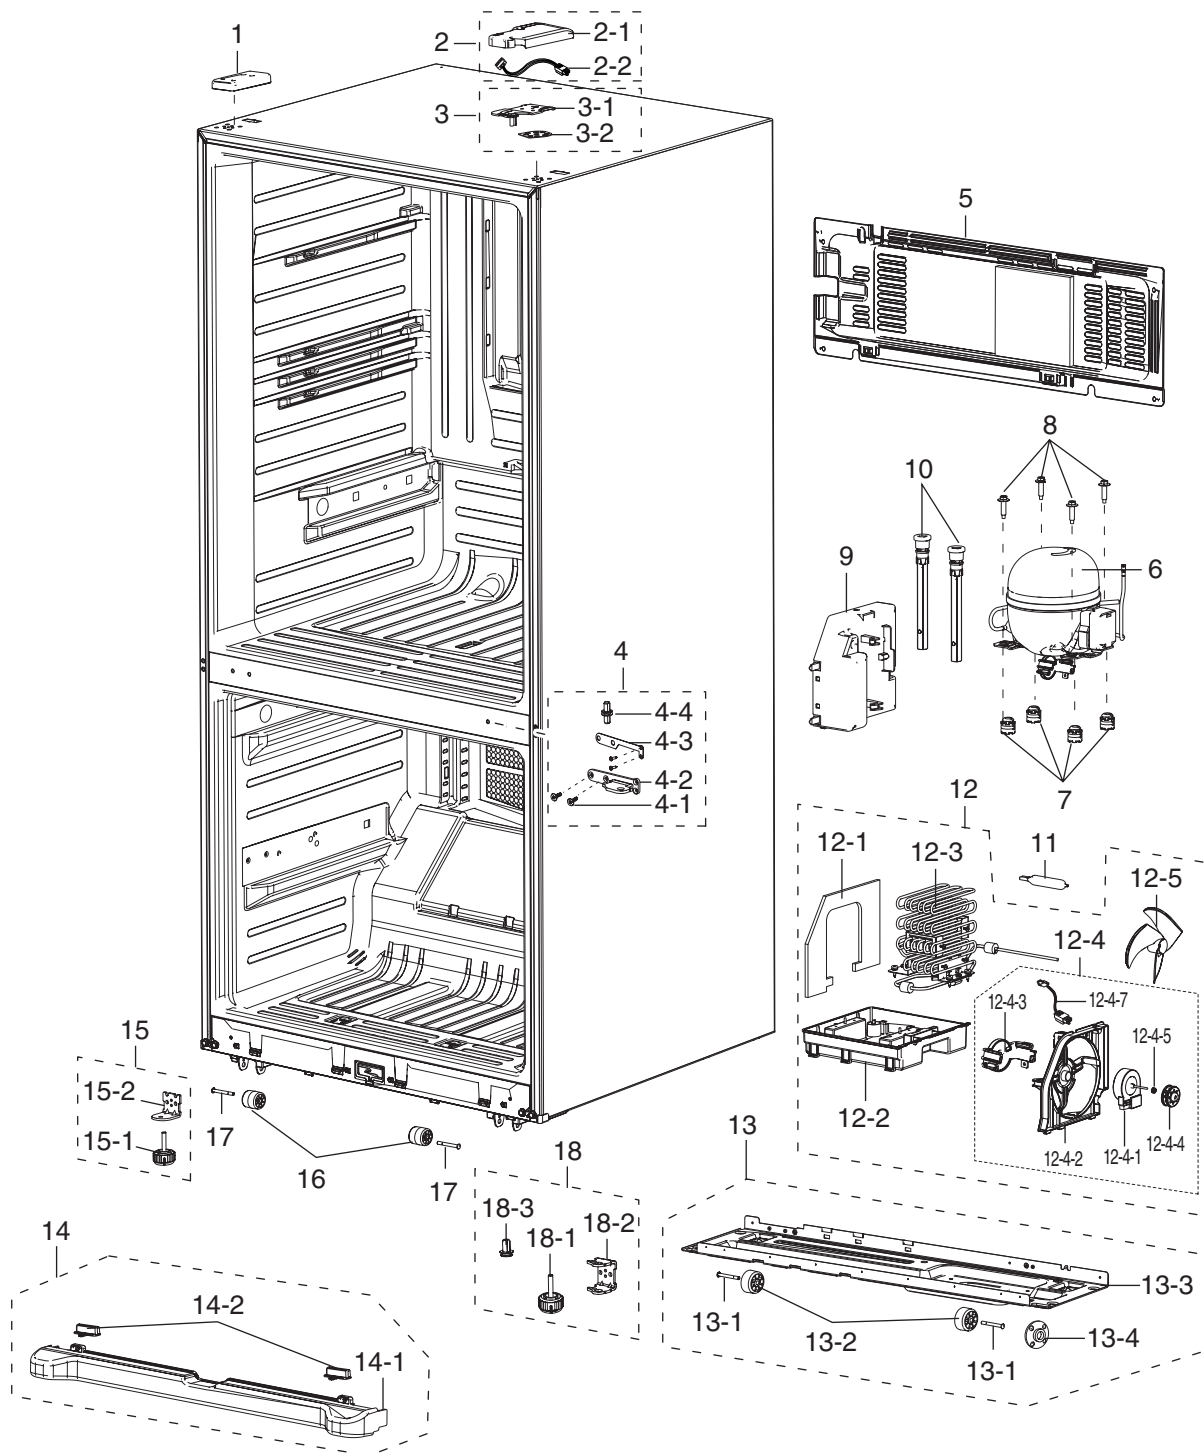

EXPLODED VIEW& PARTS LIST

■ Parts List of Cabinet (RB214AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA63-02520A	COVER HINGE-UPP L	W2-PJT(05),ABS,-,-,-,-,SC-00477R,HG-0760H	1	
2	DA97-06705A	ASSY COVER HINGE-UPP R	NW2,ABS,-,-,-,-,Creamy STS(SC-07009R),-	1	RO045
2-1	DA63-04441A	COVER HINGE-UPP R	NW2-PJT,ABS,T2.0,-,-,-,-,Creamy STS(SC-07009R),-	1	RO045
2-2	DA34-00043C	SWITCH REED-ASS'Y	200VDC,1.5A,-	1	RO150
3	DA97-06716A	ASSY HINGE UPP-R	NW2,T3.0,-,-,-,-	1	RO042
3-1	DA61-04476A	HINGE-UPP R	NW2-PJT,SHP1,T3.0,-,-,-,-	1	RO128
3-2	DA63-02527A	SHIM HINGE-UPP	W2-PJT(05),HIPS,T1.0,-,-,-,-	1	RO067
4	DA97-06701A	ASSY HINGE-MID	NW2,-,-,-,-,-	1	RO039
4-1	6009-001548	SCREW-SPECIAL	FH,HEX,-,M6,L20,ZPC3(WHT),SWRCH18(A),-,	2	RQ747
4-2	DA61-04433C	HINGE-MID R	NW2,SHP1,T4.5,-,-,-,Ni-Cr Plated,-,SWING Type	1	RO123
4-3	DA61-04433C	SHIM-HINGE MID	AW-PJT,RD-PVC,T1.0,-,-,-,-	1	RO123
4-4	DA66-00610A	SHAFT-HINGE	NW2,MSWR10,-,-,-,-	1	RC012
5	DA97-00408E	ASSY COVER-COMP	W2-05,-,T0.35,-,-,-,-,-	1	
6	MK162DL1U/E09	COMPRESSOR	6.15CC,115/127V~60HZ,RSCR	1	RH002
7	DA63-02017A	GROMMET COMP	QUEEN,EPDM,-,-,-,-,BLACK,-	4	RH015
8	DA60-20008A	BOLT-HEX	S25C,M6,-,L42.6,WHITE,-,ZPC	4	RW074
9	DA63-01866A	COVER RELAY	NORYL,T2.0,-,-,-,SSEC,BLACK,HOOK	1	RH004
10	DA97-04049A	ASSY CAP-DRAIN	EPEL,ASSY,-,-,L224.5,-,SOFT-PVC	2	RZ110
11	DA62-01514A	DRYER	C1220T,OD18.70,L114,-,-,-	1	RH014
12	DA97-06698A	ASSY TRAY-DRAIN WATER	NW2,-,-,-,-,-	1	RH003
12-1	DA62-00954A	SEAL-SUB COND	W2-05,FOAM-PE,-,T7,-,-,-	1	RH030
12-2	DA63-04466A	TRAY DRAIN-WATER	NW2,PP,-,-,-,-,NTR,-	1	RH003
12-3	DA97-02791B	ASSY PIPE-SUB COND	NW2-PJT,-	1	RW005
12-4	DA97-03145L	ASSY SUPPORT-CIRCUIT MOTOR	AW2-PJT,-,-,-,-,1550RPM,2.7W	1	RO132
12-4-1	DA31-00146B	MOTOR BLDC	DRCP5030LA,1560,-,DC12V,230mA,-,-,2.7W,ATOP	1	RI089
12-4-2	DA61-02349B	SUPPORT-CIRCUIT MOTOR	NEXT,ABS,-,-,-,NTR,-	1	RF033
12-4-3	DA61-02355B	BRACKET-CIRCUIT MOTOR	ABS,NEXT,-,-,-,NTR,-	1	RH039
12-4-4	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138
12-4-5	DA63-40167A	GROMMET-COVER CHIL	SILICON,T3.0,-,L16,-,-,BLACK,-	1	RI087
12-4-6	DA96-00042A	ASSY-HARNESS MOTOR	A-TOP UL(MOTOR),C-FAN,350MM	1	RI133
12-5	DA31-00010D	FAN-ASS'Y	ET,ZIPEL,ASSY,-,UNIT,-,150	1	RI085
13	DA97-06815A	ASSY CHASSIS COMP	NW2,T1.2,-,-,-,-	1	
13-1	DA60-90146A	PIN-CASTER	MSWR10,OD6.0,L40,ZPC2,SR-289-4	2	RH019
13-2	DA61-40126B	CASTER-REAR	REF-ALL,PP,-,-,PI 44,NTR,W22,-	2	RH011
13-3	DA64-02694A	CHASSIS COMP	NW2,SBHG1,T1.2,-,-,-,-	1	RO002
13-4	DA71-50240A	BRACKET-CABI	ALL,SBHG1,T1.6,-,-,-,-	1	
14	DA97-06673A	ASSY COVER LEG FRONT	NW2,-,-,-,-,-,CREAMY STS,-	1	
14-1	DA63-04462A	COVER LEG-FRONT	NW2,PP,-,-,-,-,CREAMY STS,-	1	RO003
14-2	DA67-02071A	CAP LEG FRONT	NW2,PP,-,-,-,CREAMY STS,-	2	
15	DA97-06688A	ASSY SUPPORT-FOOT FRONT	NW2,-,-,-,-,-	1	
15-1	DA61-00805D	FOOT-FRONT	AW2-PJT,PP+MSWR10,-,BLACK,-,-,-	1	RO001
15-2	DA61-04490A	SUPPORT-FOOT FRONT	NW2,SHP1,T4.0,-,-,-,-	1	RO158
16	DA61-00176A	CASTER-FRONT	PP,-,OD40,NTR,-,-	2	RH009
17	DA60-90124A	RIVET	MSWR10,OD6.0,-,-,L56,-,-,-	2	RH012
18	DA97-06706A	ASSY HINGE LOW	NW2,-,-,-,-,-	1	RO036
18-1	DA61-00805D	FOOT-FRONT	AW2-PJT,PP+MSWR10,-,BLACK,-,-,-	1	RO001
18-2	DA61-04488A	HINGE-LOW	NW2,SHP1,T4.0,-,-,-,-	1	RO036
18-3	DA66-00611A	SHAFT HINGE-MID	NW2,SM45C,-,-,-,-,DRAWER	1	
19	DA97-06707A	ASSY VALVE WATER-HOSE	NW2,DISP,-,-,-,-	1	


EXPLODED VIEW& PARTS LIST

■ Parts List of Cabinet (RB194AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA63-02520A	COVER HINGE-UPP L	W2-PJT(05),ABS,-,-,-,-,SC-00477R,HG-0760H	1	
2	DA97-06705A	ASSY COVER HINGE-UPP R	NW2,ABS,-,-,-,-,Creamy STS(SC-07009R),-	1	RO045
2-1	DA63-04441A	COVER HINGE-UPP R	NW2-PJT,ABS,T2.0,-,-,-,-,Creamy STS(SC-07009R),-	1	RO045
2-2	DA34-00043C	SWITCH REED-ASS'Y	200VDC,1.5A,-	1	RO150
3	DA97-06716A	ASSY HINGE UPP-R	NW2,T3.0,-,-,-,-	1	RO042
3-1	DA61-04476A	HINGE-UPP R	NW2-PJT,SHP1,T3.0,-,-,-,-	1	RO128
3-2	DA63-02527A	SHIM HINGE-UPP	W2-PJT(05),HIPS,T1.0,-,-,-,-	1	RO067
4	DA97-06701A	ASSY HINGE-MID	NW2,-,-,-,-,-	1	RO039
4-1	6009-001548	SCREW-SPECIAL	FH,HEX,-,M6,L20,ZPC3(WHT),SWRCH18(A),,-	2	RQ747
4-2	DA61-04433C	HINGE-MID R	NW2,SHP1,T4.5,-,-,-,Ni-Cr Plated,-,SWING Type	1	RO123
4-3	DA61-04433C	SHIM-HINGE MID	AW-PJT,RD-PVC,T1.0,-,-,-,-	1	RO123
4-4	DA66-00610A	SHAFT-HINGE	NW2,MSWR10,-,-,-,-	1	RC012
5	DA97-00408E	ASSY COVER-COMP	W2-05,-,T0.35,-,-,-,-,-	1	
6	MK162DL1U/E09	COMPRESSOR	6.15CC,115/127V~60HZ,RSCR	1	RH002
7	DA63-02017A	GROMMET COMP	QUEEN,EPDM,-,-,-,-,-,BLACK,-	4	RH015
8	DA60-20008A	BOLT-HEX	S25C,M6,-,-,L42.6,WHITE,-,ZPC	4	RW074
9	DA63-01866A	COVER RELAY	NORYL,T2.0,-,-,-,SSEC,BLACK,HOOK	1	RH004
10	DA97-04049A	ASSY CAP-DRAIN	EPEL,ASSY,-,-,L224.5,-,SOFT-PVC	2	RZ110
11	DA62-01514A	DRYER	C1220T,OD18.70,L114,-,-,-	1	RH014
12	DA97-06698A	ASSY TRAY-DRAIN WATER	NW2,-,-,-,-,-	1	RH003
12-1	DA62-00954A	SEAL-SUB COND	W2-05,FOAM-PE,-,T7,-,-,-	1	RH030
12-2	DA63-04466A	TRAY DRAIN-WATER	NW2,PP,-,-,-,-,NTR,-	1	RH003
12-3	DA97-02791B	ASSY PIPE-SUB COND	NW2-PJT,-	1	RW005
12-4	DA97-03145L	ASSY SUPPORT-CIRCUIT MOTOR	AW2-PJT,-,-,-,-,1550RPM,2.7W	1	RO132
12-4-1	DA31-00146B	MOTOR BLDC	DRCP5030LA,1560,-,DC12V,230mA,-,-,2.7W,ATOP	1	RI089
12-4-2	DA61-02349B	SUPPORT-CIRCUIT MOTOR	NEXT,ABS,-,-,-,-,NTR,-	1	RF033
12-4-3	DA61-02355B	BRACKET-CIRCUIT MOTOR	ABS,NEXT,-,-,-,-,NTR,-	1	RH039
12-4-4	DA63-01146A	GROMMET-MOTOR,REAR	A-TOP,NBR,-,-,-,ID6.5,OD42,BLK,BLDC	1	RO138
12-4-5	DA63-40167A	GROMMET-COVER CHIL	SILICON,T3.0,-,L16,-,-,BLACK,-	1	RI087
12-4-6	DA96-00042A	ASSY-HARNESS MOTOR	A-TOP UL(MOTOR),C-FAN,350MM	1	RI133
12-5	DA31-00010D	FAN-ASS'Y	ET,ZIPEL,ASSY,-,UNIT,-,150	1	RI085
13	DA97-06815A	ASSY CHASSIS COMP	NW2,T1.2,-,-,-,-	1	
13-1	DA60-90146A	PIN-CASTER	MSWR10,OD6.0,L40,ZPC2,SR-289-4	2	RH019
13-2	DA61-40126B	CASTER-REAR	REF-ALL,PP,-,PI 44,NTR,W22,-	2	RH011
13-3	DA64-02694A	CHASSIS COMP	NW2,SBHG1,T1.2,-,-,-,-	1	RO002
13-4	DA71-50240A	BRACKET-CABI	ALL,SBHG1,T1.6,-,-,-,-	1	
14	DA97-06673A	ASSY COVER LEG FRONT	NW2,-,-,-,-,-,CREAMY STS,-	1	
14-1	DA63-04462A	COVER LEG-FRONT	NW2,PP,-,-,-,-,CREAMY STS,-	1	RO003
14-2	DA67-02071A	CAP LEG FRONT	NW2,PP,-,-,-,CREAMY STS,-	2	
15	DA97-06688A	ASSY SUPPORT-FOOT FRONT	NW2,-,-,-,-,-	1	
15-1	DA61-00805D	FOOT-FRONT	AW2-PJT,PP+MSWR10,-,BLACK,-,-,-	1	RO001
15-2	DA61-04490A	SUPPORT-FOOT FRONT	NW2,SHP1,T4.0,-,-,-,-	1	RO158
16	DA61-00176A	CASTER-FRONT	PP,-,OD40,NTR,-,-	2	RH009
17	DA60-90124A	RIVET	MSWR10,OD6.0,-,-,L56,-,-,-	2	RH012
18	DA97-06706A	ASSY HINGE LOW	NW2,-,-,-,-,-	1	RO036
18-1	DA61-00805D	FOOT-FRONT	AW2-PJT,PP+MSWR10,-,BLACK,-,-,-	1	RO001
18-2	DA61-04488A	HINGE-LOW	NW2,SHP1,T4.0,-,-,-,-	1	RO036
18-3	DA66-00611A	SHAFT HINGE-MID	NW2,SM45C,-,-,-,-,DRAWER	1	
19	DA97-06707A	ASSY VALVE WATER-HOSE	NW2,DISP,-,-,-,-	1	

EXPLODED VIEW & PARTS LIST

5-4) Disassembly of Freezer Door

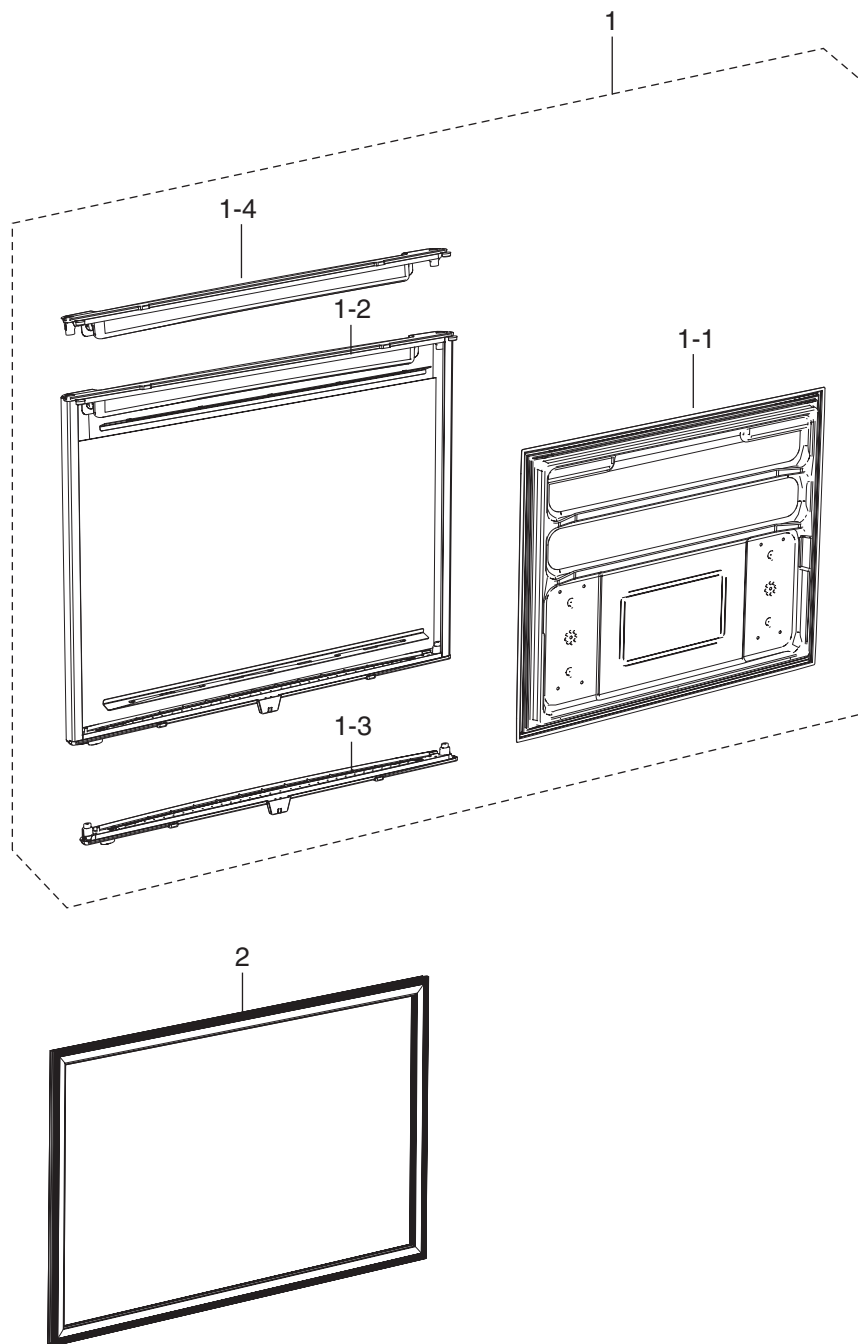

EXPLODED VIEW & PARTS LIST

■ Parts List of Freezer Door (RB214AB)


NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA91-02761D	ASSY DOOR FOAM FRE	NW2,PLATINUM INOX,-,-,POCKET TYPE	1	RD001
1-1	DA64-02639B	PANEL DOOR-FRE	NW2(SWING),ABS,-,-,-,COOL WHITE,-	1	
1-2	DA97-06717D	ASSY-PLATE DOOR FRE	NW2,DRAWER,PLATINUM INOX,-	1	RD113
1-3	DA97-06711A	ASSY CAP DOOR FRE-LOW	NW2,-,-,SWING,CREAMY STS,SC-07009R	1	
1-4	DA97-06714A	ASSY CAP DOOR FRE-UPP	NW2,-,-,POCKET,CREAMY STS,SC-07009R	1	
2	DA97-06694A	ASSY-GASKET DOOR FRE	NW2,SF-PVC,-,-	1	RD012

■ Parts List of Freezer Door (RB194AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA91-02761D	ASSY DOOR FOAM FRE	NW2,PLATINUM INOX,-,-,POCKET TYPE	1	
1-1	DA64-02639B	PANEL DOOR-FRE	NW2(SWING),ABS,-,-,-,COOL WHITE,-	1	
1-2	DA97-06717D	ASSY-PLATE DOOR FRE	NW2,DRAWER,PLATINUM INOX,-	1	
1-3	DA97-06711A	ASSY CAP DOOR FRE-LOW	NW2,-,-,SWING,CREAMY STS,SC-07009R	1	
1-4	DA97-06714A	ASSY CAP DOOR FRE-UPP	NW2,-,-,POCKET,CREAMY STS,SC-07009R	1	
2	DA97-06694A	ASSY-GASKET DOOR FRE	NW2,SF-PVC,-,-	1	RD012

EXPLODED VIEW & PARTS LIST

5-5) Disassembly of Refrigerator Door Left

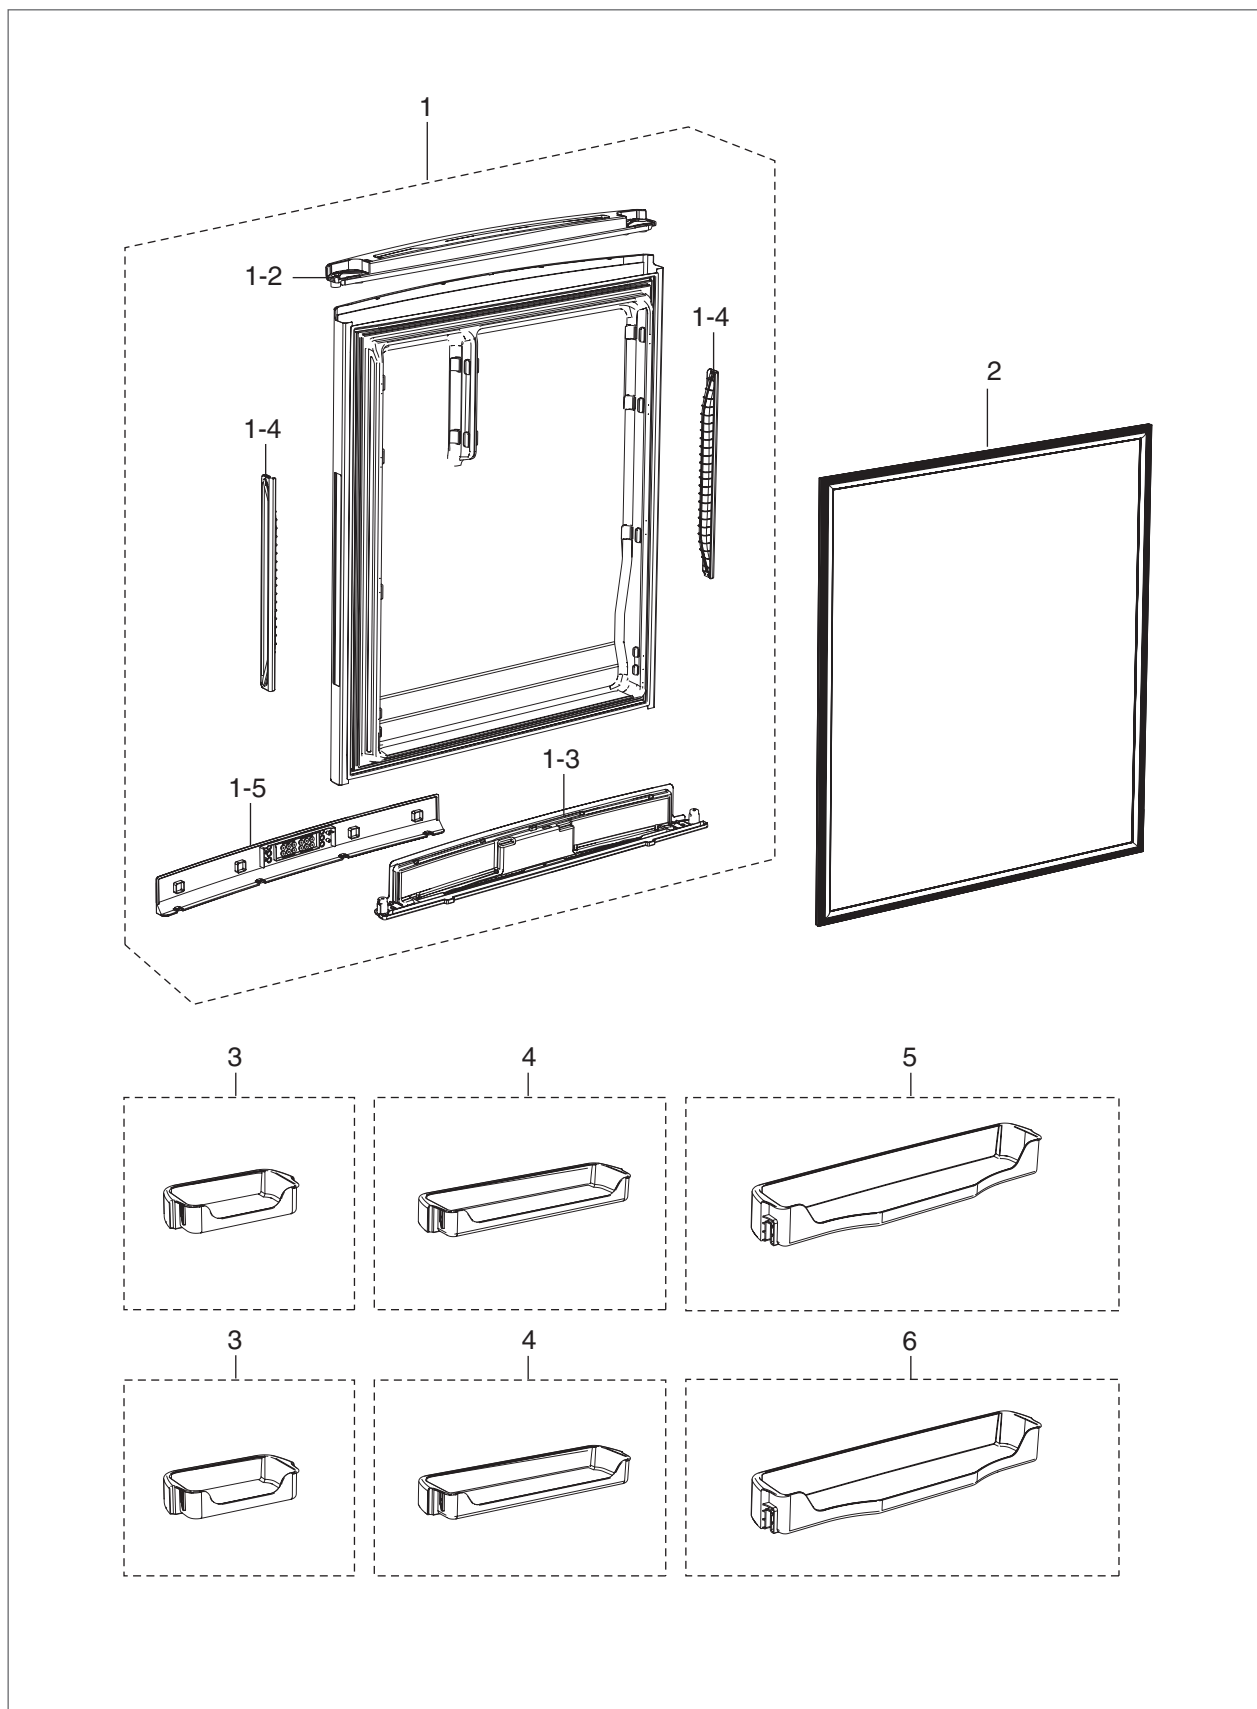

EXPLODED VIEW & PARTS LIST

■ Parts List of Refrigerator Door-Left (RB214AB)


NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA91-02758D	ASSY DOOR FOAM REF	NW2,PLATINUM INOX (DAC-GR0701TV),-,-,-,BASIC	1	RE001
1-1	DA64-02636A	PANEL DOOR-REF	NW2-PJT,ABS,-,-,-,-,COOL WHITE(SC-02740R),-	1	
1-2	DA97-06660A	ASSY CAP DOOR-REF UPP	NW2-PJT,-,-,-,-,Creamy STS(SC-07009R),-	1	
1-3	DA97-06658A	ASSY CAP DOOR-REF LOW	-,-,-,W40,1RL,-,-,-	1	
1-4	DA64-02633A	HANDLE REF-SIDE	NW2-PJT,ABS,-,-,-,-,Creamy STS(SC-07009R),-	2	
1-5	DA97-06661A	ASSY COVER CONTROL-FRONT	NW2-PJT,-,-,-,-,-,Creamy STS(SC-07009R),-	1	RE014
2	DA97-06693A	ASSY-GASKET DOOR REF	NW2-PJT,ABS,-,-,-,-,Creamy STS(SC-07009R),-	1	RE016
3	DA63-00926D	GUARD-REF UPP L	W2-PJT,HIPS(HG-1760),-,-,-,COOL-WHITE,SC-02740R	2	
4	DA63-00927D	GUARD-REF UPP R	W2-PJT,HIPS(HG-1760),-,-,-,COOL-WHITE,SC-02740R	2	
5	DA63-01262B	GUARD-REF MID	W2-05,HIPS,-,-,-,SC-02740R,COOL-WHT	1	
6	DA63-01263C	GUARD-REF LOW	W2-05,HIPS,-,-,-,SC-02740R,COOL-WHT	1	

■ Parts List of Refrigerator Door-Left (RB194AB)

NO	CODE-NO	PART NAME	SPEC	QUAN TITY	REMARK
1	DA91-02758D	ASSY DOOR FOAM REF	NW2,PLATINUM INOX (DAC-GR0701TV),-,-,-,BASIC	1	RE001
1-1	DA64-02636A	PANEL DOOR-REF	NW2-PJT,ABS,-,-,-,-,COOL WHITE(SC-02740R),-	1	
1-2	DA97-06660A	ASSY CAP DOOR-REF UPP	NW2-PJT,-,-,-,-,Creamy STS(SC-07009R),-	1	
1-3	DA97-06658A	ASSY CAP DOOR-REF LOW	-,-,-,W40,1RL,-,-,-	1	
1-4	DA64-02633A	HANDLE REF-SIDE	NW2-PJT,ABS,-,-,-,-,Creamy STS(SC-07009R),-	2	
1-5	DA97-06661A	ASSY COVER CONTROL-FRONT	NW2-PJT,-,-,-,-,-,Creamy STS(SC-07009R),-	1	RE014
2	DA97-06693A	ASSY-GASKET DOOR REF	NW2-PJT,ABS,-,-,-,-,Creamy STS(SC-07009R),-	1	RE016
3	DA63-00926D	GUARD-REF UPP L	W2-PJT,HIPS(HG-1760),-,-,-,COOL-WHITE,SC-02740R	2	
4	DA63-00927D	GUARD-REF UPP R	W2-PJT,HIPS(HG-1760),-,-,-,COOL-WHITE,SC-02740R	2	
5	DA63-01262B	GUARD-REF MID	W2-05,HIPS,-,-,-,SC-02740R,COOL-WHT	1	
6	DA63-01263C	GUARD-REF LOW	W2-05,HIPS,-,-,-,SC-02740R,COOL-WHT	1	

6. PCB DIAGRAM

6-1) PCB Layout with part position (Main Board)

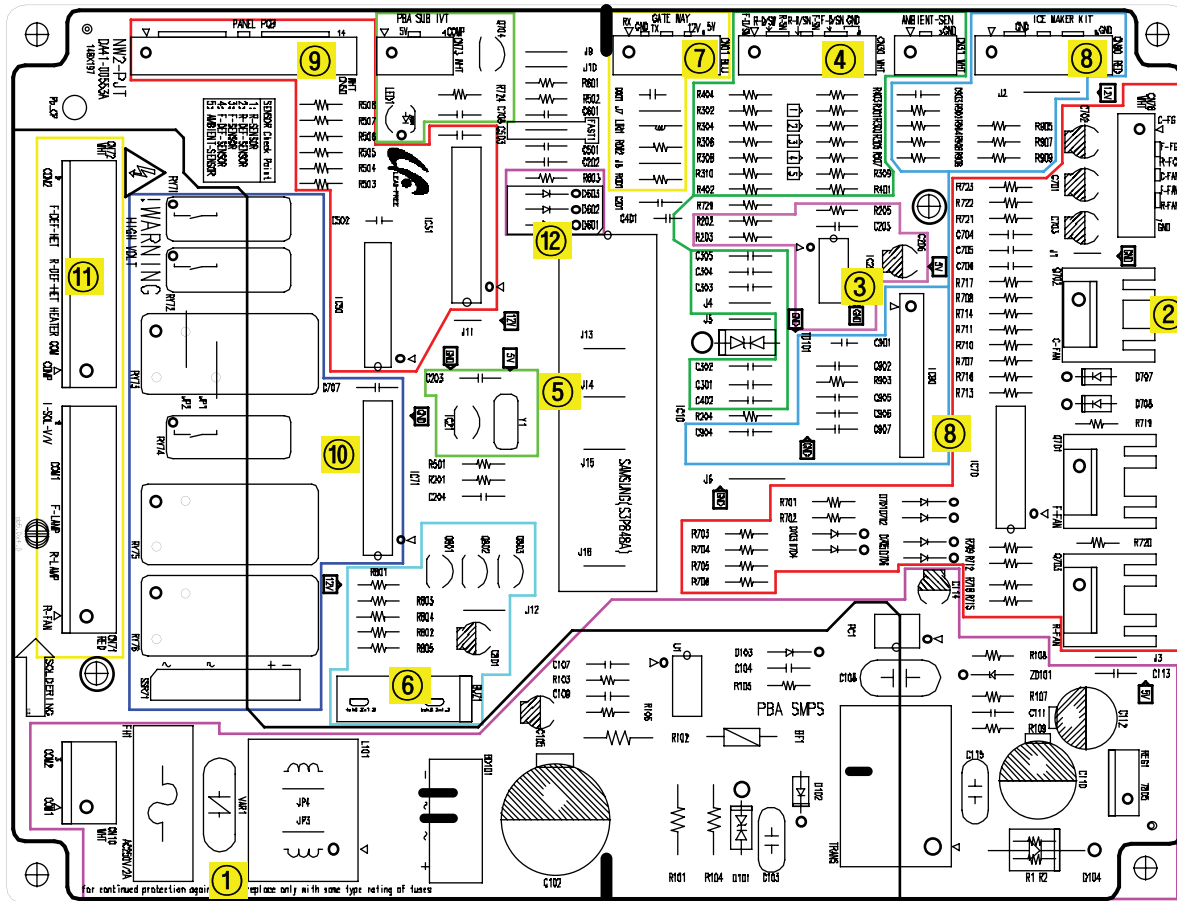

1. DC12V,5V, & GND are supplied from SMPS PCB.
2. FAN MOTOR driving part : Supply the power from 8.3V~12V to motor according to the motor type (F,R,C,ICE).
3. EEPROM : Save and record every kinds of data.
4. Transmit inputted signals from every sensor into MICOM after eliminate the noise.
5. Departure part : Generate the CLOCK which needs to control MICOM program RESET control circuit part :
Initialize the program by sensing power ON/OFF.
6. BUZZER Circuit
7. PLC Input / Output
 - PLC (Power Line communication)
 - * Option(PLC module is not inserted unless specified occasion.)
8. Operate ICE-MAKER, supply power to MOTOR, and sense the variation of switch.
9. Display driving part : Display LED & detect KEY state.
10. Relay part which controls AC load : Operate by receiving the driving signals of MICOM through Sink IC.
11. Connector part : Connect AC load.
12. DIODE option setting part : Set the option

PCB DIAGRAM

6-2) Connector Layout with part position (Main Board)

CN90 - Ice Maker

- ①~② : OPEN
- ③ : OPEN
- ④ : Sensor
- ⑤ : Test Switch
- ⑥ : Full Switch
- ⑦ : Horizontal Switch
- ⑧ : **GND**

CN31 - Sensor

- ①~② : Ambient
- ③ : **GND**

CN30 - Sensor & Switch


- ① : F-Door Switch
- ② : R-Door Switch
- ③ : R-Sensor
- ④ : R-DEF-Sensor
- ⑤ : F-Sensor
- ⑥ : F-DEF-Sensor
- ⑦ : **GND**
- ⑧ : **GND**

CN50

- ①~⑫ : Panel LED Driver
- ⑬ : Display Switch input
- ⑭ : OPEN

CN76 - BLDC Motor

- ① : C-FAN signal input volt
- ② : F-FAN signal input volt
- ③ : R-FAN signal input volt
- ④ : C-FAN operation signal
- ⑤ : F-FAN operation signal
- ⑥ : R-FAN operation signal
- ⑦ : **GND**

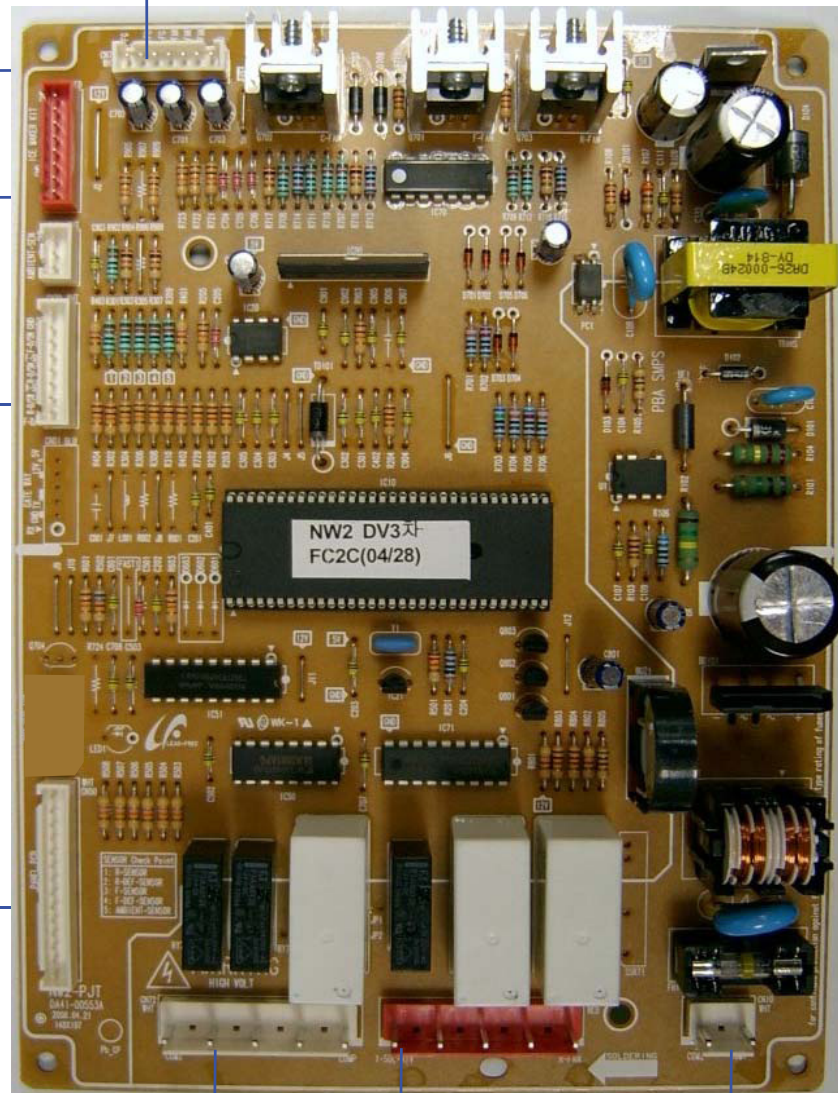

CN72 - AC LOAD

- ① : COMPRESSOR
- ③ : HEATER COMMON
- ⑤ : R-DEF-HEATER
- ⑦ : F-DEF-HEATER
- ⑨ : **COMMON2 LINE(L)**


CN71 - AC LOAD

- ① : OPEN
- ③ : R-LAMP
- ⑤ : F-LAMP
- ⑦ : **COMMON1 LINE(N)**
- ⑨ : ICE WATER SOLENOIDE VALVE

CN10 - AC INPUT


- ① : **COMMON2 LINE(L)**
- ③ : **COMMON1 LINE(N)**

7. Wiring Diagram

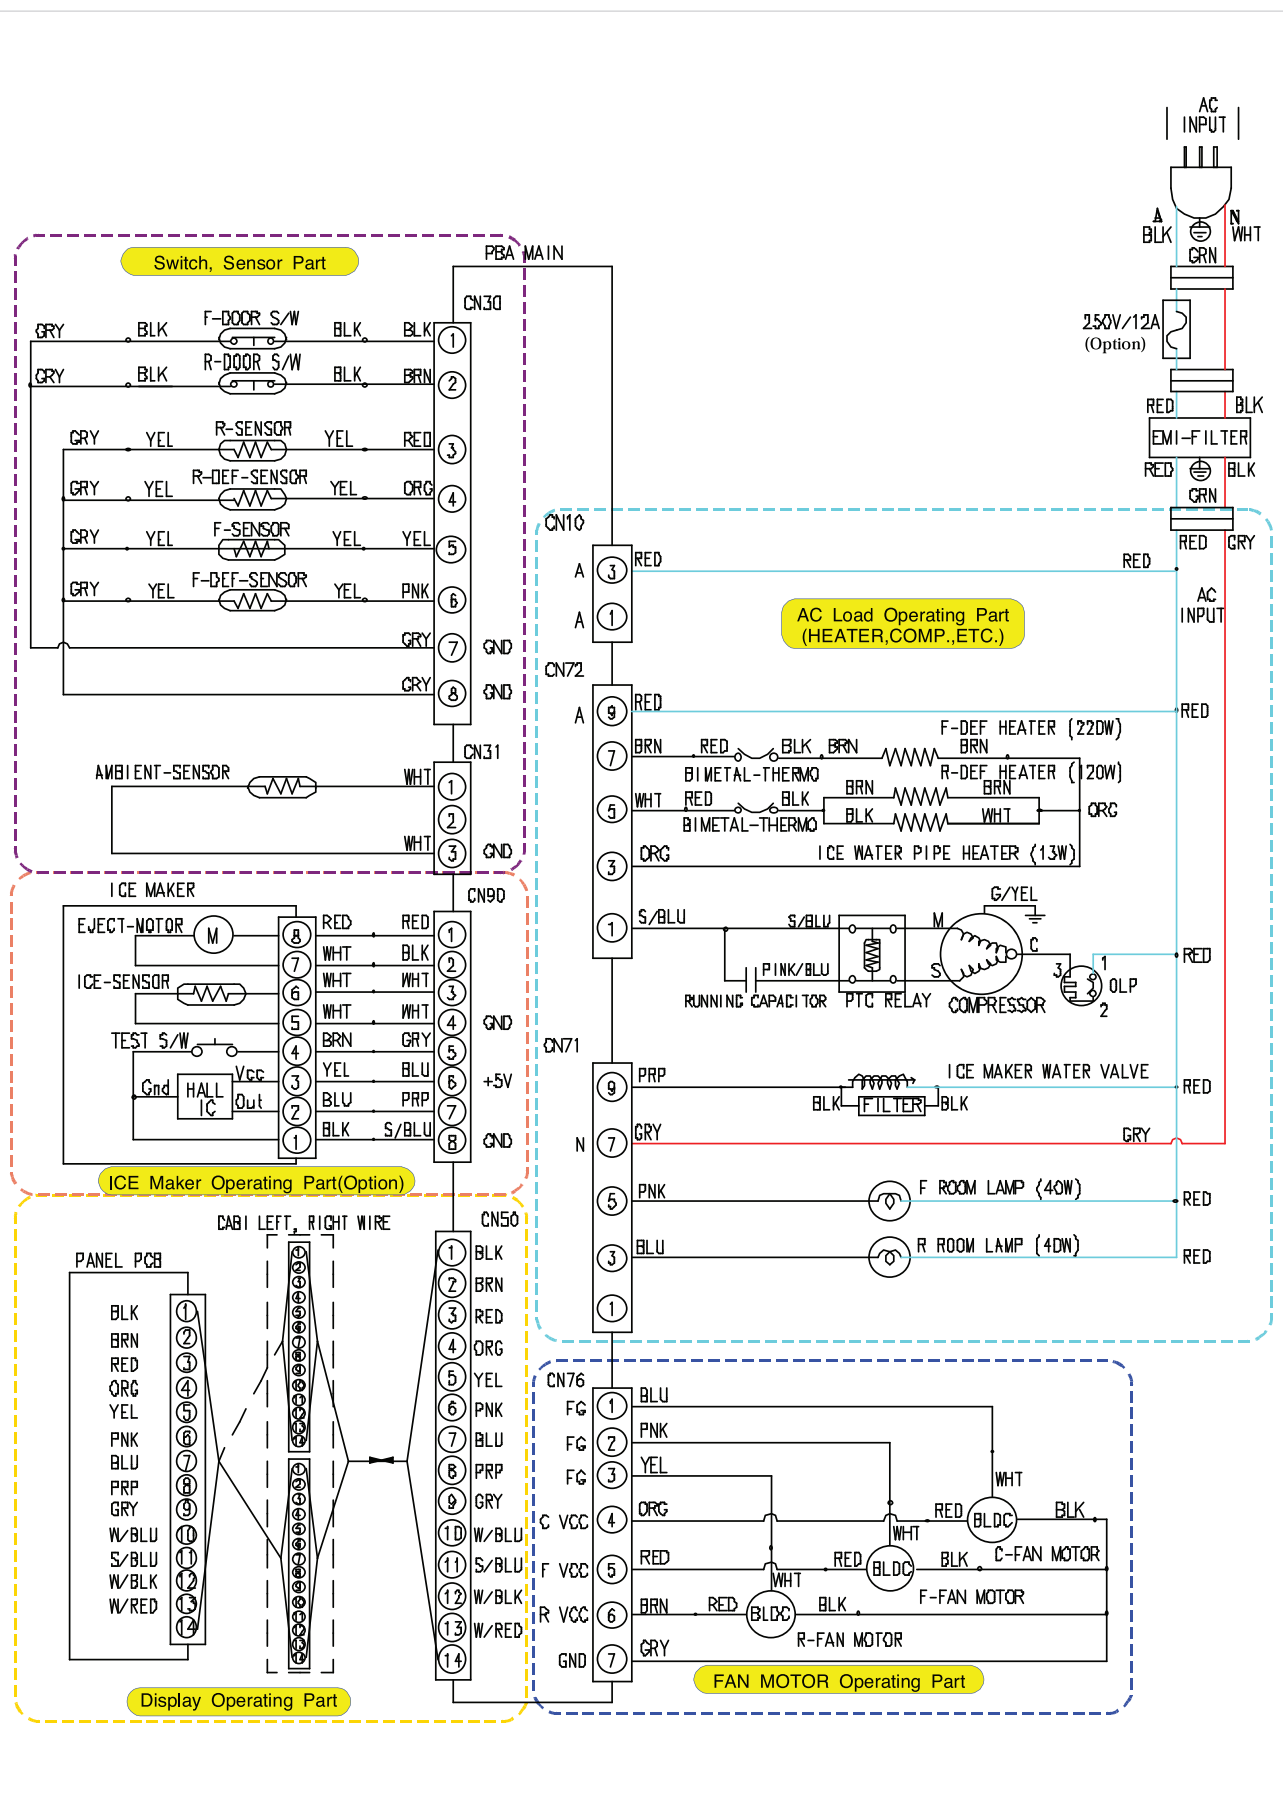


8. Schematic Diagram


8-1) Refrigerator Block Diagram

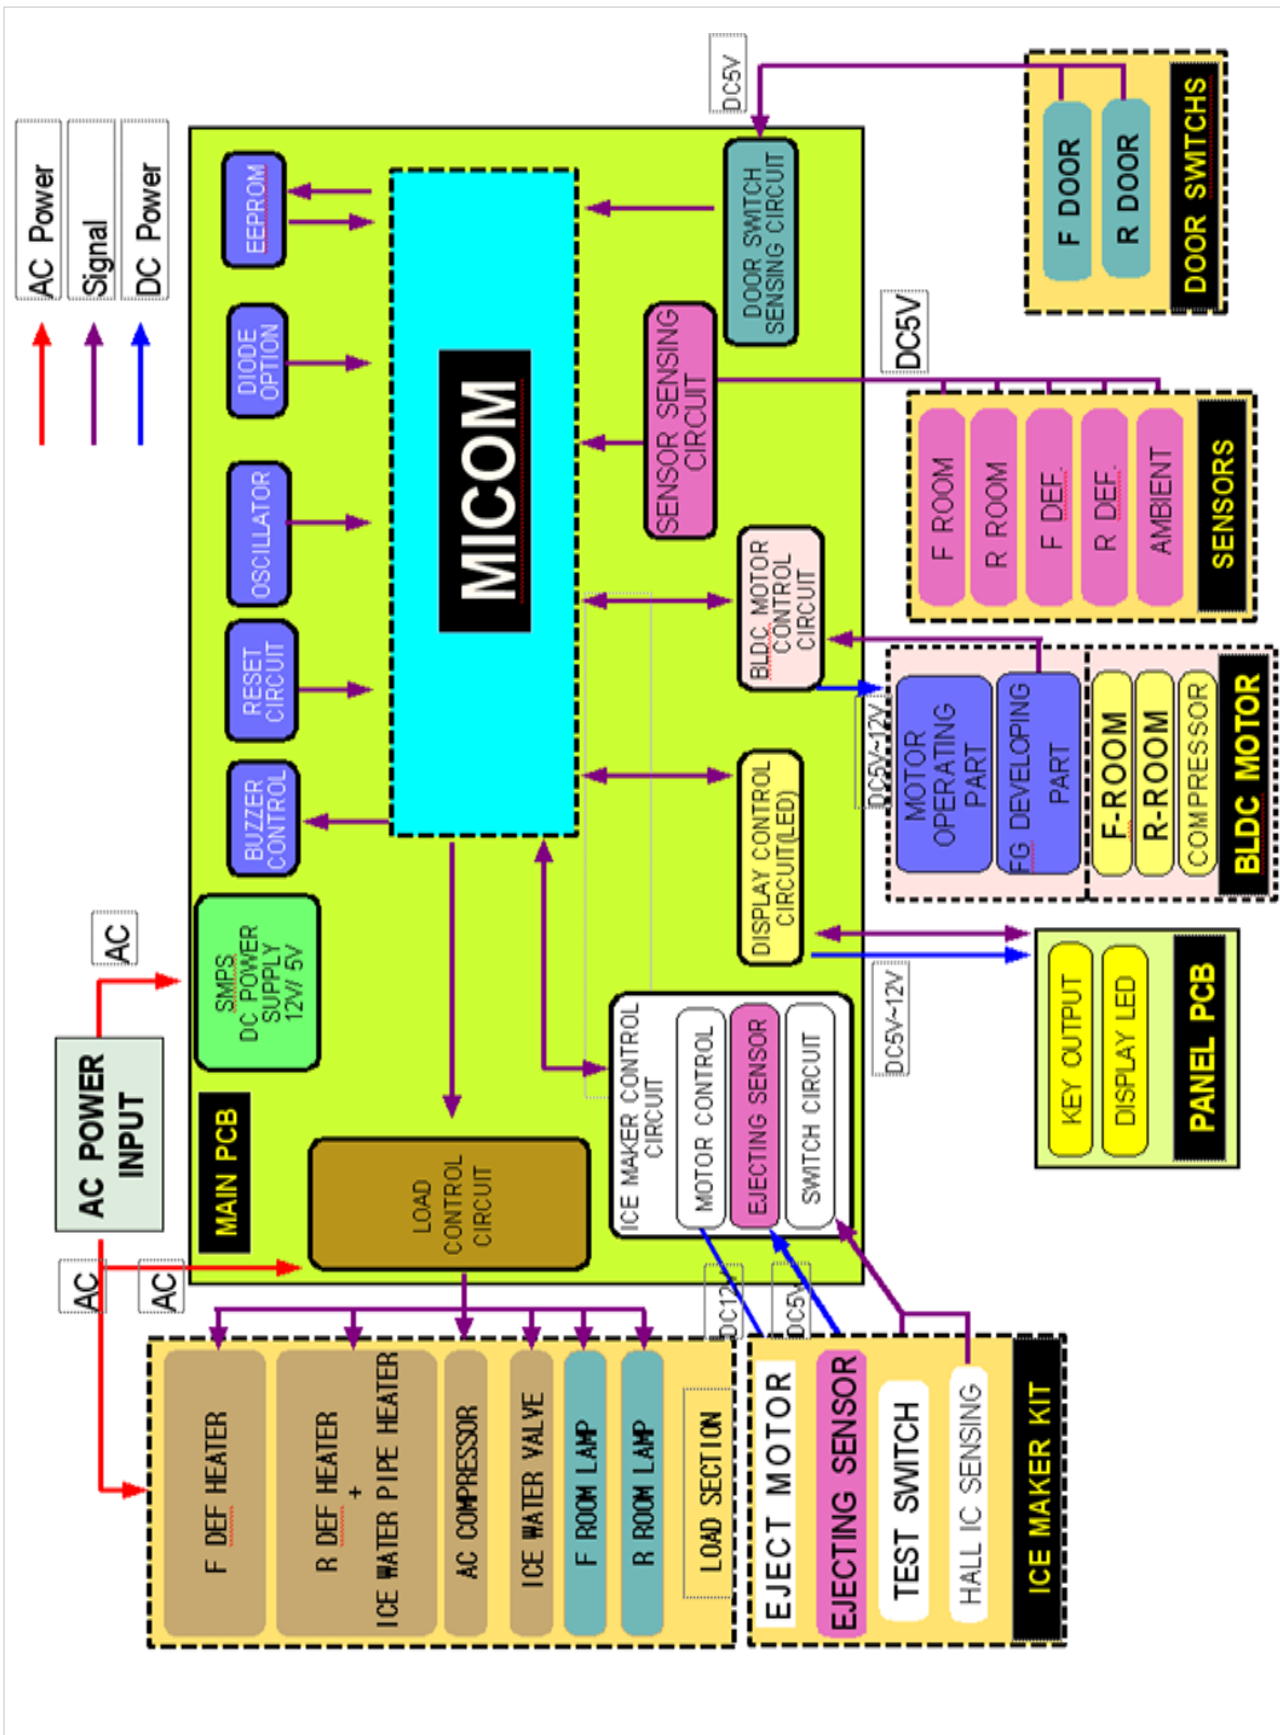

SchematicDiagram

8-2) Power and Signal Block Diagram

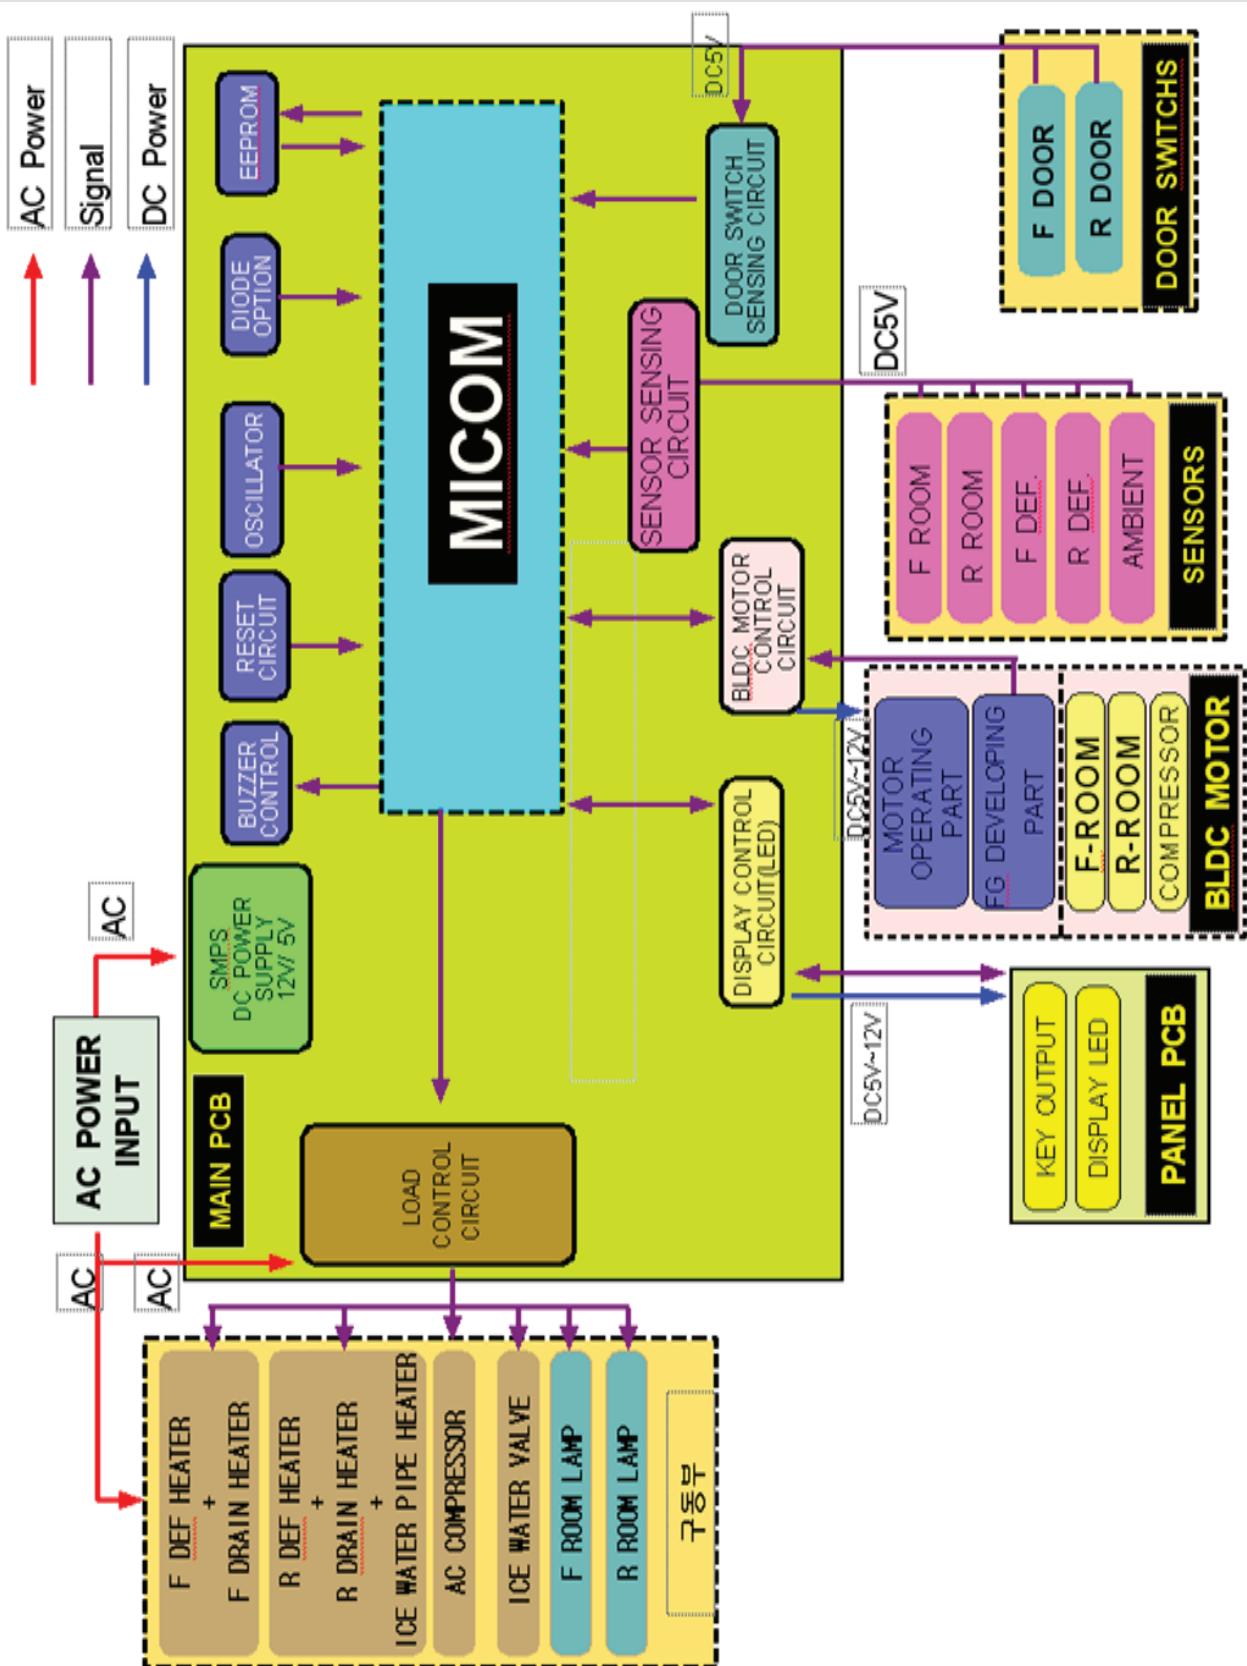

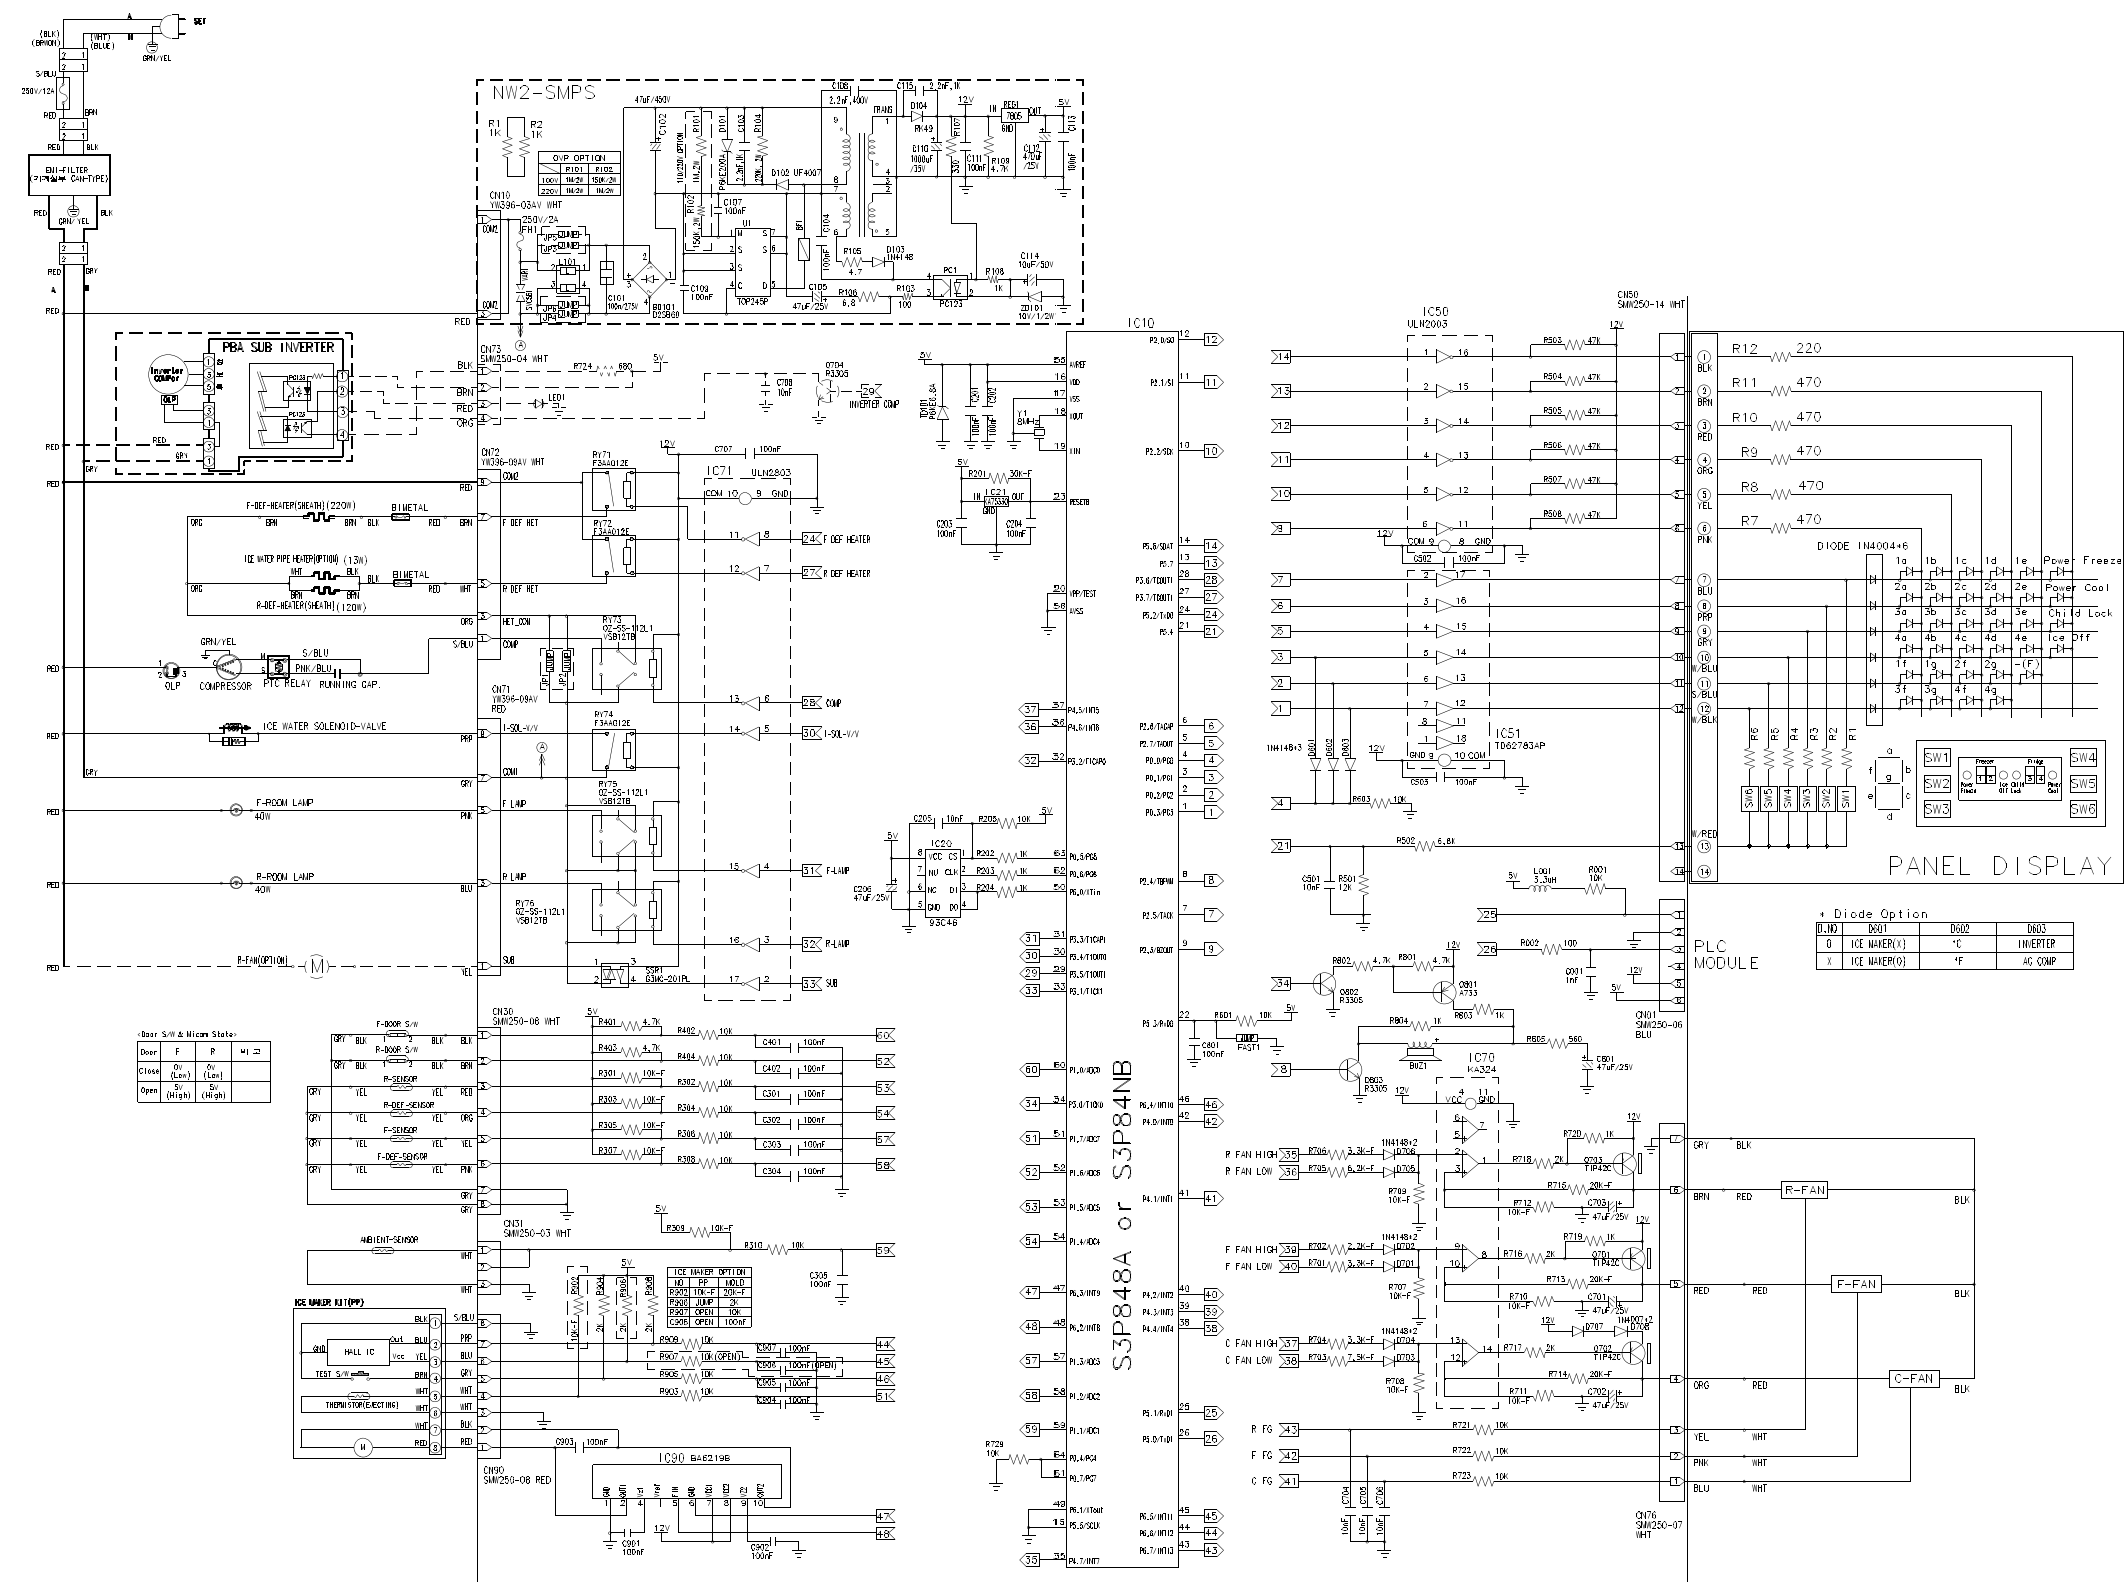



272, Oseon-Dong, Gwangsan-Gu,
Gwangju-City, Korea, 506-253
TEL : 82-62-950-6193, 6896
FAX : 82-62-950-6829

- This Service Manual is a property of Samsung Electronics Co., Ltd.
Any unauthorized use of Manual can be punished under applicable
International or domestic law.