




REFRIGERATOR

SERVICE MANUAL

CAUTION
BEFORE SERVICING THE UNIT,
READ THE SAFETY PRECAUTIONS IN THIS MANUAL.

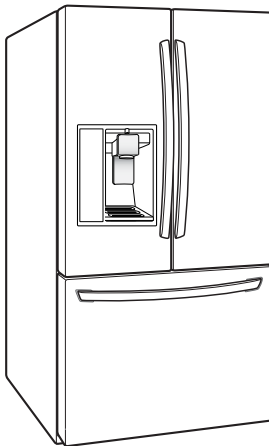

MODEL : LFXC24726*

COLOR : STAINLESS(ST)

CONTENTS

SAFETY PRECAUTIONS	2
1. SPECIFICATIONS	3
2. PARTS IDENTIFICATION	4
3. DISASSEMBLY	5
REMOVING AND REPLACING REFRIGERATOR DOORS	5
DOOR	6
SUB PCB	7
DOOR ALIGNMENT	7
FAN AND FAN MOTOR.....	7
DEFROST CONTROL ASSEMBLY	7
REFRIGERATOR LIGHT (TOP)	8-9
MULTI DUCT	9
DISPENSER	10
DISPLAY PCB	10
ICE BUTTON ASSEMBLY	10
WATER BUTTON ASSMEBLY	10
ICE CORNER DOOR REPLACEMENT	10
ICEMAKER REPLACEMENT	11
SUB PCB FOR WORKING DISPENSER	11
CAP DUCT MOTOR REPLACEMENT	12
HOW TO REMOVE A ICE BIN	13
HOW TO INSERT A ICE BIN	13
HOW TO REMOVE AND REINSTALL THE PULLOUT DRAWER	14-15
WATER VALVE DISASSEMBLY METHOD	16
FAN AND FAN MOTOR DISASSEMBLY METHOD.....	16
PULL OUT DRAWER	17
CAUTION : SEALED SYSTEM REPAIR	18
4. ADJUSTMENT	19
COMPRESSOR	19
5. CIRCUIT DIAGRAM	20
6. TROUBLESHOOTING	21-22
7. PCB PICTURE	23-24
8. Troubleshooting With Error Display	25-36
9. Troubleshooting Without Error Display	37-45
10. Reference	46-51
11. COMPONENT TESTING INFORMATION	52-60
12. TROUBLESHOOTING	61-73
13. ICEMAKER OPEARTING AND TROUBLE SHOOTING METHOD	74-77

SAFETY PRECAUTIONS

Please read the following instructions before servicing your refrigerator.

1. Unplug the power before handling any elctrical componets.
2. Check the rated current, voltage, and capacity.
3. Take caution not to get water near any electrical components.
4. Use exact replacement parts.
5. Remove any objects from the top prior to tilting the product.

1. SPECIFICATIONS



1-1 LFXC24726*

● 23.7 cu.ft.

ITEMS	SPECIFICATIONS
DOOR DESIGN	Side Rounded
DIMENSIONS (inches)	35 3/4 X 30 7/8 X 70 1/4 (WXDXH) 23.7cu.ft.
NET WEIGHT (pounds)	138kg (304lb)
COOLING SYSTEM	Fan Cooling
TEMPERATURE CONTROL	Micom Control
DEFROSTING SYSTEM	Full Automatic Heater Defrost
DOOR FINISH	PCM, VCM, Stainless
HANDLE TYPE	Bar
INNER CASE	ABS Resin
INSULATION	Polyurethane Foam



ITEMS		SPECIFICATIONS
VEGETABLE TRAY		Clear Drawer Type
COMPRESSOR		Linear
EVAPORATOR		Fin Tube Type
CONDENSER		Spiral Condenser
REFRIGERANT		R-134a (135 g)
LUBRICATING OIL		ISO10 (280 ml)
DEFROSTING DEVICE		SHEATH HEATER
LAMP	REFRIGERATOR	LED Module
	FREEZER	LED Module

● DIMENSIONS

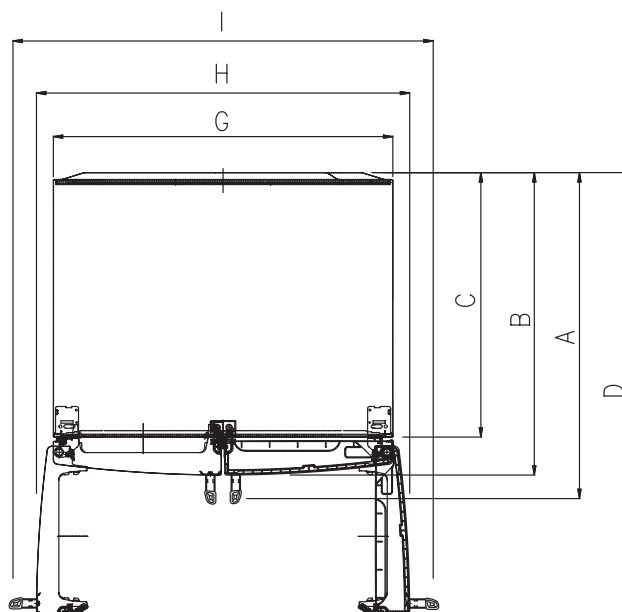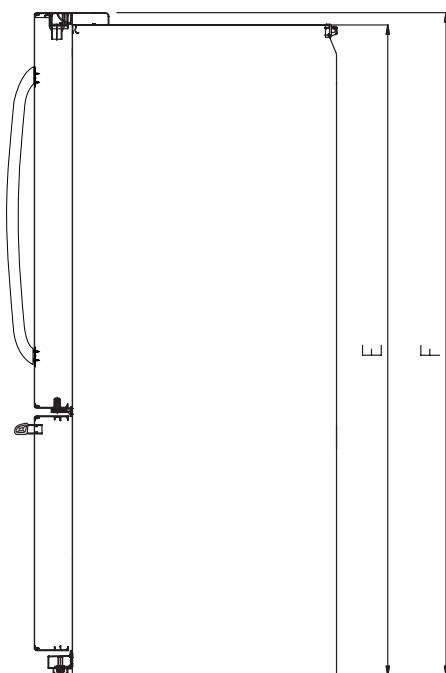

Description		LFXC24726*
Depth w/ Handles	A	30 7/8 in
Depth w/o Handles	B	28 3/8 in
Depth w/o Door	C	24 1/8 in
Depth (Total with Door Open)	D	42 3/4 in
Height to Top of Case	E	68 7/8 in
Height to Top of Door Hinge	F	70 1/4 in
Width	G	35 3/4 in
Width (door open 90 deg. w/o handle)	H	40 in
Width (door open 90 deg. w/ handle)	I	44 1/4 in

2. PARTS IDENTIFICATION

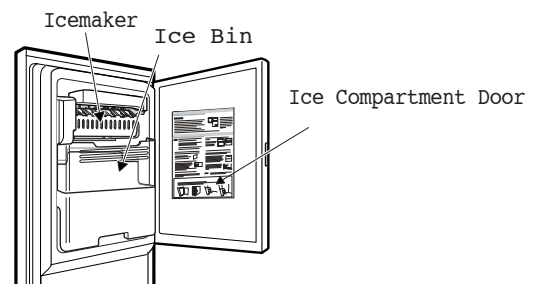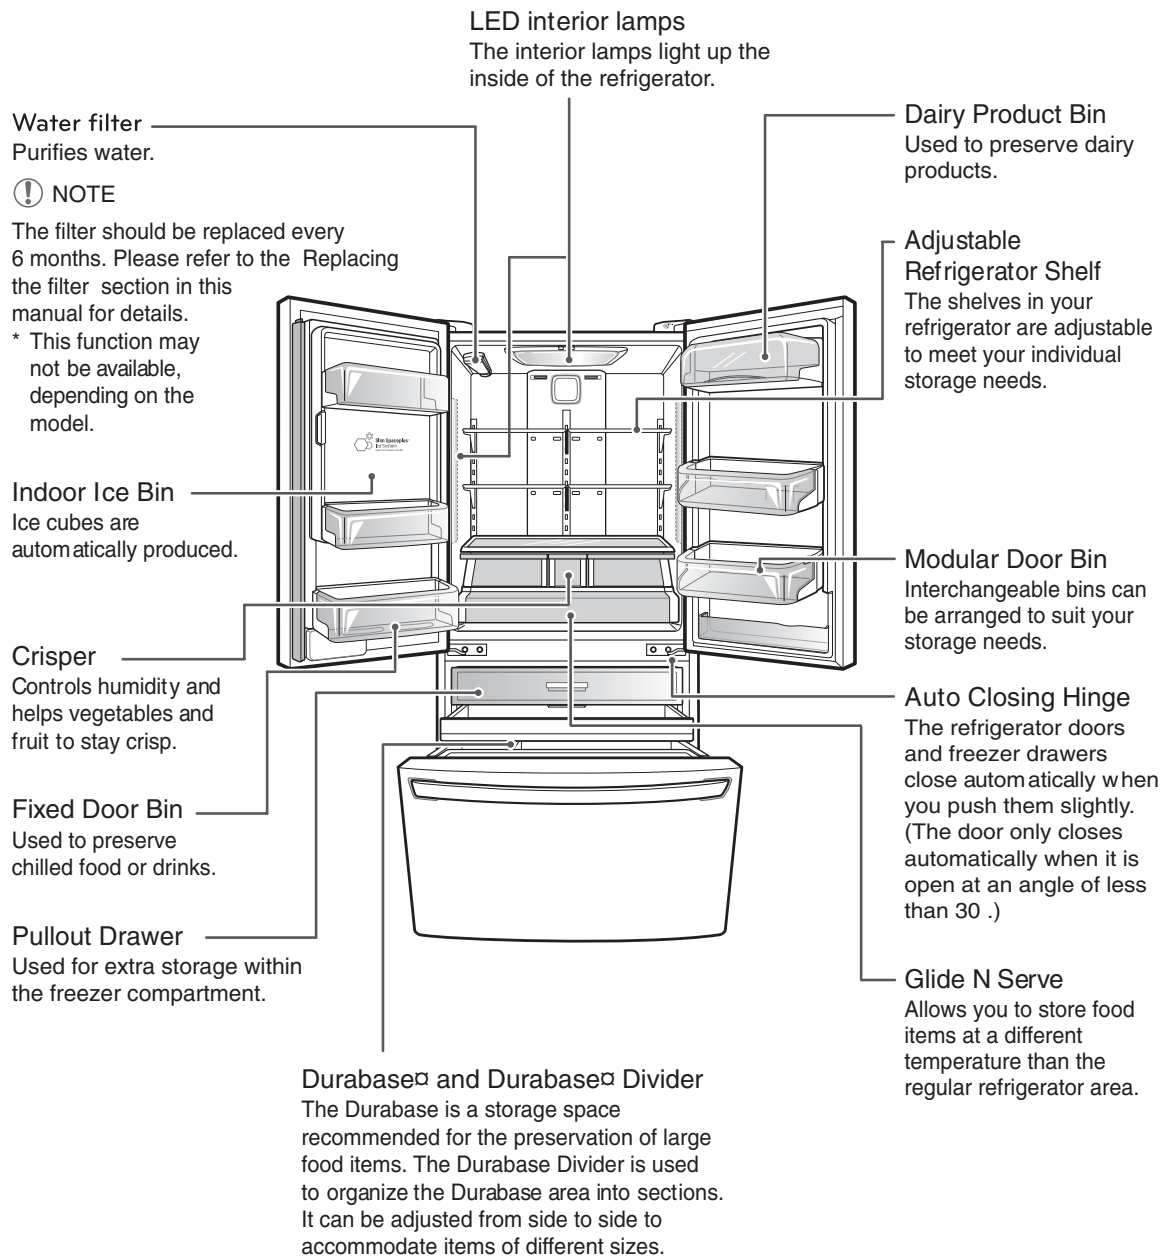

3. DISASSEMBLY

3-1 REMOVING AND REPLACING REFRIGERATOR DOORS

● Removing Refrigerator Door

▲ **CAUTION:** Before you begin, unplug the refrigerator. Remove food and bins from doors.

► Left Door -FIG. 2

1. Disconnect water supply tube by pushing back on the disconnect ring (3).-FIG. 1
2. Open door. Loosen top hinge cover screw (1).
- Use flat tip screwdriver to pry back hooks on front underside of cover (2). Lift up cover.
3. Disconnect door switch wire harness and remove the cover.
4. Pull out the tube.
5. Disconnect all 3 wiring harnesses (4). Remove the grounding screw (5).
6. Rotate hinge lever (6) counterclockwise. Lift top hinge (7) free of hinge lever latch (8).

▲ **CAUTION:** When lifting hinge free from the latch, be careful that door does not fall forward.

7. Lift door from middle hinge pin and remove door.
8. Place the door with the insides facing up, on a not scratch surface.

► Right Door -FIG. 3

1. Open the door, remove 1 screw on the top of the hinge cover. Loosen top hinge cover screw (1). Lift up cover (2).
2. Disconnect door switch wire harness and remove the cover.
3. Rotate hinge lever (3) clockwise. Lift top hinge (4) free of hinge lever latch (5).
4. Lift door from middle hinge pin and remove door.

▲ **CAUTION:** When lifting hinge free from the latch, be careful that the door does not fall forward.

5. Place the door with the insides facing up, on a not scratch surface.

Figure 2

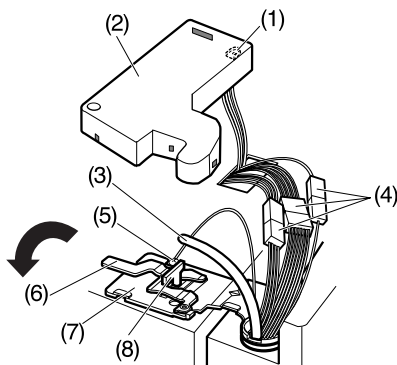


Figure 3




 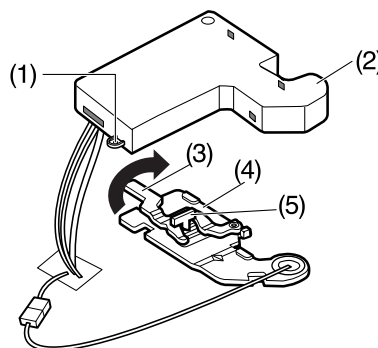


Figure 1

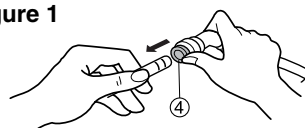

- 1) Insert the tube until you can see only one of the lines printed on the tube.
- 2) After inserting, pull the tube to ascertain that it is secure.
- 3) Assemble clip.

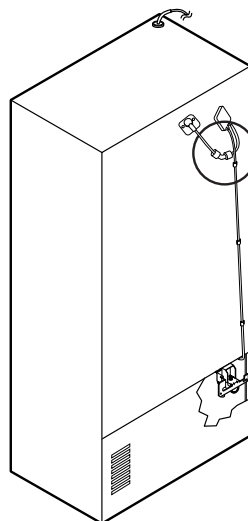

3-2 DOOR

● Mullion Removal

1. Remove 2 screws.



2. Lift mullion up carefully.




3. Disconnect wire harness.



● Door Gasket Removal

1. Remove gasket


Remove the gasket from gasket channel at doorliner as shown in the illustration below.

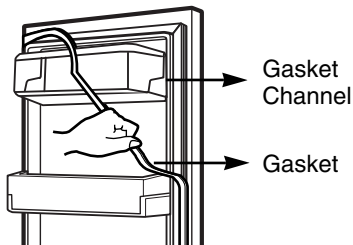

● Door Gasket Replacement

1. Insert gasket into channel

Insert and press gasket into channels at doorliner.

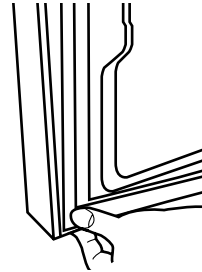

● Mullion Replacement

1. Connect wire harness.




2. Insert mullion into channel.

Insert the mullion into channel at door as shown below.



3. Assemble 2 screws.

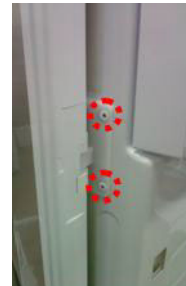

3-3 Sub,PCB

● Sub,PCB Removal

1. Remove 1 Screw.



2. Lift Sub PCB up carefully.



3. Reverse the Suc PCB cover.



4. Disconnect capacitor housing.



5. Disconnect wire harness.



● Sub,PCB Replacement

1. Reverse the Suc PCB cover.



2. Connect wire harness.



3. Connect the capacitor housing.



4. Insert the Sub PCB sideling.




5. Assemble 1 screw.




3-4 Door Alignment

If the level of refrigerator doors is uneven, follow the instructions below to align the doors:
Turn the leveling legs (CCW) to raise or (CW) to lower the height of the front of the refrigerator by using flat blade screw driver or 11/32" wrench. Use the wrench (Included with the User Manual) to adjust the bolt in the door hinge to adjust the height. (CW to raise or CCW to lower the height.)

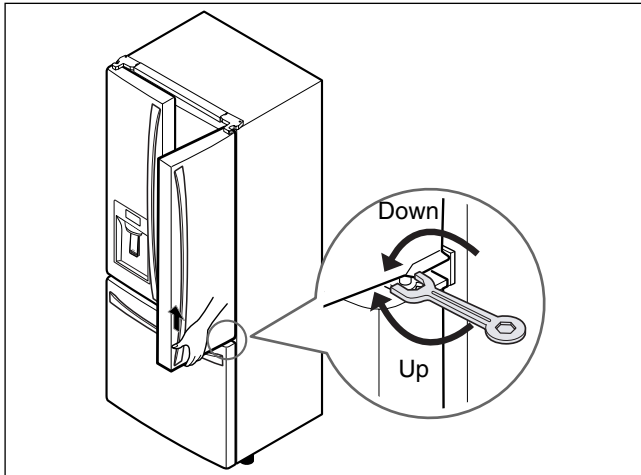

3-5 FAN AND FAN MOTOR

1. Remove the freezer drawer.
2. Remove the plastic guide for slides on left side by unscrewing phillips head screws.
3. Remove the grille assembly by removing four screws and pulling the grille assembly forward.
4. Remove the Fan Motor assembly by loosening 3 screws and disassembling the shroud.
5. Pull out the fan and separate the Fan Motor and Bracket Motor.

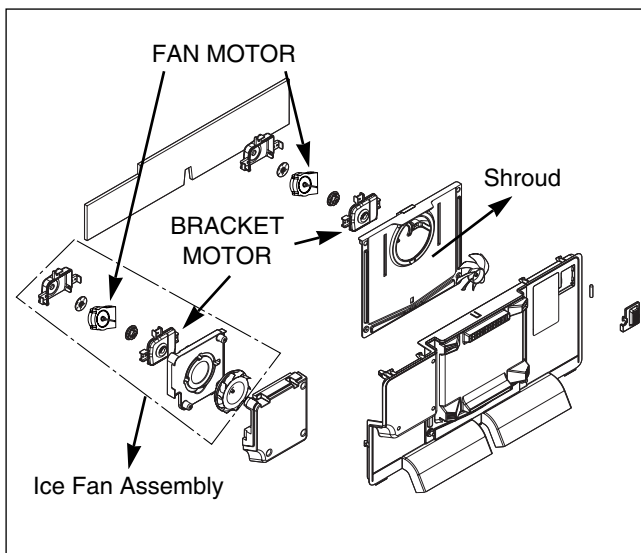

* Ice Fan Assembly Replacement

- 1) Remove the plastic guide for slides on left side by unscrewing phillips head screws.
- 2) Pull out the cover sensor to disassemble by using tools shown in the figure.
- 3) Pull out the cover grille to disassemble by using tools shown in the figure.
- 4) Put your hand into the inside of grille to disassemble shown in the figure.
- 5) Disconnect wire harness of the grille assembly.
- 6) Remove the Ice fan assembly by loosening all screws.



(1)



(2)



(3)



(4)



(5)



(6)


3-6 DEFROST CONTROL ASSEMBLY

Defrost Control assembly consists of Defrost Sensor and FUSE-M.


The Defrost Sensor works to defrost automatically. It is attached to the metal side of the Evaporator and senses its temperature. At 46F(8°C), it turns the Defrost Heater off. Fuse-M is a safety device for preventing over-heating of the Heater when defrosting.

1. Pull out the grille assembly. (Figure 1)
2. Separate the connector with the Defrost Control assembly and replace the Defrost Control assembly after cutting the Tie Wrap. (Figure 2)

GRILLE ASSEMBLY

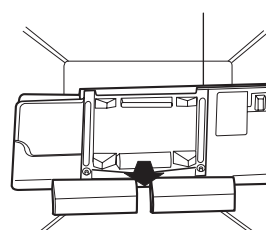

DEFROST-CONTROL ASSEMBLY

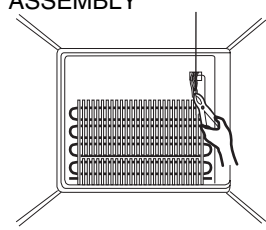

3-7 Refrigerator Light (Top)

Unplug Refrigerator, or disconnect power at the circuit breaker.


If necessary, remove top shelf or shelves.

3-7-1 Refrigerator Compartment Lamp

- 1) Release 2 screws.
- 2) Hold both ends with your both hands and pull it downward to remove it.



- 3) To remove the case lamp and cover lamp, release another 2 screws as following picture.

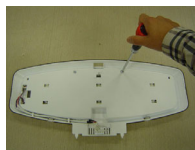

- 4) Use a flat blade screwdriver as shown below to remove the cover lamp.



- 5) To remove the LED Assembly, open the Hook part to pull it out as shown in the following picture.



Cover, lamp




LED, Assembly

Case, lamp

3-7-2 Refrigerator Light (Side)

1. Unplug refrigerator power cord from electric outlet.
2. Put flat screwdriver into sevice hole and remove cover of refrigerator light.

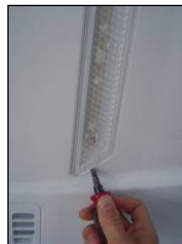

3. Remove the LED assembly from connector.



4. Replace LED assembly.



5. Assemble the cover in reverse order.

3-7-3 Cap Duct LED LAMP(Bottom)

1. Unplug refrigerator power cord from electric outlet.
2. Open the refrigerator door to need diassembly.
3. Put flat screwdriver into service hole, remove the cover of cap duct LED LAMP.



4. Remove the LED assembly from connector.




5. Replace LED assembly.



6. Assembly the cover in reverse order.

3-8 MULTI DUCT

1. Remove 2 screws and guide rail.

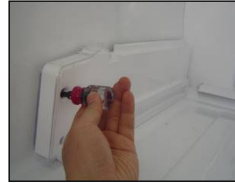

2. Remove the upper and lower Caps by using a flat screwdriver and remove 2 screws as shown figure.



3. Disconnect the lead wire on the bottom position



4. Grip both side of multi duct, pull it out.



3-9 DISPENSER



1) Pull out the drain



2) Holding the inner side of the dispenser pull forward to remove.



3) If nozzle is interfered with button, push and pull out the bottom of button.



4) Remove the lead wire.

▲ CAUTION: When replacing the dispenser cover make sure the lead wire does NOT come off and the water line is not pinched by the dispenser.




3-10 DISPLAY PCB

As shown below, remove 1 screw on the PCB fixing screw. Remove the display PCB fixing screw.




Case, PCB

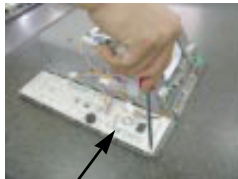

Display PCB

3-11 ICE BUTTON ASSEMBLY

- 1) Remove the 1 screw holding the lever.
- 2) Remove the spring from the hook.
- 3) Push and pull on the tab to remove.

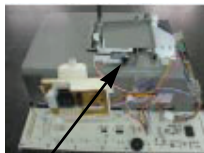

Button Lever



3-12 WATER BUTTON ASSMEBLY

- 1) Remove screws.
- 2) Grasp the Button assembly and lift.

Button Lever



3-13 ICE CORNER DOOR REPLACEMENT

- 1) Loosen the front screw as shown in the picture.
- 2) Lift up the hinge with one hand.
- 3) Pull out the Ice Corner Door with the other hand.



3-14 Icemaker replacement

- 1) Remove 3 screws marked in the picture below.



- 2) Grasp the bottom of motor cover assembly and pull it out slowly to remove.



3-15 SUB PCB FOR WORKING DISPENSER


- 1) Disconnect the wire harness.



- 2) Remove 1 screw from PCB and replace with new PCB.



- 3) Disconnect wire harness from wall of compartment.

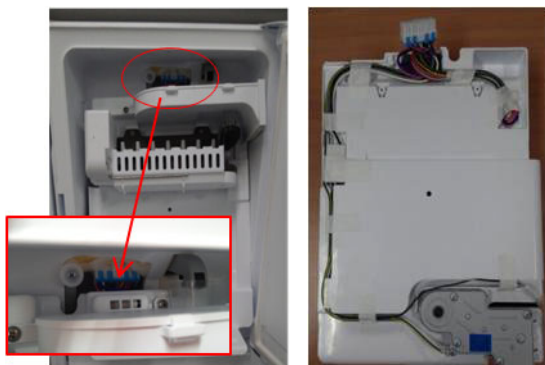

3-16 CAP DUCT MOTOR REPLACEMENT


- 1) Separate the Housing of the Cap Duct Motor.



- 2) Unscrew 3 screws to disassemble the motor.



- 3) When replacing the motor, check the position of the door duct and the link for proper fit.

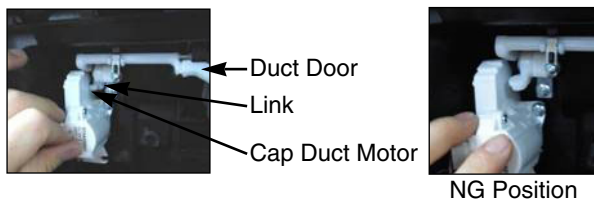

- 4) Insert 2 screws.




- 5) Push housing aside.




3-17 HOW TO REMOVE ICE BIN


- 1) Grip the handles, as shown in the picture.

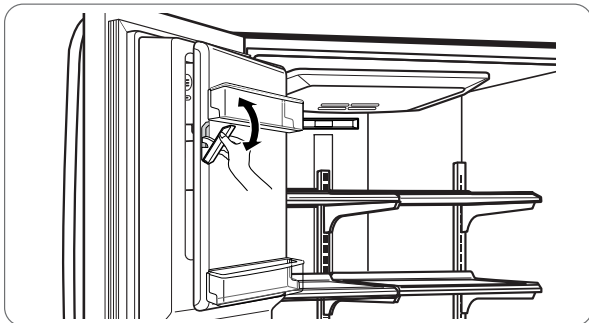

- 2) Lift the lower part slightly.

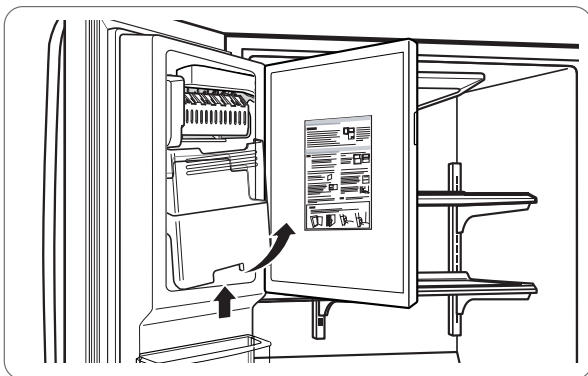


- 3) Take the Ice Bin out slowly.

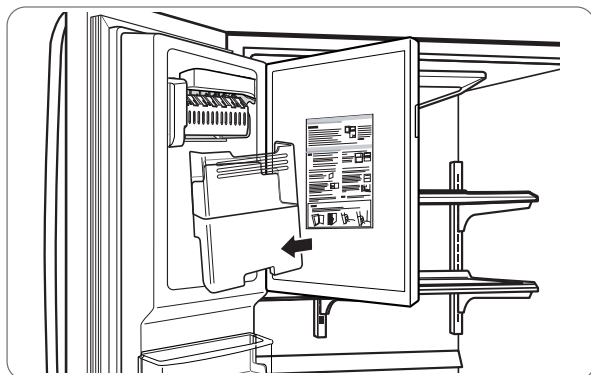

3-18 HOW TO PLACE ICE BIN IN POSITION

- 1) Insert the Ice Bin, slightly tilting it to avoid touching the Icemaker. (Especially, Ice-Detecting Sensor)

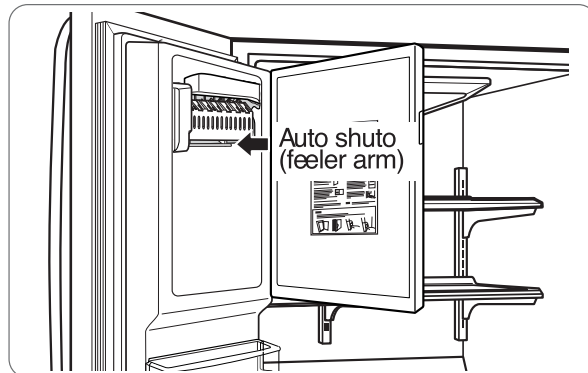

Note) Before remove ice bin, put on clean golves for keeping clean ice bin.

3-19 HOW TO REMOVE AND REINSTALL THE PULLOUT DRAWER

3-19-1 Follow Steps to Remove


Step 1) Open the freezer door.



Step 2) Remove the lower basket.




Step 3) Remove the two screws from the guide rails (one from each side).

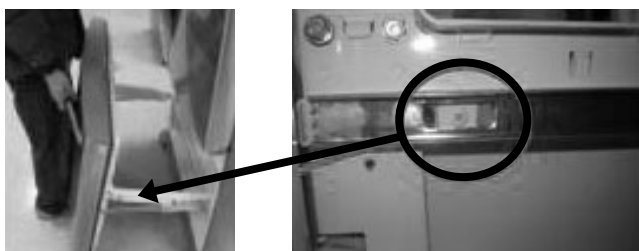

Step 4) Removal of the freezer door is done by lifting clear of the rail support.
Fully extend both rails.



Step 5) Remove only 1 screw of gearice, and disassemble the bar and gearice

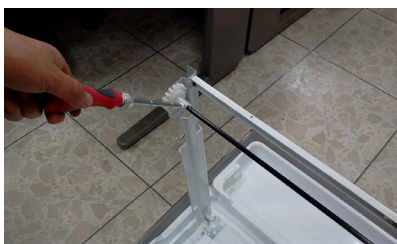

Step 6) Remove 2 screws of both side of supporter covers tv and disassemble the supporter cover tv.



3-19-2 Follow Steps to Reinstall


Step 1) Insert both side of supporter cover tv into connector rails, and then screw them.



Step 2) ① Assemble a bar and gear ice with screw.
② Push the otherside of the gear to inside of the bar.




Step 3) Put gear ice assembled with the bar by screw into connector rail's hole.

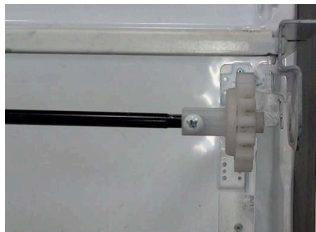

Step 4) Insert opposite gear ice into connector rail and screw them




Step 5) The rail system will align itself by pushing the rails all the way into the freezer section.
Pull the rails back out to full extension.

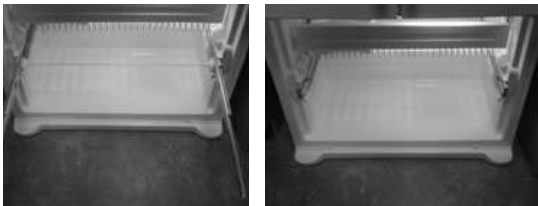

Step 6) Reinstall the freezer door by inserting the rail tabs into the guide rail.



Step 7) Reinstall the two screws into the guide rails
(one from each side).

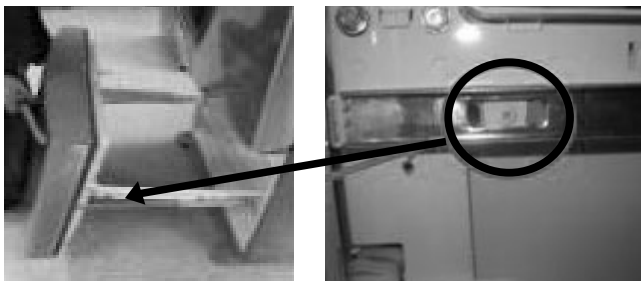


Step 8) Reinstall the lower basket, and close the freezer door.




3-20 WATER VALVE DISASSEMBLY METHOD

- 1) Turn off the water to unit. Remove the waterline from the valve.

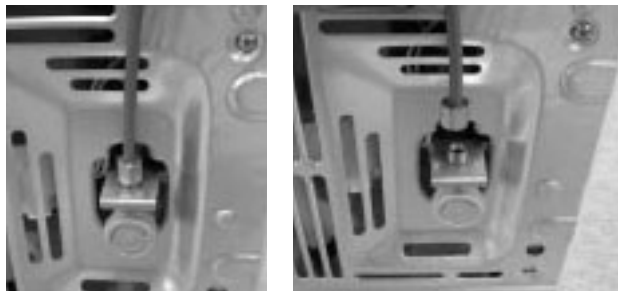


- 2) Remove cover and 1 screw from the valve.

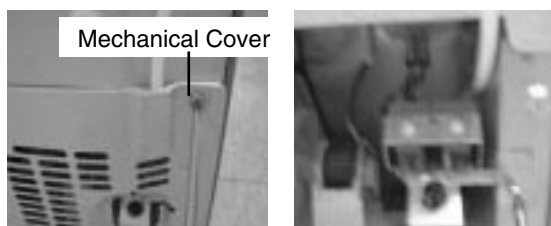

- 3) Separate the housing and remove the valve.



- 4) Remove the clip, and press the collet to separate the tube from the connector. Note: there maybe some water in the line.

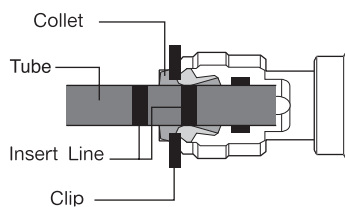

3-21 FAN MOTOR ASSEMBLY AND DISASSEMBLY METHOD

- 1) Remove screws for the Drain Pipe Assembly and the 1 connected to the Motor Cover.



- 2) Remove the screw from shroud and Separate the Fan motor assembly and Shroud.




Assemble in reverse order. Taking care to avoid.

1. Do not to bend the tube during assembly.
2. Press the Water Dispenser button letting water pour out, this checks for any leaks in the tube connection, this may vary depending on the water pressure (about 2 minutes.).


3-22 PULL OUT DRAWER

Top Drawer

1. Use a flat blade screwdriver to push the tab in on the left rail and push the tab on the right rail in with your finger.
Once the tabs have been pushed in, you can lift the tray up and out.

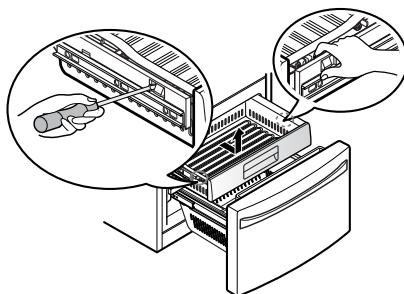


2. Pull both rails out to the full extension and insert the back of the tray into both rails. Then set the front of the tray into the rail and push it until you hear it click into place.

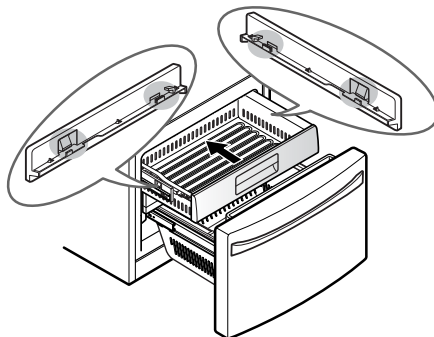


Middle Drawer

1. To remove the middle drawer.
Pull the drawer out to full extension. Lift the front of the drawer up, then pull it straight out.

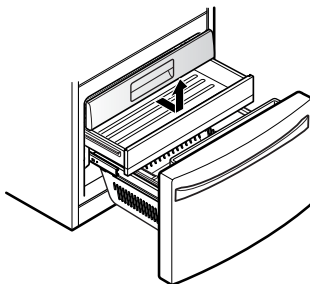

2. To install, slightly tilt up the front and insert the drawer into the frame and push it back into push it back place.

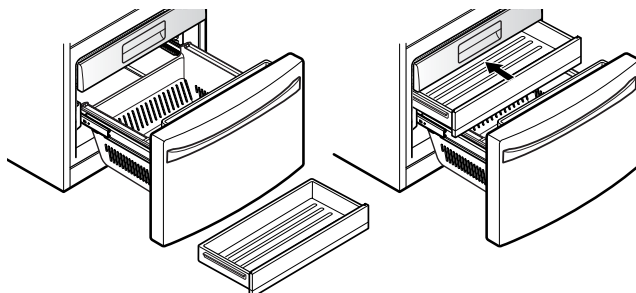


3-23 CAUTION : Sealed System Repair


Before making a sealed system repair : Start with the power cord unplugged from the outlet. Plug in the power cord and between 6 and 12 seconds after it has been plugged in, unplug it from the power source. this will allow both sides of the 3 way valve to be opened to allow for proper evacuation.

3-24 Way Valve Service

- The 3 way valve has plastic parts inside, so always wrap it with a wet cloth before servicing when using a torch.
- 1) Always replace the 3 way valve if there is a leak at any one of the 3 tubes coming from it.
- 2) Service in replacement of valve (valve failure) Perform service in the same method as above.

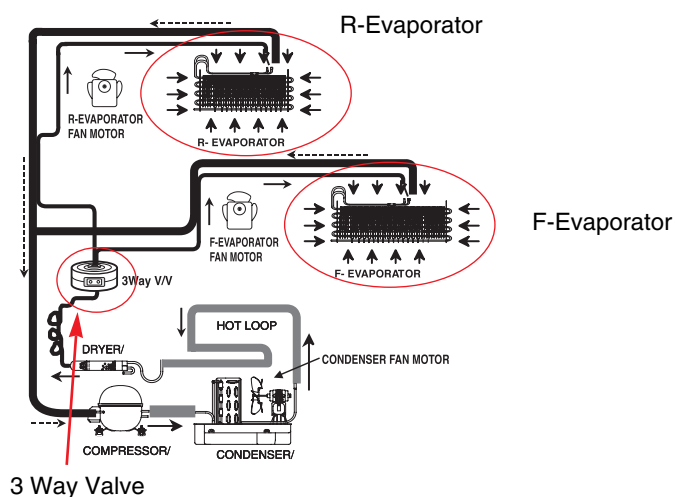

Whole picture of refrigerator

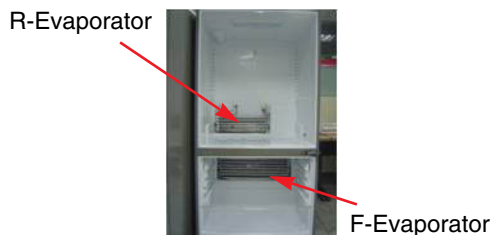


R-Evaporator



F-Evaporator



3 way valve

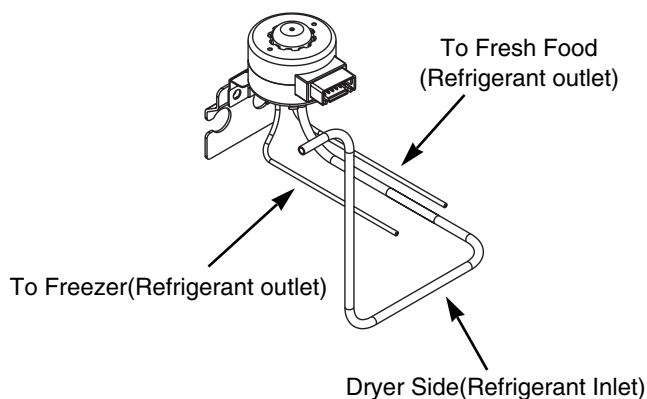

Note : To service sealed system, follow the directions in "3-22" and "3-23" above. Then service is the same as a single evaporator system.

4. ADJUSTMENT

4-1 COMPRESSOR

4-1-1 Role

The compressor intakes low temperature and low pressure gas from the evaporator of the refrigerator and compresses this gas to high-temperature and high-pressure gas. It then delivers the gas to the condenser.

4-1-2 Note for Usage

- (1) Be careful not to allow over-voltage and over-current.
- (2) Do not drop or handle carelessly.
- (3) Keep away from any liquid.
If liquid such as oil or water enters the Cover PTC Compressor may fail due to breakdown of their insulating capabilities.
- (4) Always use the Parts designed for the compressor and make sure it is properly attached to the compressor. Parts may appear physically identical but could have different electrical ratings. Replace parts by part number and model number. Use only approved substitute parts.

4-1-3 Remove the cover PTC



(1) Remove the Cover Back M/C



(2) Remove two screws on comp base



- (3) Use a L-shaped flap tool to pry off the cover
- (4) Assembly in reverse order of disassembly

4-2-3 Compressor protection logic

- Since linear Comp conducts linear reciprocating motion, we have protection logic for compressor, motor and PCB as the below.

- Stroke Trip
During the operation, if stroke is above the target value, decrease the target volt by 3V.
- Current Trip
Current trip is set in order to protect compressor mechanical part and drive from the overcurrent that might arise during the operation.
Check the current for every 416.7us and if the Trip exceeds 1.86Arms more than three times at Comp ON, forcibly stop and restart six minutes later.
- Lock Piston Trip
If stroke is under 5mm even if the current is more than 14Arms, Take it as 'piston lock' and restart after 2'30" of Comp OFF. Check the current and stroke for every 416.7us and if the condition fits more than three times at Comp ON, the Trip occurs.
- IPM fault Trip
It occurs if FO signal received from IPM is LOW. For every 416.7us, check whether FO signal is LOW. The trip occurs if it is found three times during the five periods(83ms).

CIRCUIT DIAGRAMS

• : OPTIONAL



6. TROUBLESHOOTING


6-1 Error Code Summary

▲ **WARNING:** When checking Resistance values, make sure to turn off the power, and wait for the voltage to discharge.

NOTE) Within 3 hours after the error : Press the Ice Plus button and Freezer button simultaneously.

All error, except for "E rt", "E SS", "E HS", "E IS(except for Icing Sensor)", "E gF", "E It" error, are displayed.

"E IS" which is displayed without input of user is the error of Icing Sensor.

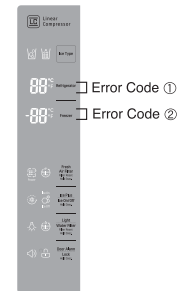


NO	Error Detection Category	Error Display		Error Generation Factors	Remark
		Refrigerator Temperature (Error code ①)	Freezer Temperature (Error code ②)		
1	Normality			None	Normal operation of Display
2	Freezer Sensor Error	E	FS	Short or Disconnection of Freezer Sensor	Check Each sensor and its Connector.
3	Refrigerator Sensor Error	E	rS	Short or Disconnection of Refrigerator Sensor	
4	Freezer Defrost Sensor Error	F	dS	Short or Disconnection Of Defrost Sensor	
5	Refrigerator Defrost Sensor Error	r	dS	Short or Disconnection Of Defrost Sensor	
6	Humidity Sensor Error	E	HS	Short or Disconnection Of Humidity	
7	Icing Sensor Error	E	IS	Short or disconnection of the sensor about Ice maker (Icing sensor, Ice maker sensor)	
8	Pantry sensor error	E	SS	Short or Disconnection of Pantry Sensor	
9	Room Temp Sensor Error	E	rt	Short or Disconnectoin of Room temp.sensor	
10	Ice maker kit defect	E	It	Other Electric system error such as moter, gear, Hall IC, operation circuit within I/M kit	When the ice does not drop even when the I/M Test S/W is pressed (same as model applied Twisting Ice Maker before)
11	Flow Meter(Sensor) Defect	E	gF	Error of flow meter or water input or low water pressure	Error of flow meter or water input or low water pressure or flow meter connection
12	Freezer Defrosting Error	F	dH	Even though it is passed 80Minute since then Defrosting, If Defrosting sensor is not Over 41°F (5°C), it is caused	Temperature Fuse Disconnection Heater Disconnection, DRAIN Jam, Poor Relay for Heater
13	Refrigerator Defrosting Error	r	dH	Even though it is passed 80Minute since then Defrosting, If Defrosting sensor is not Over 55.4°F(13°C) it is caused	
14	Abnormality of BLDC FAN Motor for Ice Making	E	IF	It is caused when feedback signal isn't over 65 seconds during BLDC FAN motor operating	Poor BLDC Motor connection, DRIVE IC, and TR
15	Abnormality of BLDC FAN Motor for Freezer	E	FF	It is caused when feedback signal isn't over 65 seconds during BLDC FAN motor operating	Poor BLDC Motor connection, DRIVE IC, and TR

NO	Error Detection Category	Error Display		Error Generation Factors	Remark
		Refrigerator Temperature (Error code ①)	Freezer Temperature (Error code ②)		
16	Abnormality of BLDC FAN MOTOR For Refrigerator	E	rF	It is caused when feedback signal isn't over 65 seconds during BLDC FAN motor operating	Poor BLDC Motor connection, DRIVE IC, and TR
17	Abnormality of BLDC FAN Motor for Mechanic Room	E	CF	It is caused when feedback signal isn't over 65 seconds during BLDC FAN motor operating	Poor BLDC Motor connection, DRIVE IC, and TR
18	Communication Error	E	CO	Communication Error between Micom of Main PCB and Display Micom	Poor Communication connection, Poor TR of Transmitter and Receiver Tx/Rx between display and main board.

7. PCB Picture


7-1. Main PCB

(P/N : EBR789406)

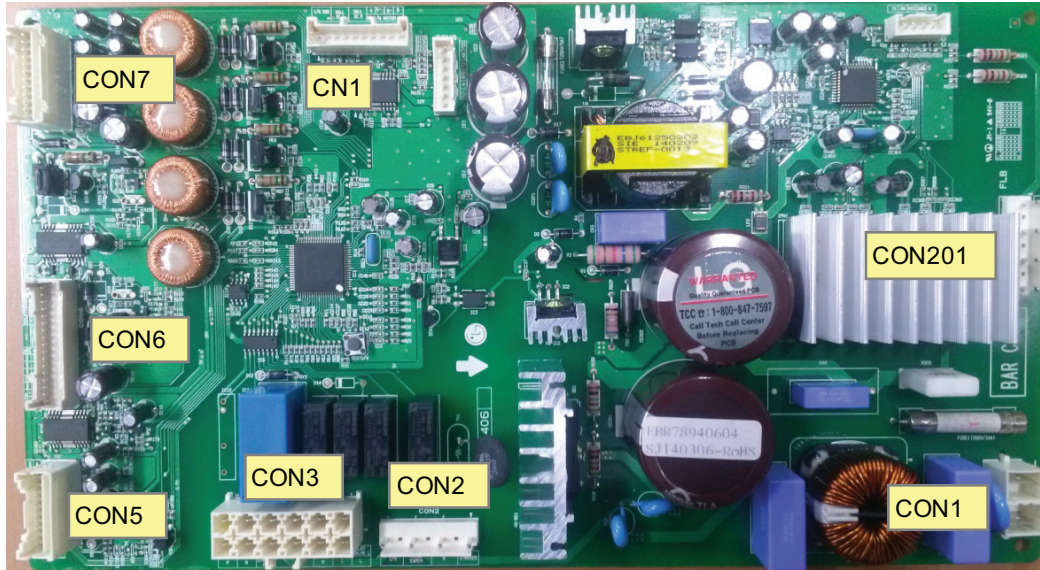

7-2. Display PCB

(P/N : EBR791597)

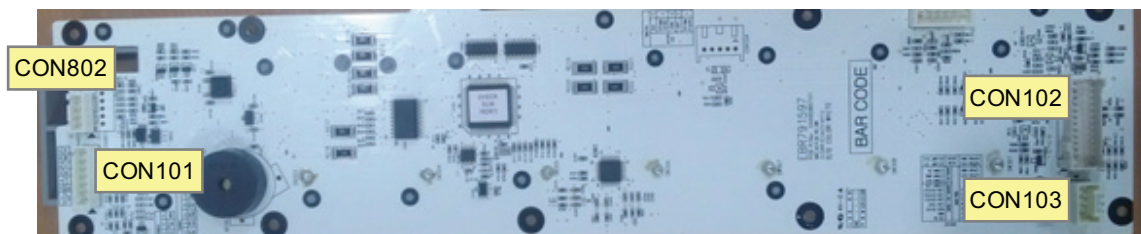



7-3. Sub PCB



8. Trouble Shooting

8-1. Freezer Sensor Error (E FS)


Symptom	Check Point
1. E FS	1. Check for a loose connection 2. Check Sensor Resistance

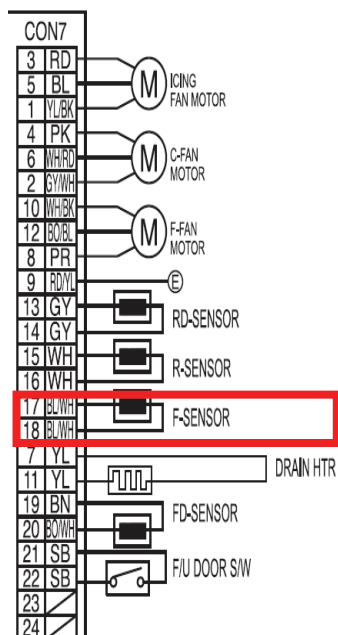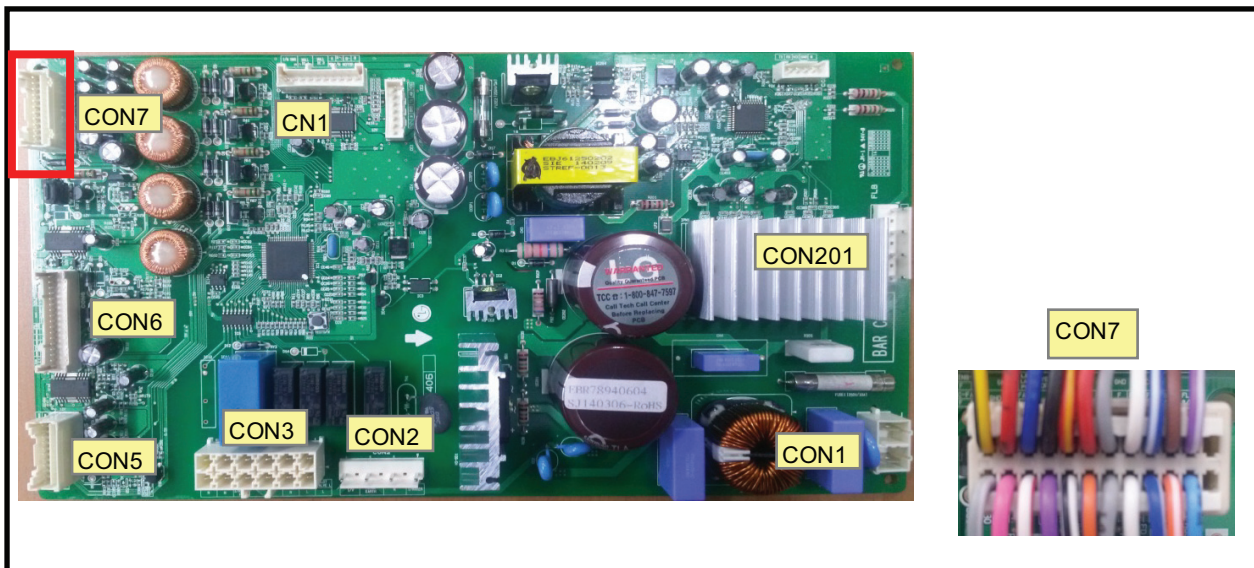




	Resistance [Ω]	
CON7 17 th pin ~ 18 th pin	Short	0
	Open	OFF
	Other	Normal

CON7 17 th pin ~ 18 th pin	Resistance [Ω]
-22°F / -30°C	40k
-13°F / -25°C	30k
-4°F / -20°C	23k
-13°F / -25°C	17k
14°F / -10°C	13k
23°F / -5°C	10k
32°F / 0°C	8k

Freezer Sensor Error (E FS)


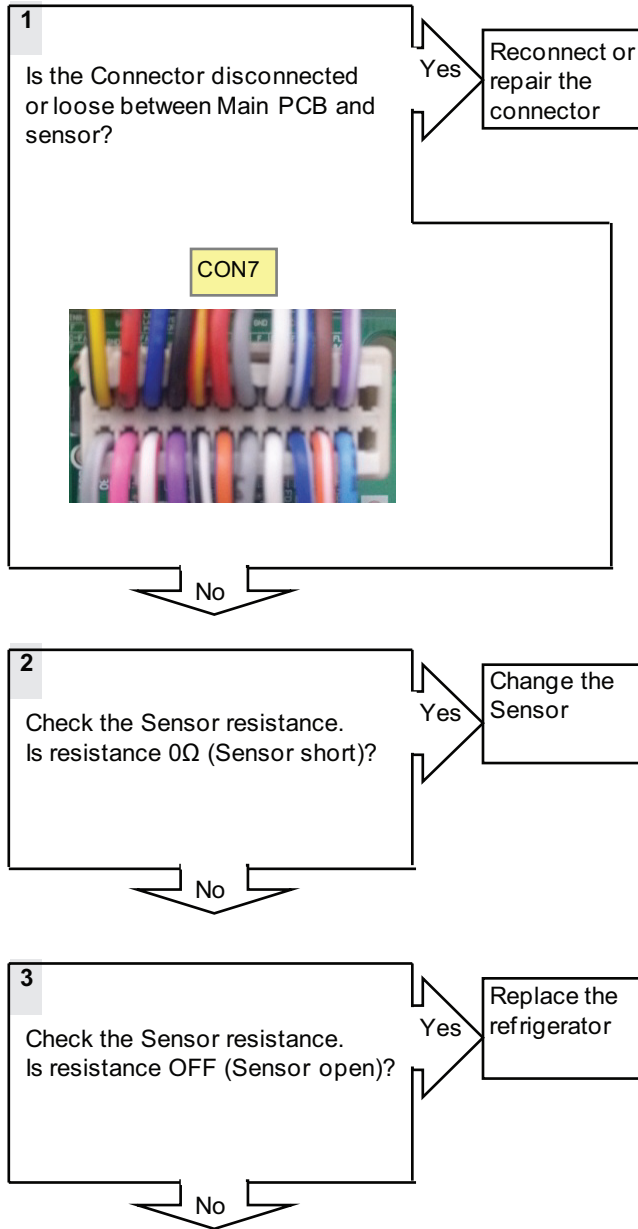


CON7

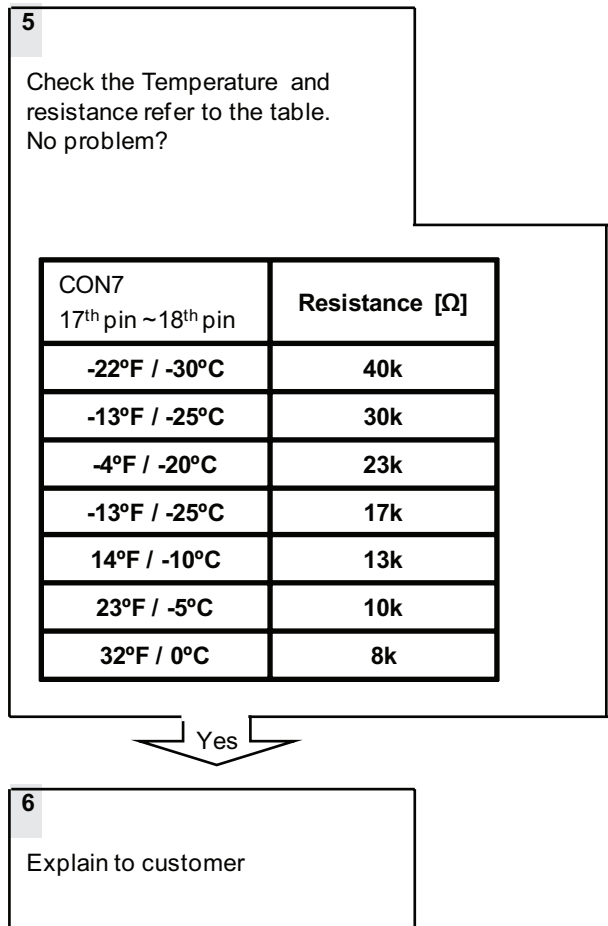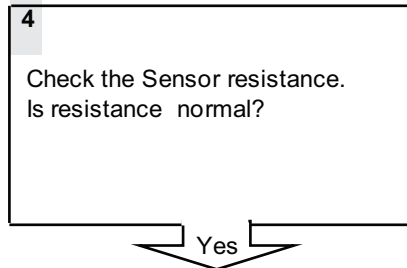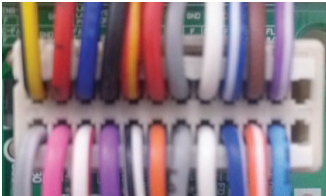


2. Refrigerator Sensor Error (E rS)

Symptom	Check Point
1. E rS	1. Check for a loose connection 2. Check Sensor Resistance

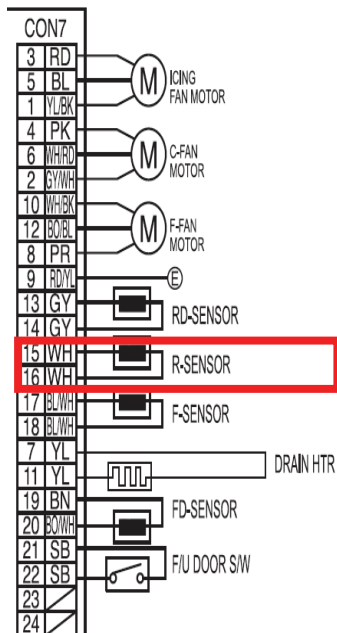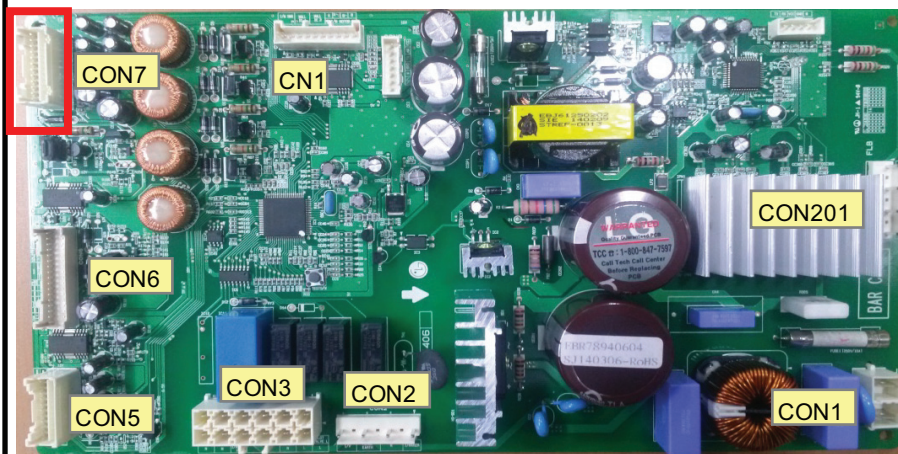


CON7 15 th pin ~ 16 th pin	Resistance [Ω]	
	Short	0
	Open	OFF
	Other	Normal

CON7 15 th pin ~ 16 th pin	Resistance [Ω]
23°F / -5°C	38k
32°F / 0°C	30k
41°F / 5°C	24k
50°F / 10°C	19.5k
59°F / 15°C	16k

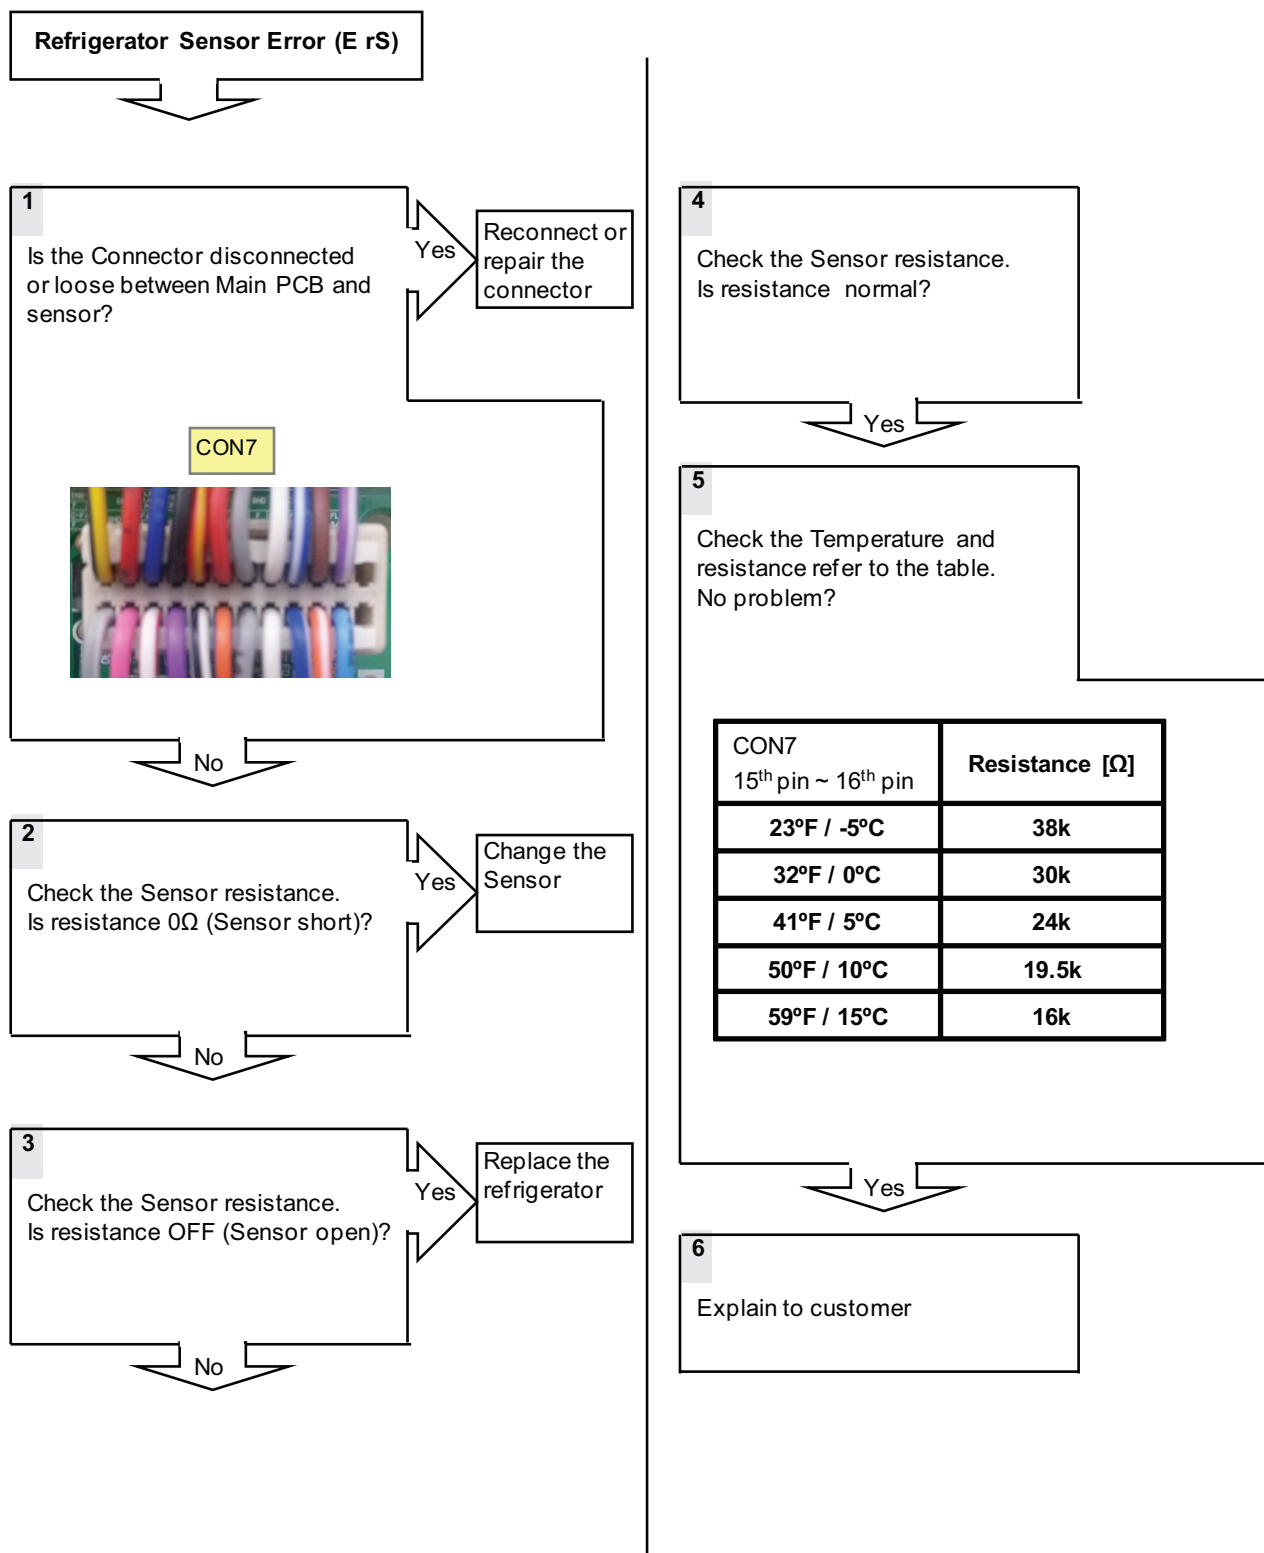


8-3. Icing Sensor Error (E IS)

Symptom	Check Point
1. E IS	1. Check for a loose connection 2. Check Sensor Resistance

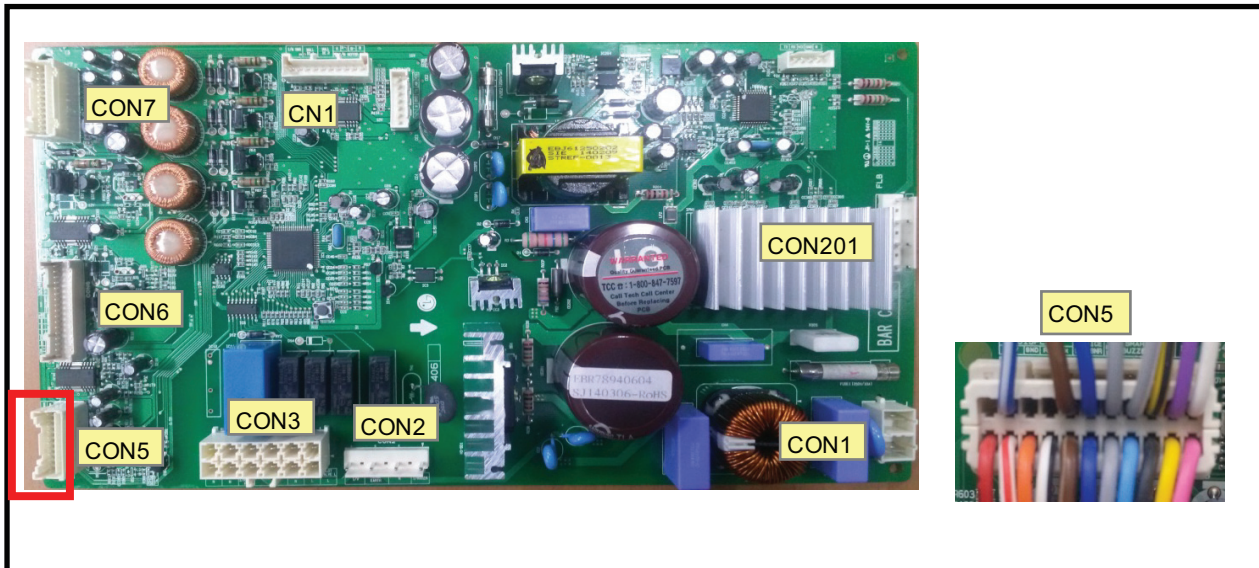


<div> </div>	Resistance [Ω]	
	Short	0
	Open	OFF
	Other	Normal

CON5 11 th pin ~ 12 th pin	Resistance [Ω]
-22°F / -30°C	40k
-13°F / -25°C	30k
-4°F / -20°C	23k
-13°F / -25°C	17k
14°F / -10°C	13k
23°F / -5°C	10k
32°F / 0°C	8k

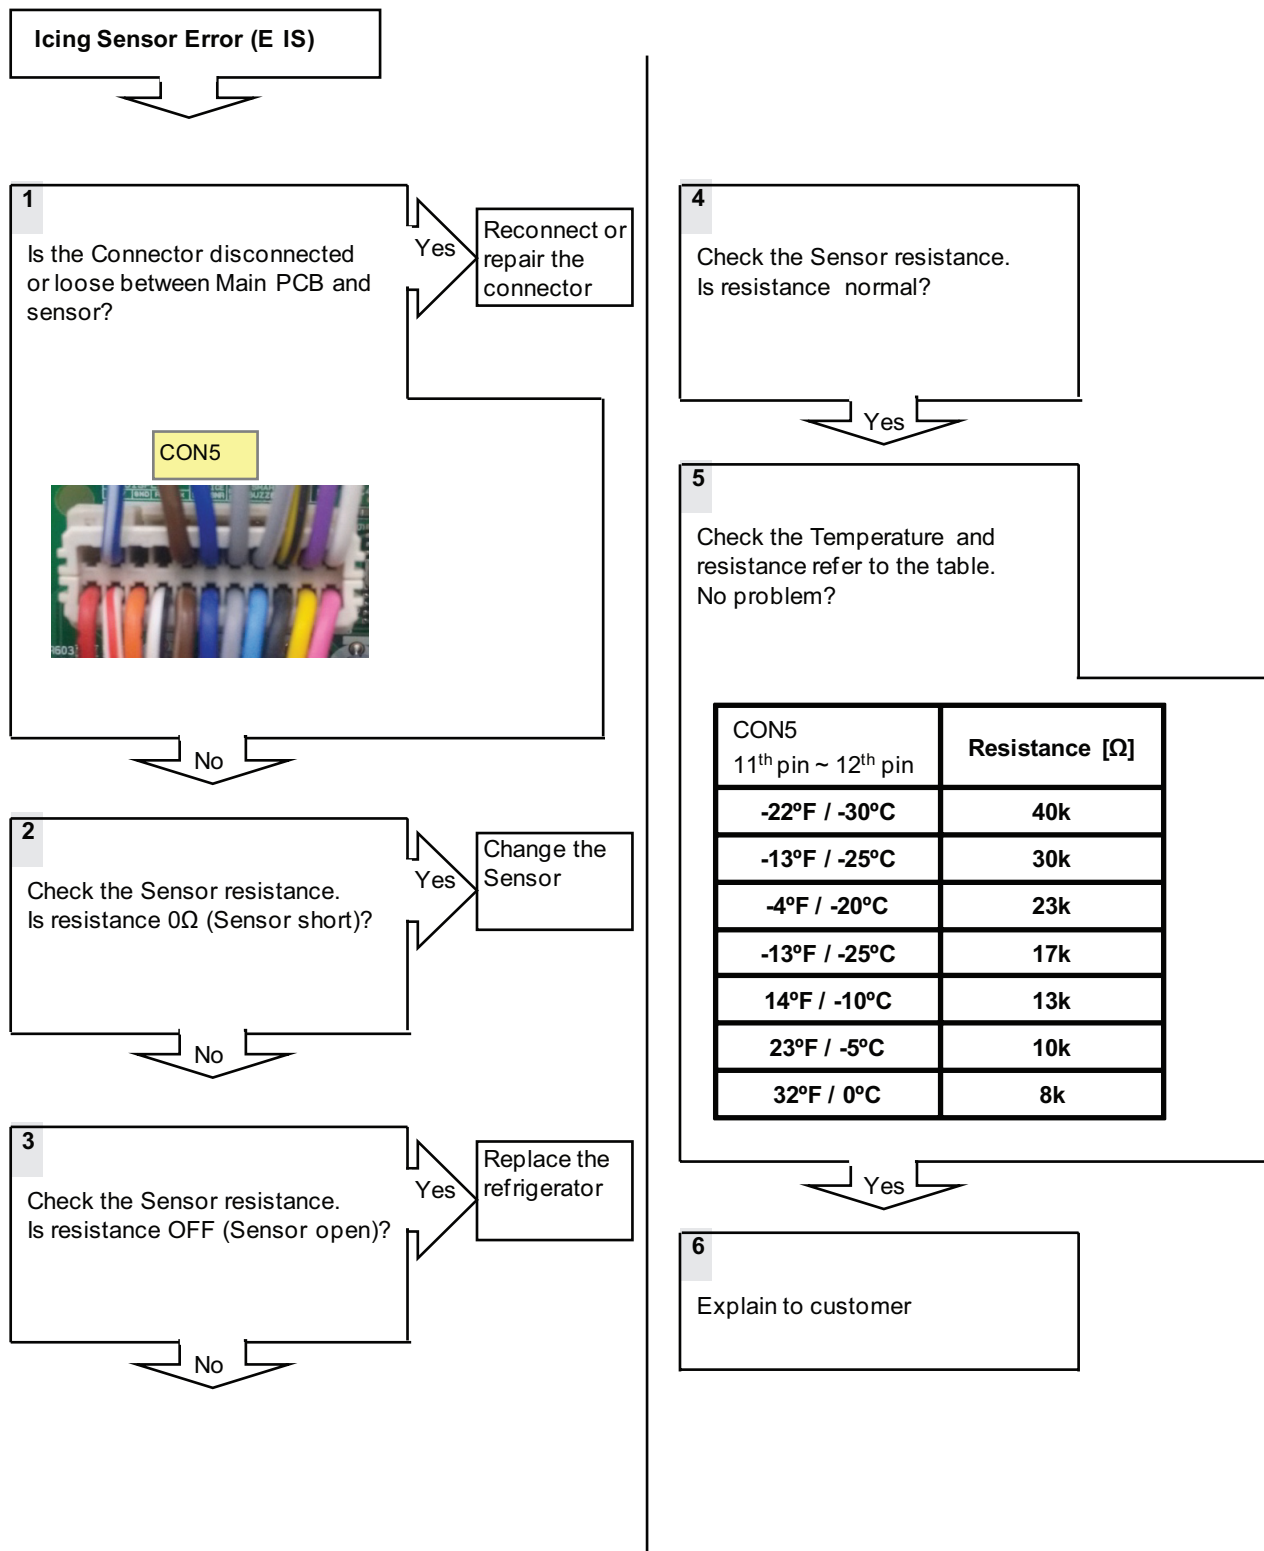


8-4. Defrost Sensor Error (F dS)

Symptom	Check Point
1. F dS	1. Check for a loose connection 2. Check Sensor Resistance

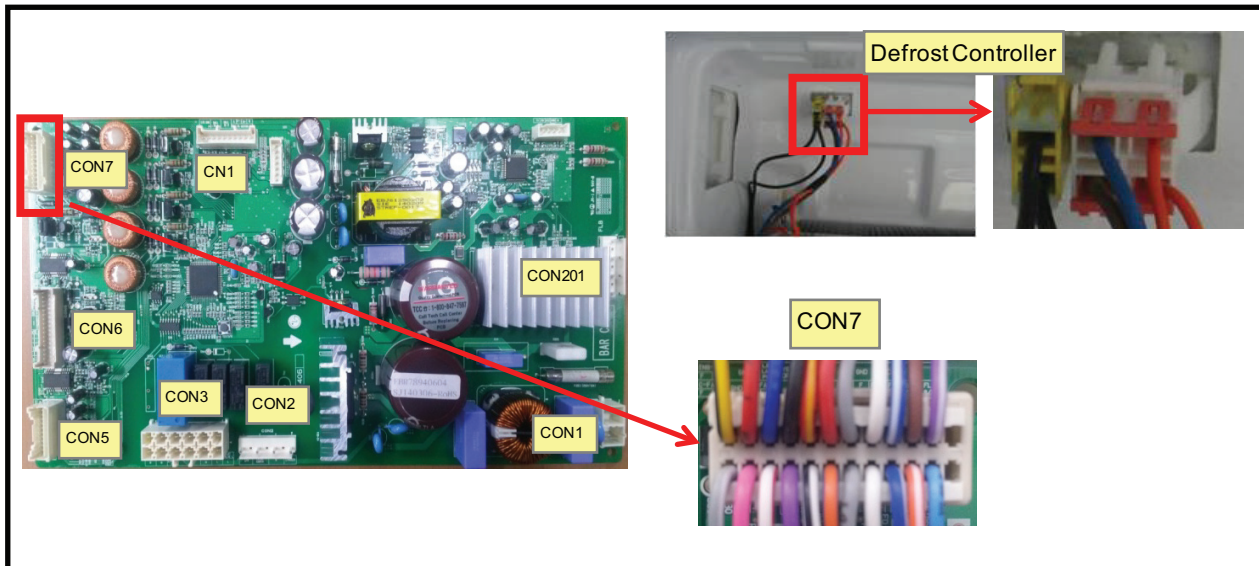


<div> <div>CON7</div> <div> <div>3 RD</div> <div>5 BL</div> <div>1 YL BK</div> <div>4 PK</div> <div>6 WH RD</div> <div>2 GY WH</div> <div>10 WH BK</div> <div>12 BO BL</div> <div>8 PR</div> <div>9 RD YL</div> <div>13 GY</div> <div>14 GY</div> <div>15 WH</div> <div>16 WH</div> <div>17 BL WH</div> <div>18 BL WH</div> <div>7 YL</div> <div>11 YL</div> <div>19 BN</div> <div>20 RW WH</div> <div>21 SB</div> <div>22 SB</div> <div>23</div> <div>24</div> </div> </div> <div> <div>ICING FAN MOTOR</div> <div>G-FAN MOTOR</div> <div>F-FAN MOTOR</div> <div>RD-SENSOR</div> <div>R-SENSOR</div> <div>F-SENSOR</div> <div>DRAIN HTR</div> <div>FD-SENSOR</div> <div>F/U DOOR S/W</div> </div>	Resistance [Ω]	
	Short	0
	Open	OFF
	Other	Normal

CON7 19 th pin ~ 20 th pin	Resistance [Ω]
23°F / -5°C	38k
32°F / 0°C	30k
41°F / 5°C	24k
50°F / 10°C	19.5k
59°F / 15°C	16k

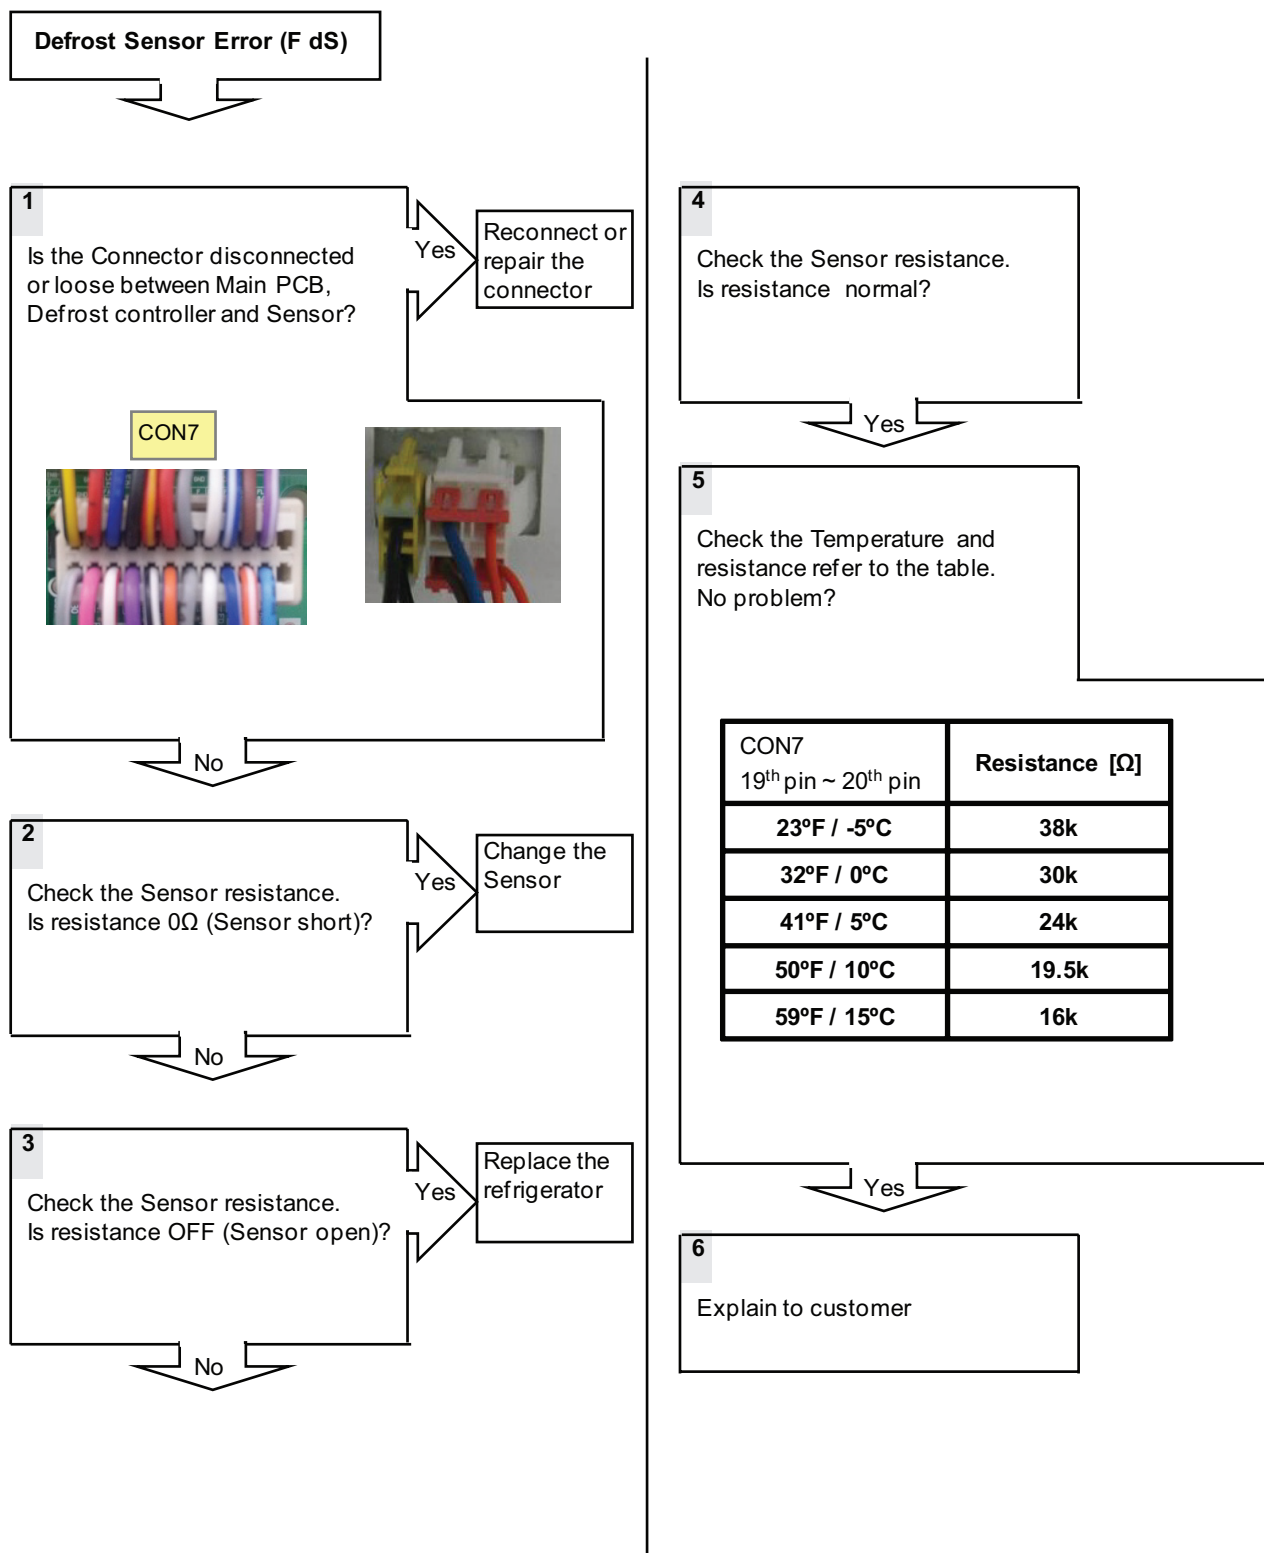


8-5. Defrost Sensor Error (r dS)

Symptom	Check Point
1. r dS	1. Check for a loose connection 2. Check Sensor Resistance

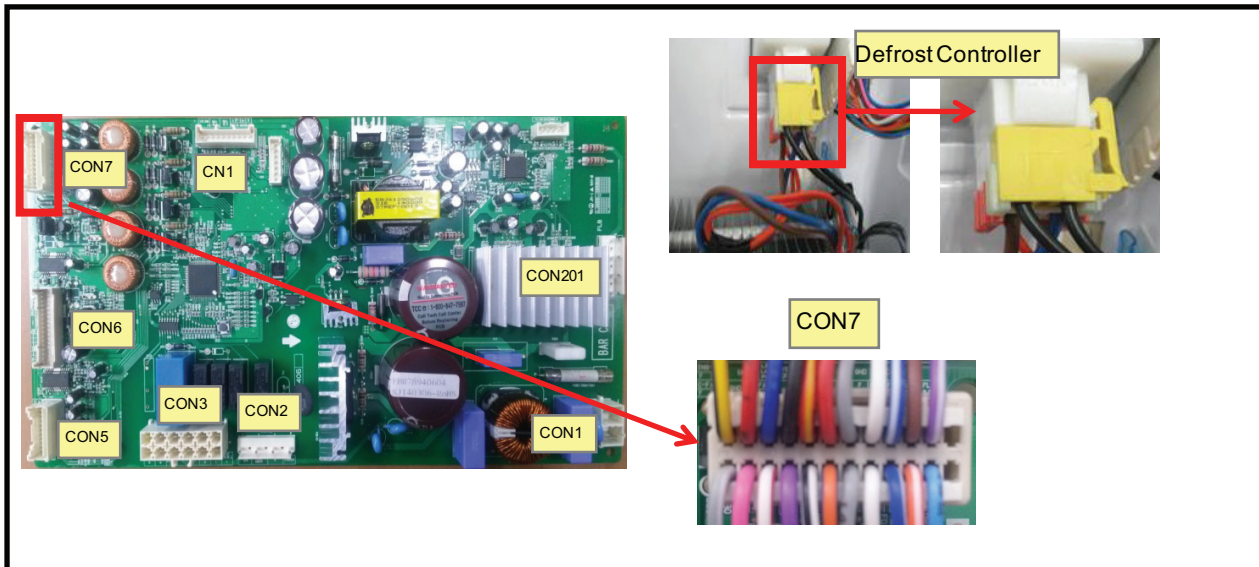

<div> <div>CON7</div> <table> <tr><td>3</td><td>RD</td><td>ICING FAN MOTOR</td></tr> <tr><td>5</td><td>BL</td><td></td></tr> <tr><td>1</td><td>VLBK</td><td></td></tr> <tr><td>4</td><td>PK</td><td></td></tr> <tr><td>6</td><td>WHRD</td><td>C-FAN MOTOR</td></tr> <tr><td>2</td><td>GYWH</td><td></td></tr> <tr><td>10</td><td>WHBK</td><td></td></tr> <tr><td>12</td><td>BOBL</td><td>F-FAN MOTOR</td></tr> <tr><td>8</td><td>PR</td><td></td></tr> <tr><td>9</td><td>RDYI</td><td></td></tr> <tr><td>13</td><td>GY</td><td>RD-SENSOR</td></tr> <tr><td>14</td><td>GY</td><td></td></tr> <tr><td>15</td><td>WH</td><td>R-SENSOR</td></tr> <tr><td>16</td><td>WH</td><td></td></tr> <tr><td>17</td><td>BLWH</td><td>F-SENSOR</td></tr> <tr><td>18</td><td>BLWH</td><td></td></tr> <tr><td>7</td><td>YL</td><td>DRAIN HTR</td></tr> <tr><td>11</td><td>YL</td><td></td></tr> <tr><td>19</td><td>BN</td><td>FD-SENSOR</td></tr> <tr><td>20</td><td>BOYH</td><td></td></tr> <tr><td>21</td><td>SB</td><td>F/U DOOR S/W</td></tr> <tr><td>22</td><td>SB</td><td></td></tr> <tr><td>23</td><td></td><td></td></tr> <tr><td>24</td><td></td><td></td></tr> </table> </div>	3	RD	ICING FAN MOTOR	5	BL		1	VLBK		4	PK		6	WHRD	C-FAN MOTOR	2	GYWH		10	WHBK		12	BOBL	F-FAN MOTOR	8	PR		9	RDYI		13	GY	RD-SENSOR	14	GY		15	WH	R-SENSOR	16	WH		17	BLWH	F-SENSOR	18	BLWH		7	YL	DRAIN HTR	11	YL		19	BN	FD-SENSOR	20	BOYH		21	SB	F/U DOOR S/W	22	SB		23			24			Resistance [Ω]	
3	RD	ICING FAN MOTOR																																																																								
5	BL																																																																									
1	VLBK																																																																									
4	PK																																																																									
6	WHRD	C-FAN MOTOR																																																																								
2	GYWH																																																																									
10	WHBK																																																																									
12	BOBL	F-FAN MOTOR																																																																								
8	PR																																																																									
9	RDYI																																																																									
13	GY	RD-SENSOR																																																																								
14	GY																																																																									
15	WH	R-SENSOR																																																																								
16	WH																																																																									
17	BLWH	F-SENSOR																																																																								
18	BLWH																																																																									
7	YL	DRAIN HTR																																																																								
11	YL																																																																									
19	BN	FD-SENSOR																																																																								
20	BOYH																																																																									
21	SB	F/U DOOR S/W																																																																								
22	SB																																																																									
23																																																																										
24																																																																										
CON7 13 th pin ~ 14 th pin	Short	0																																																																								
	Open	OFF																																																																								
	Other	Normal																																																																								
CON7 13 th pin ~ 14 th pin	Resistance [Ω]																																																																									
23°F / -5°C	38k																																																																									
32°F / 0°C	30k																																																																									
41°F / 5°C	24k																																																																									
50°F / 10°C	19.5k																																																																									
59°F / 15°C	16k																																																																									

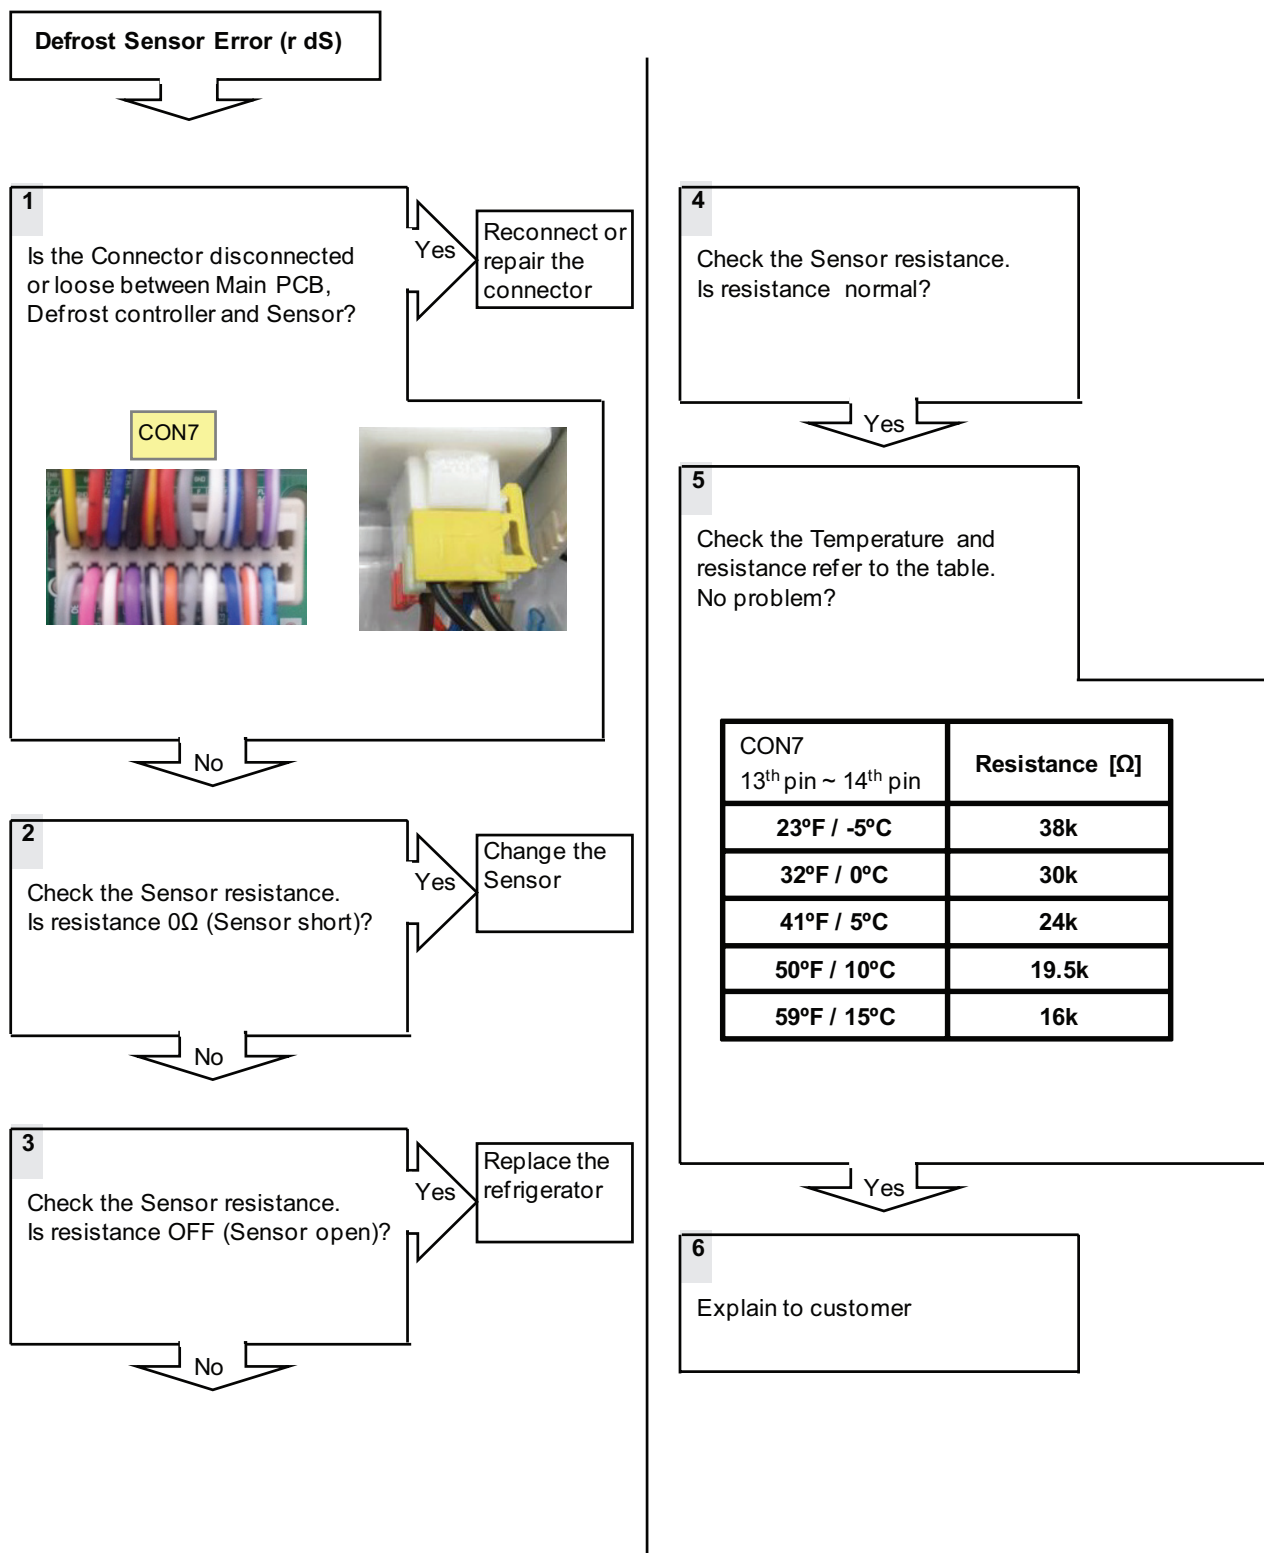

8-6. Defrost Heater Error (F dH)

Symptom	Check Point
1. F dH	<ol style="list-style-type: none"> 1. Check the door gasket 2. Check the Defrost control part 3. Check the PCB output voltage 4. Check Defrost Heater


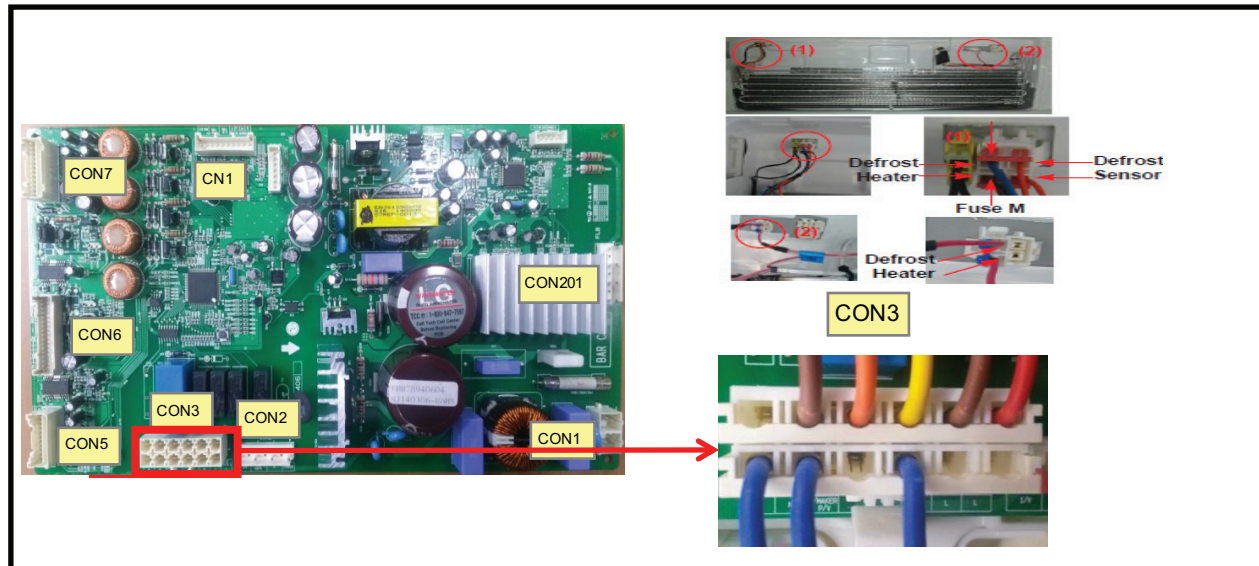



Diagram (A) shows the wiring for the defrost system. The main PCB is connected to the BL(N) lines. The defrost heater circuit is highlighted in red, showing the connection between FUSE-M1, R-DEF-HTR, F1-DEF-HTR, F2-DEF-HTR, and HBAR HTR. The diagram also shows the connection to connector CON3, with pins 1 through 12 labeled. The diagram is labeled (A) and PK 1.

Part	Resistance [Ω]
FUSE-M	0
Defrost Heater	42~50
Defrost Sensor	22k \uparrow

TEST MODE 3	Voltage [V]
CON3 6 th pin ~ 10 th pin	112V ~ 116V


TEST MODE 1	Voltage [V]
CON3 6 th pin ~ 10 th pin	0V

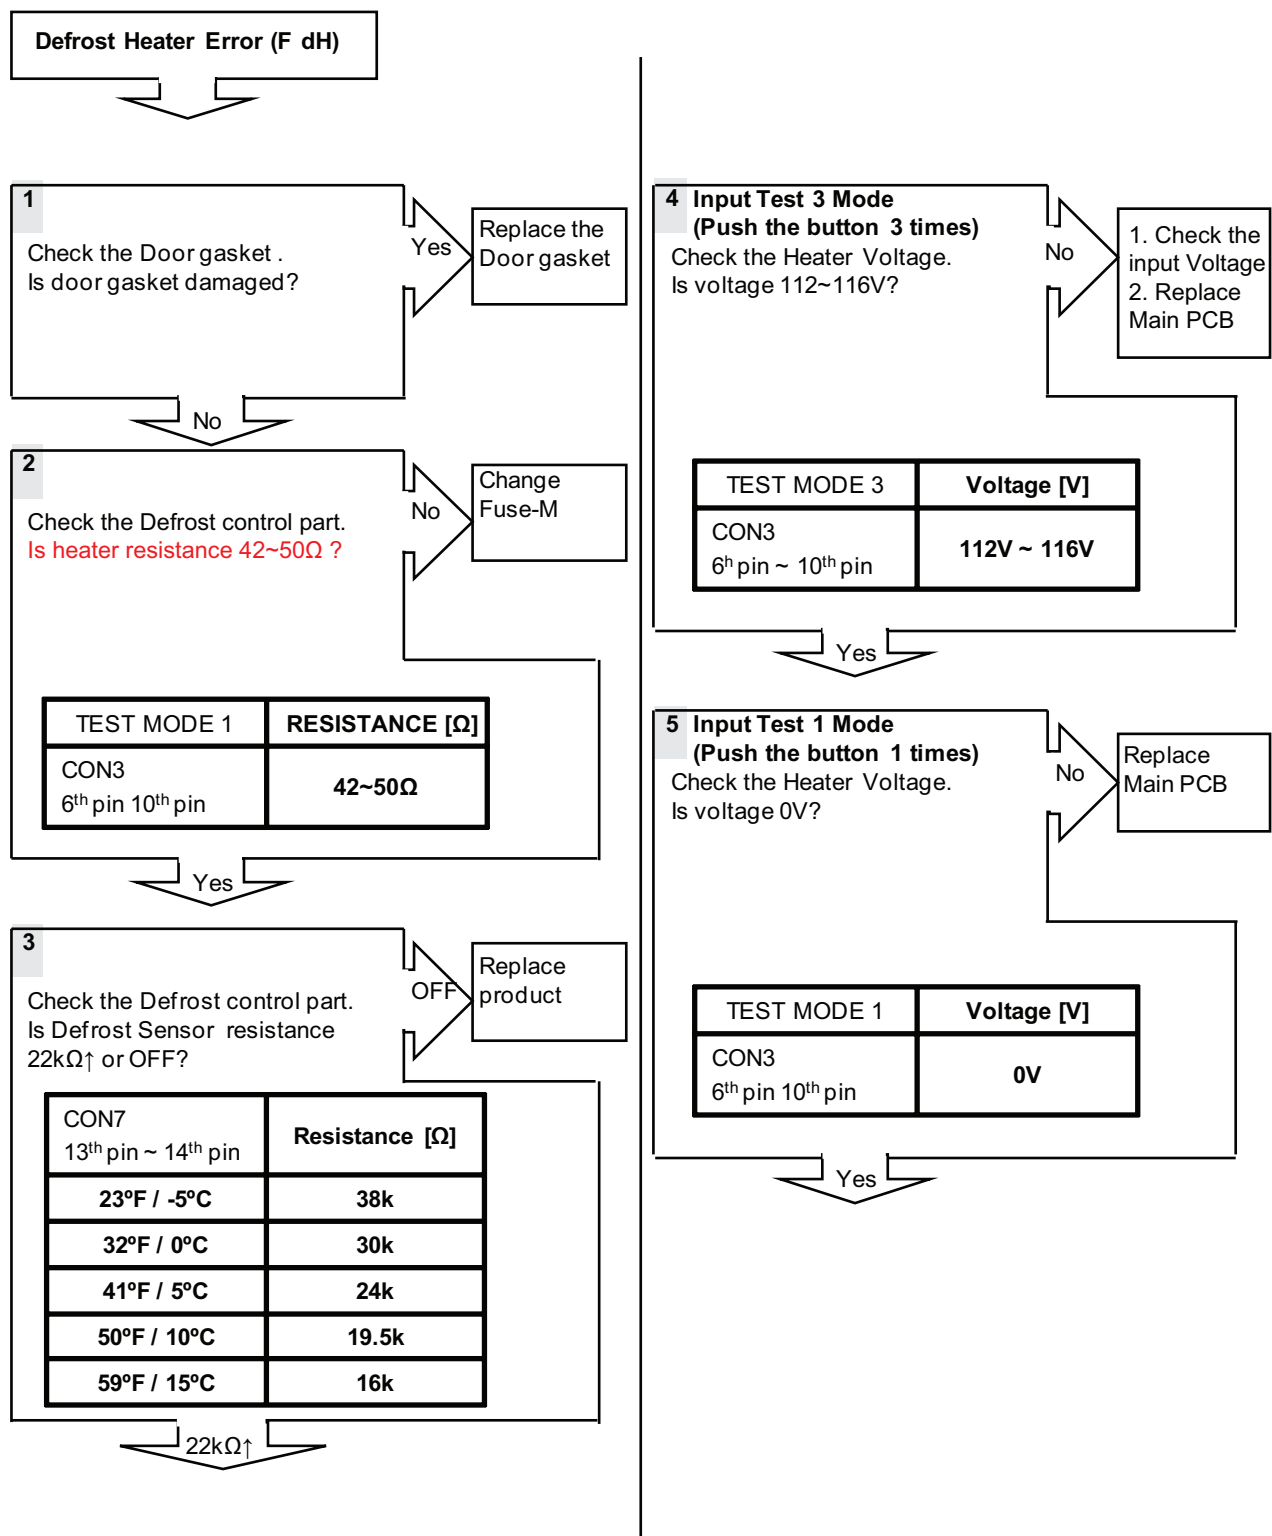

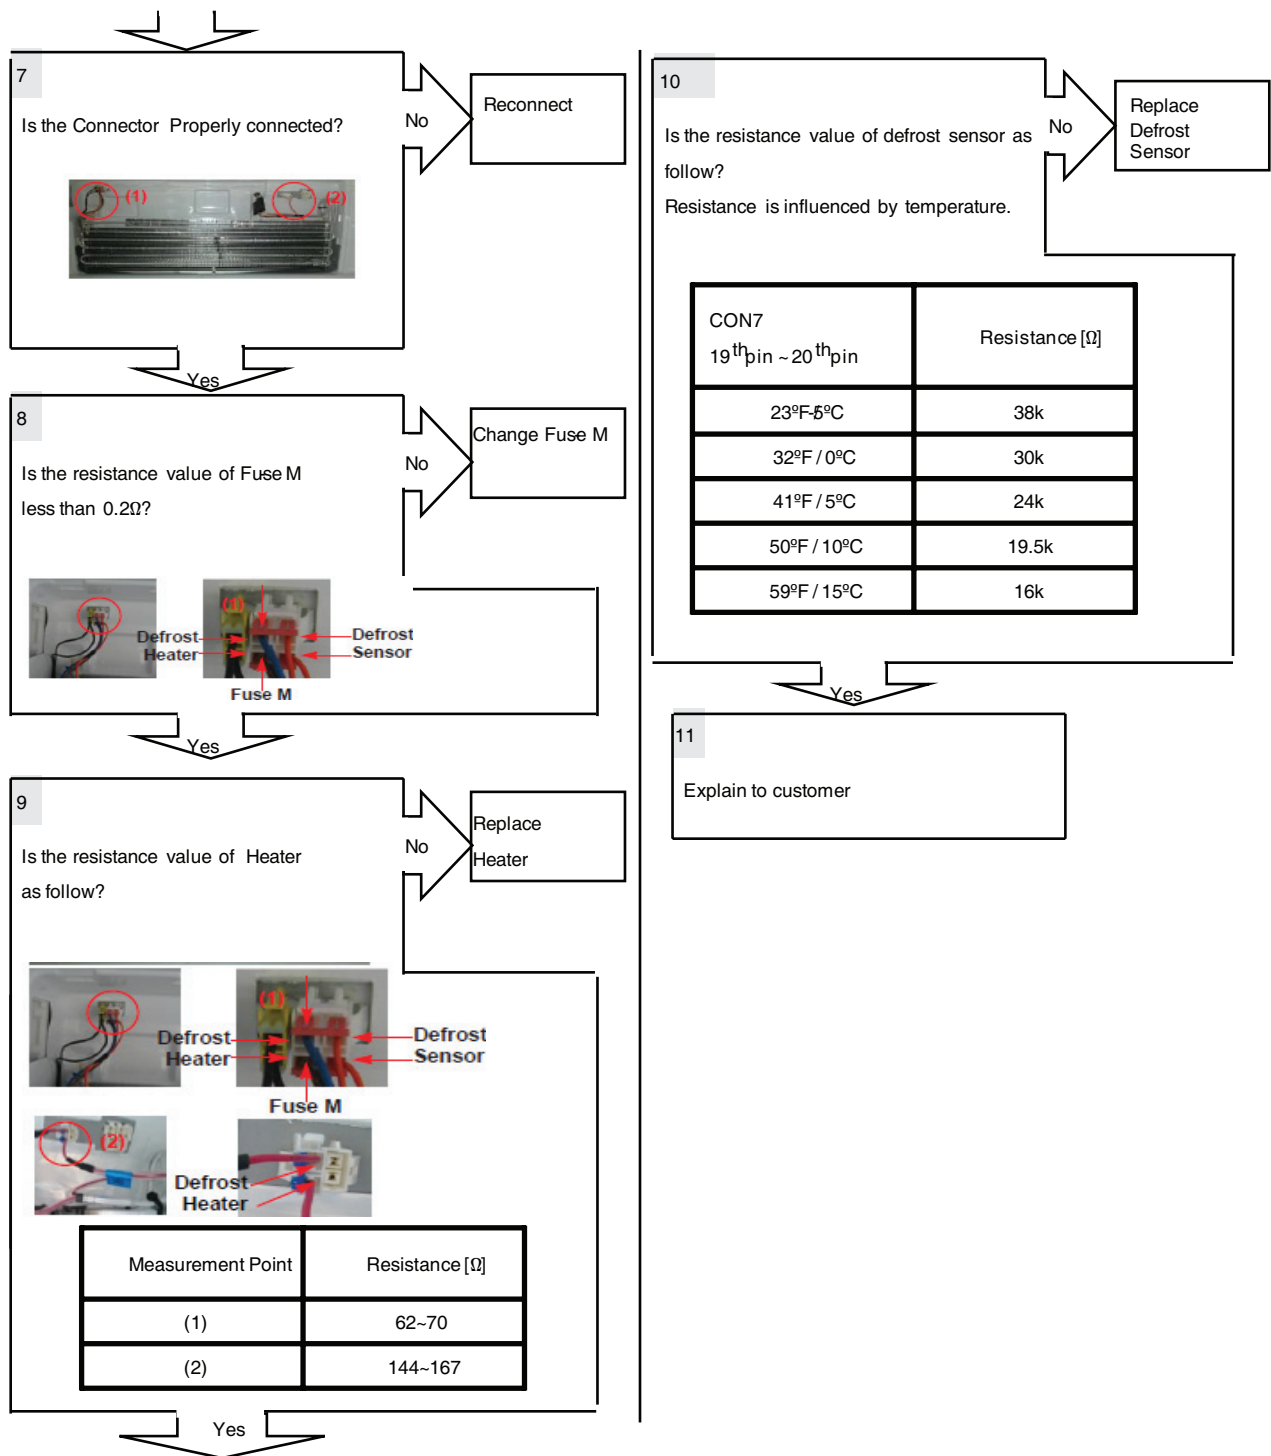

8-7. Defrost Heater Error (r dH)

Symptom	Check Point
1. r dH	<ol style="list-style-type: none"> 1. Check the door gasket 2. Check the Defrost control part 3. Check the PCB output voltage 4. Check Defrost Heater

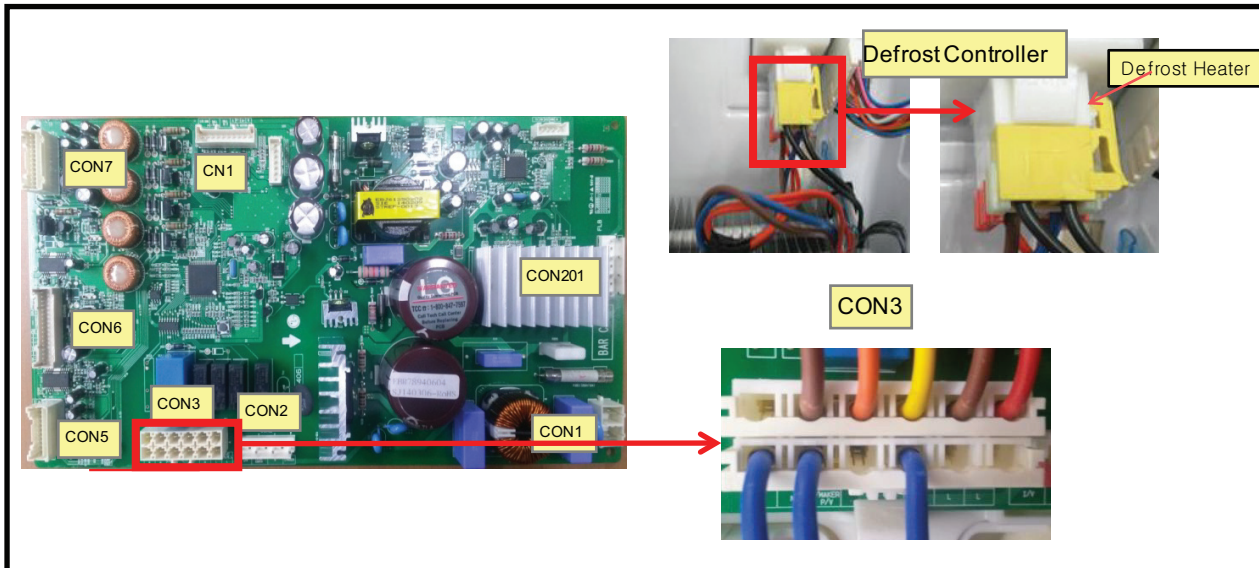



Wiring diagram for Defrost Heater Error. The diagram shows a power supply BL(N) connected to various components. A red box highlights the FUSE-M1, R-DEF-HTR, and F1-DEF-HTR components. The diagram also shows connections for PILOT VALVE, ICE VALVE, F2-DEF-HTR, DRAIN PIPE HTR, I-FAN-HTR, and HIBAR HTR. The components are connected to a terminal block labeled CON3 with pins 1 through 12.

Part	Resistance [Ω]
FUSE-M	0
Defrost Heater	105~117
Defrost Sensor	22k \uparrow

TEST MODE 3	Voltage [V]
CON3 6 th pin ~ 9 th pin	112V ~ 116V



TEST MODE 1	Voltage [V]
CON3 6 th pin ~ 9 th pin	0V

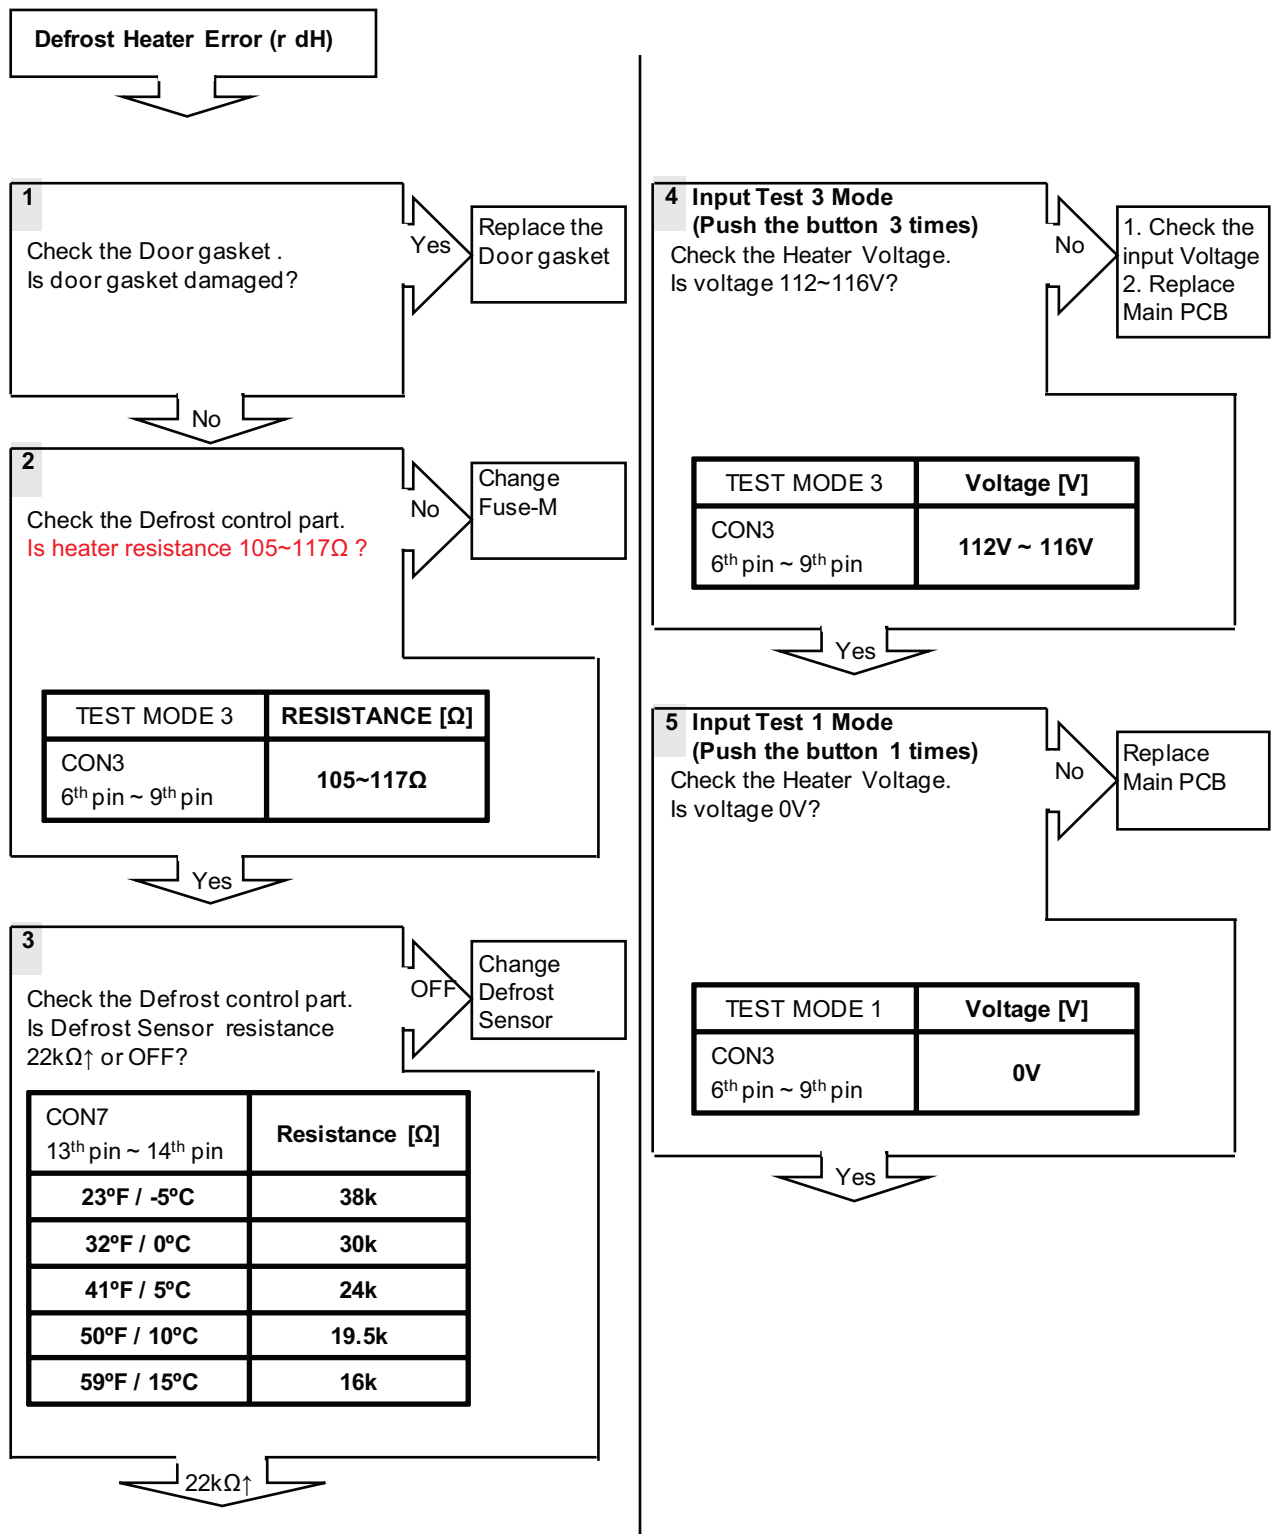

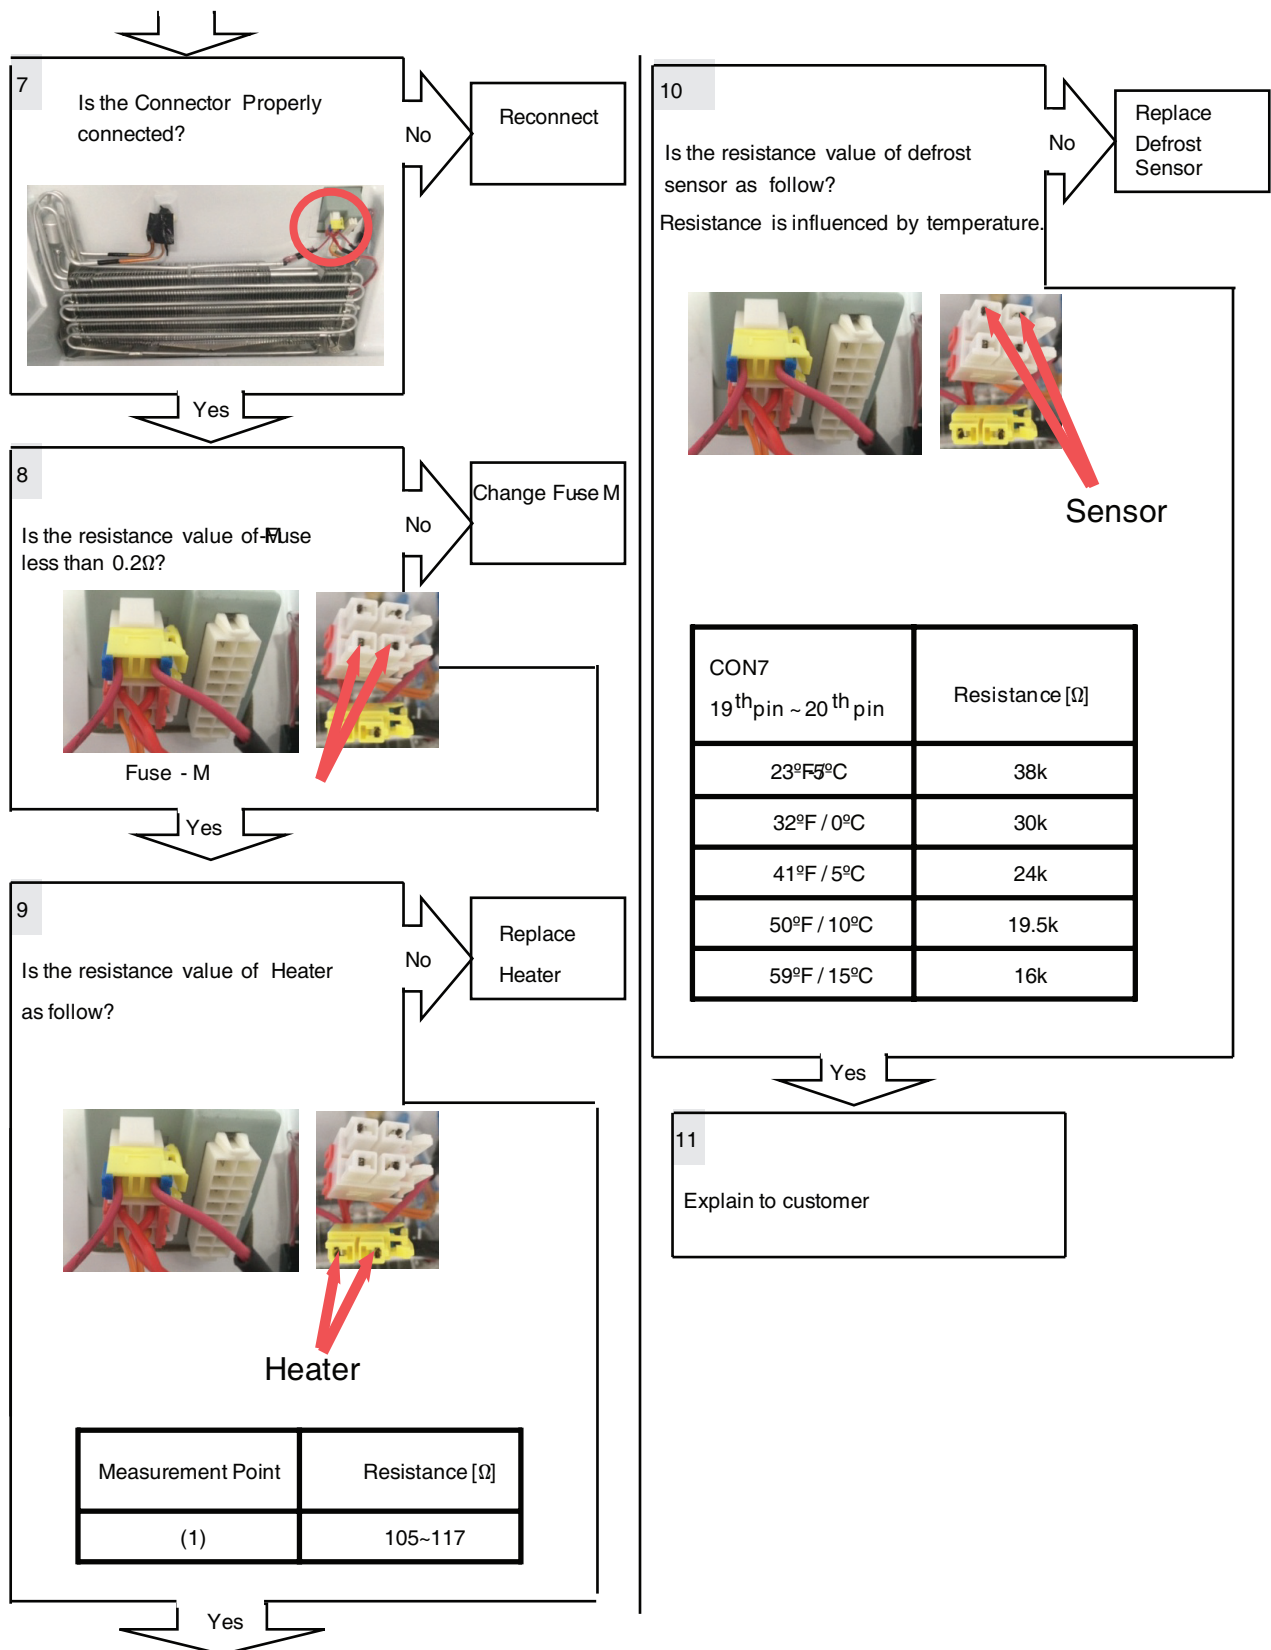


8-8. Refrigerator Fan Error (E rF)

Symptom	Check Point
1. E rF	<ol style="list-style-type: none"> 1. Check the air flow 2. Check the PCB Fan motor voltage

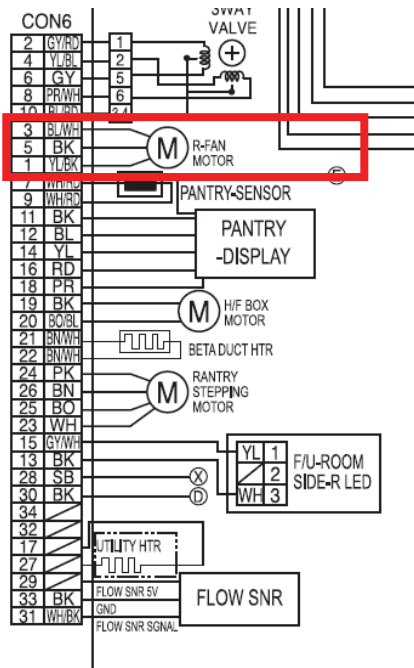
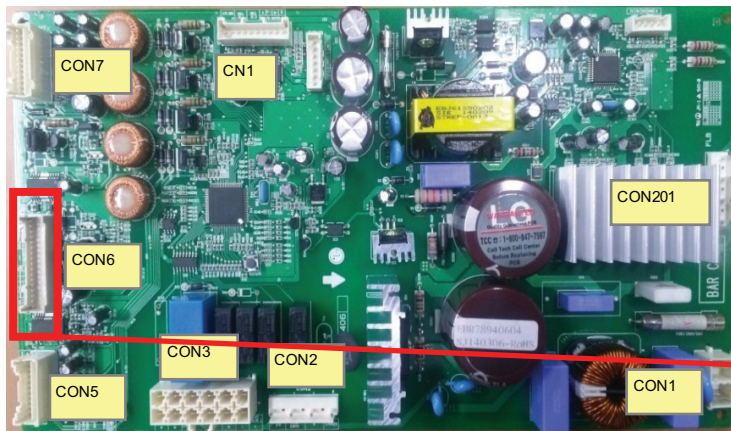


TEST MODE 1	Voltage [V]
CON6 3 rd pin ~ 5 th pin	8~12V
CON6 1 st pin ~ 5 th pin	Not 0V, 5V

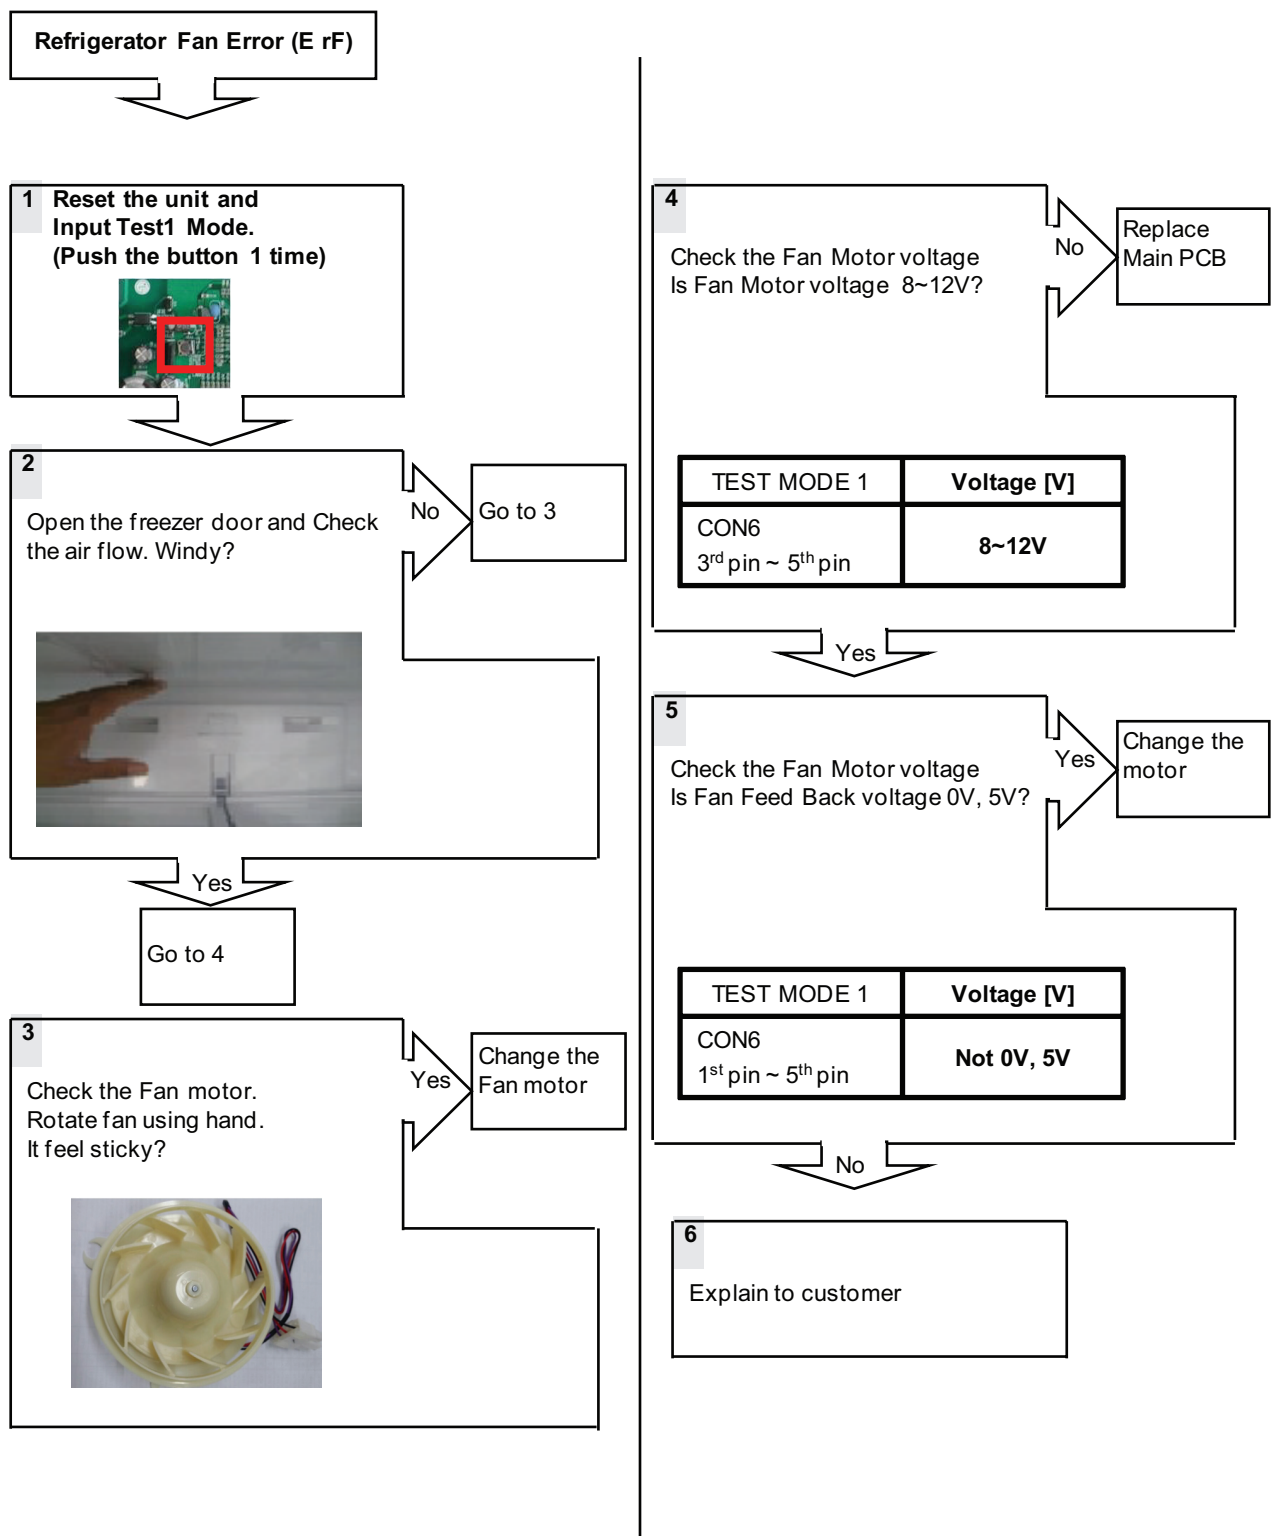


8-9. Freezer Fan Error (E FF)

Symptom	Check Point
1. E FF	<ol style="list-style-type: none"> 1. Check the air flow 2. Check the Fan Motor 2. Check the PCB Fan motor voltage

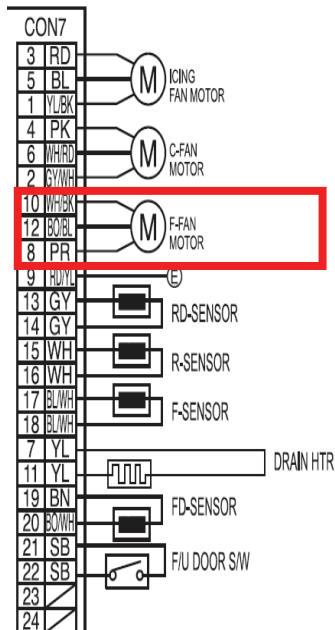
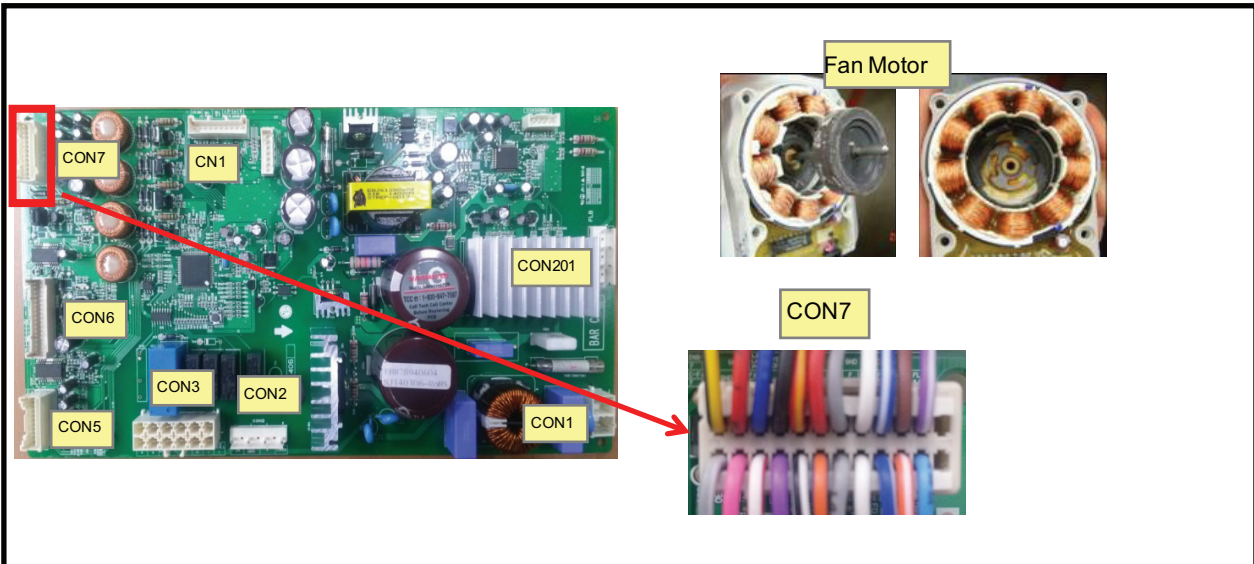


TEST MODE 1	Voltage [V]
CON7 10 th pin ~ 12 th pin	8~12V
CON7 8 th pin ~ 12 th pin	Not 0V, 5V

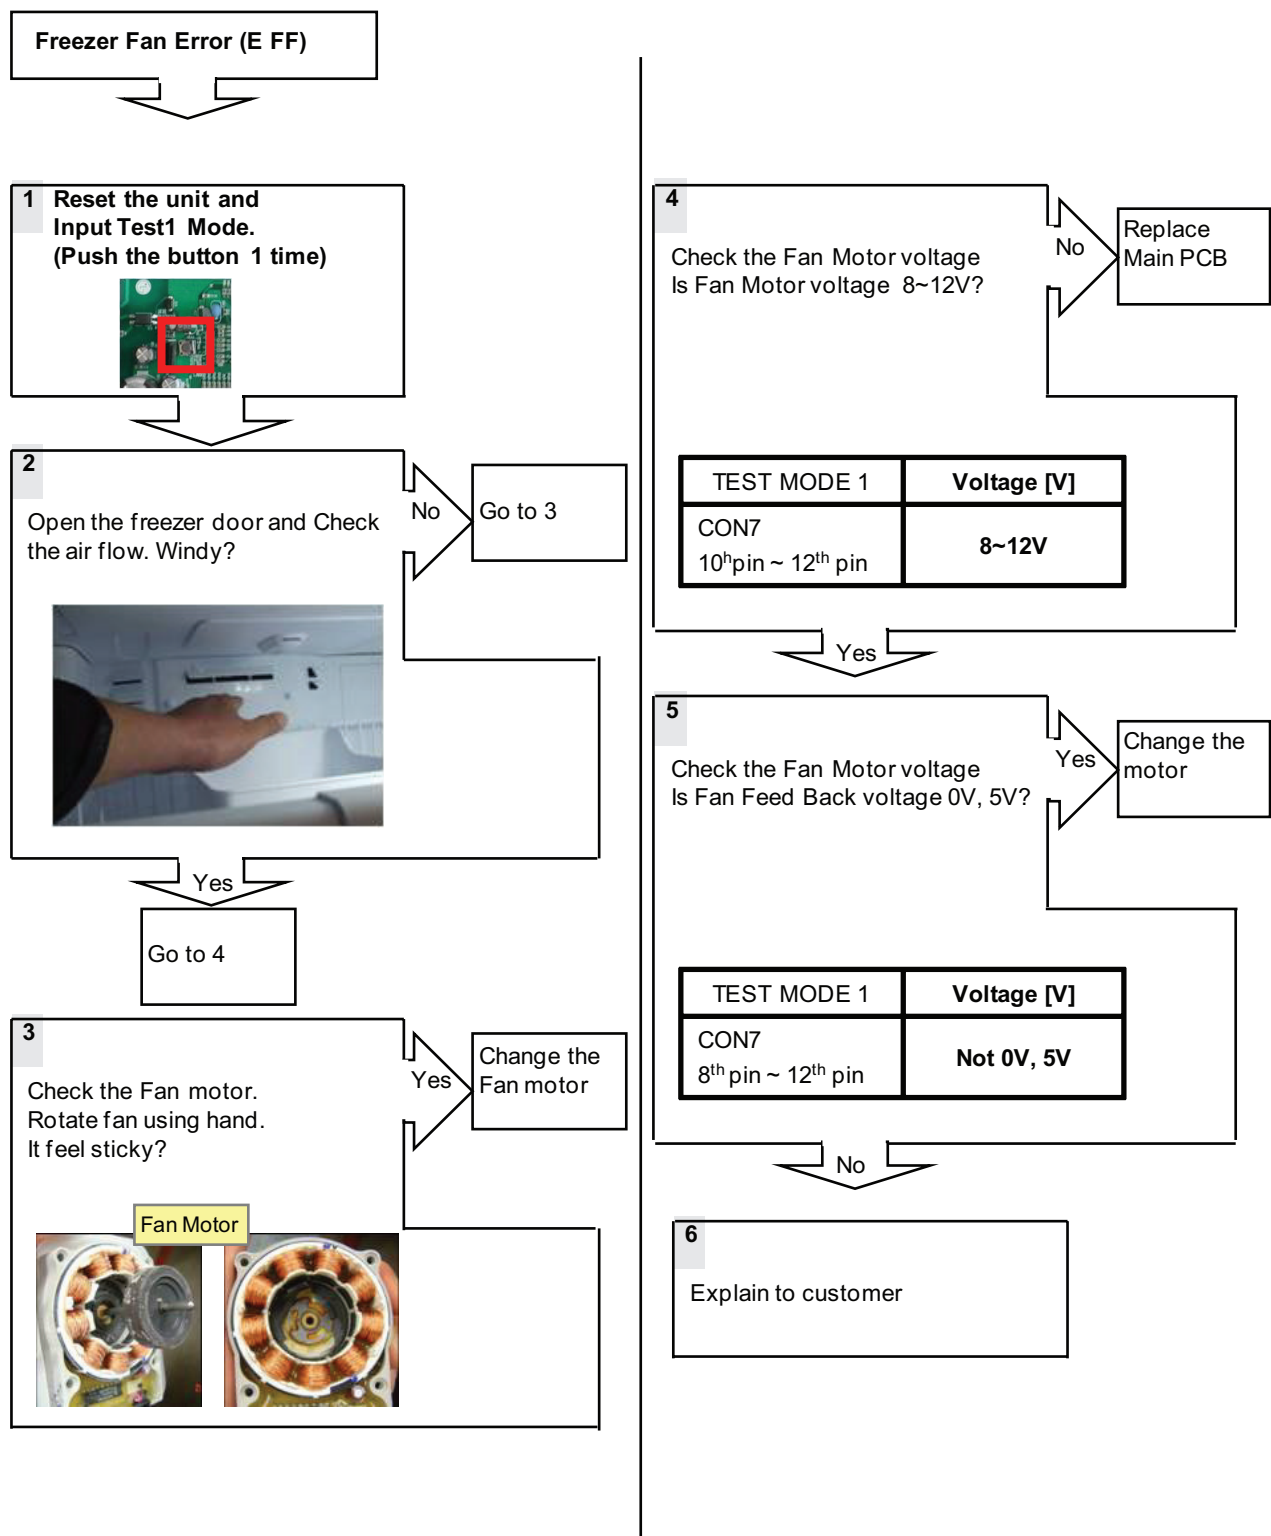


8-10. Icing Fan Error (E IF)

Symptom	Check Point
1. E IF	<ol style="list-style-type: none"> 1. Check the air flow 2. Check the Connector 2. Check the PCB Fan motor voltage

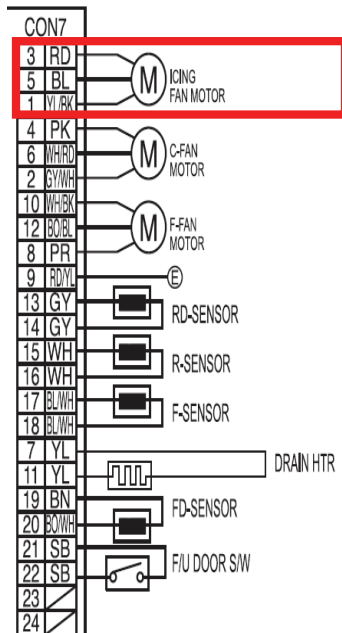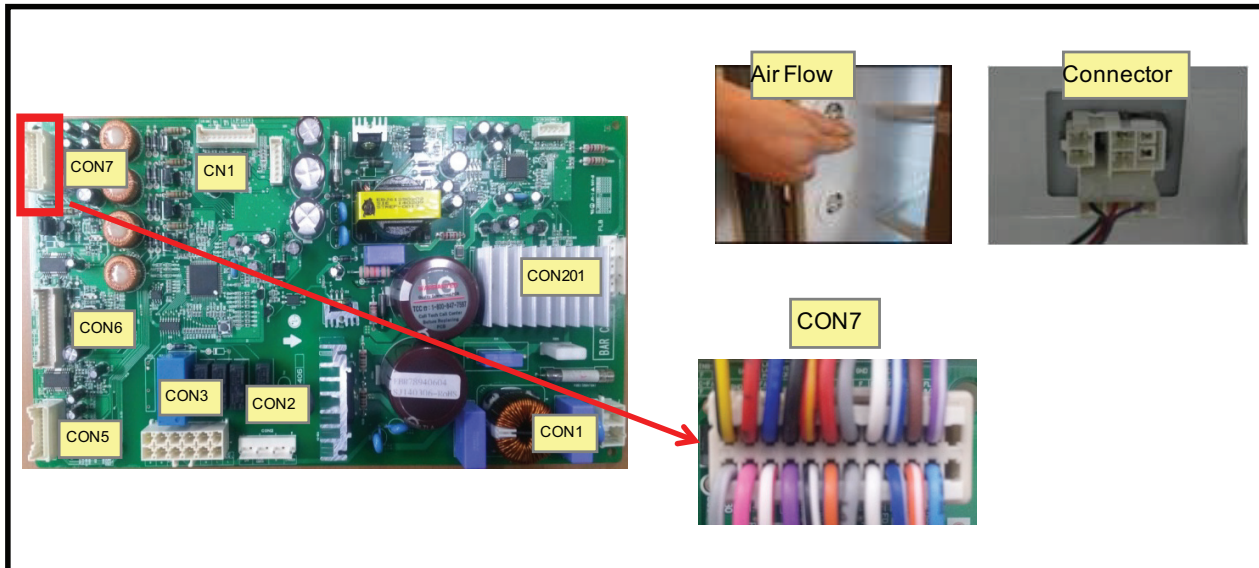


TEST MODE 1	Voltage [V]
CON7 3 rd pin ~ 5 th pin	8~12V
CON7 1 st pin ~ 5 th pin	Not 0V, 5V

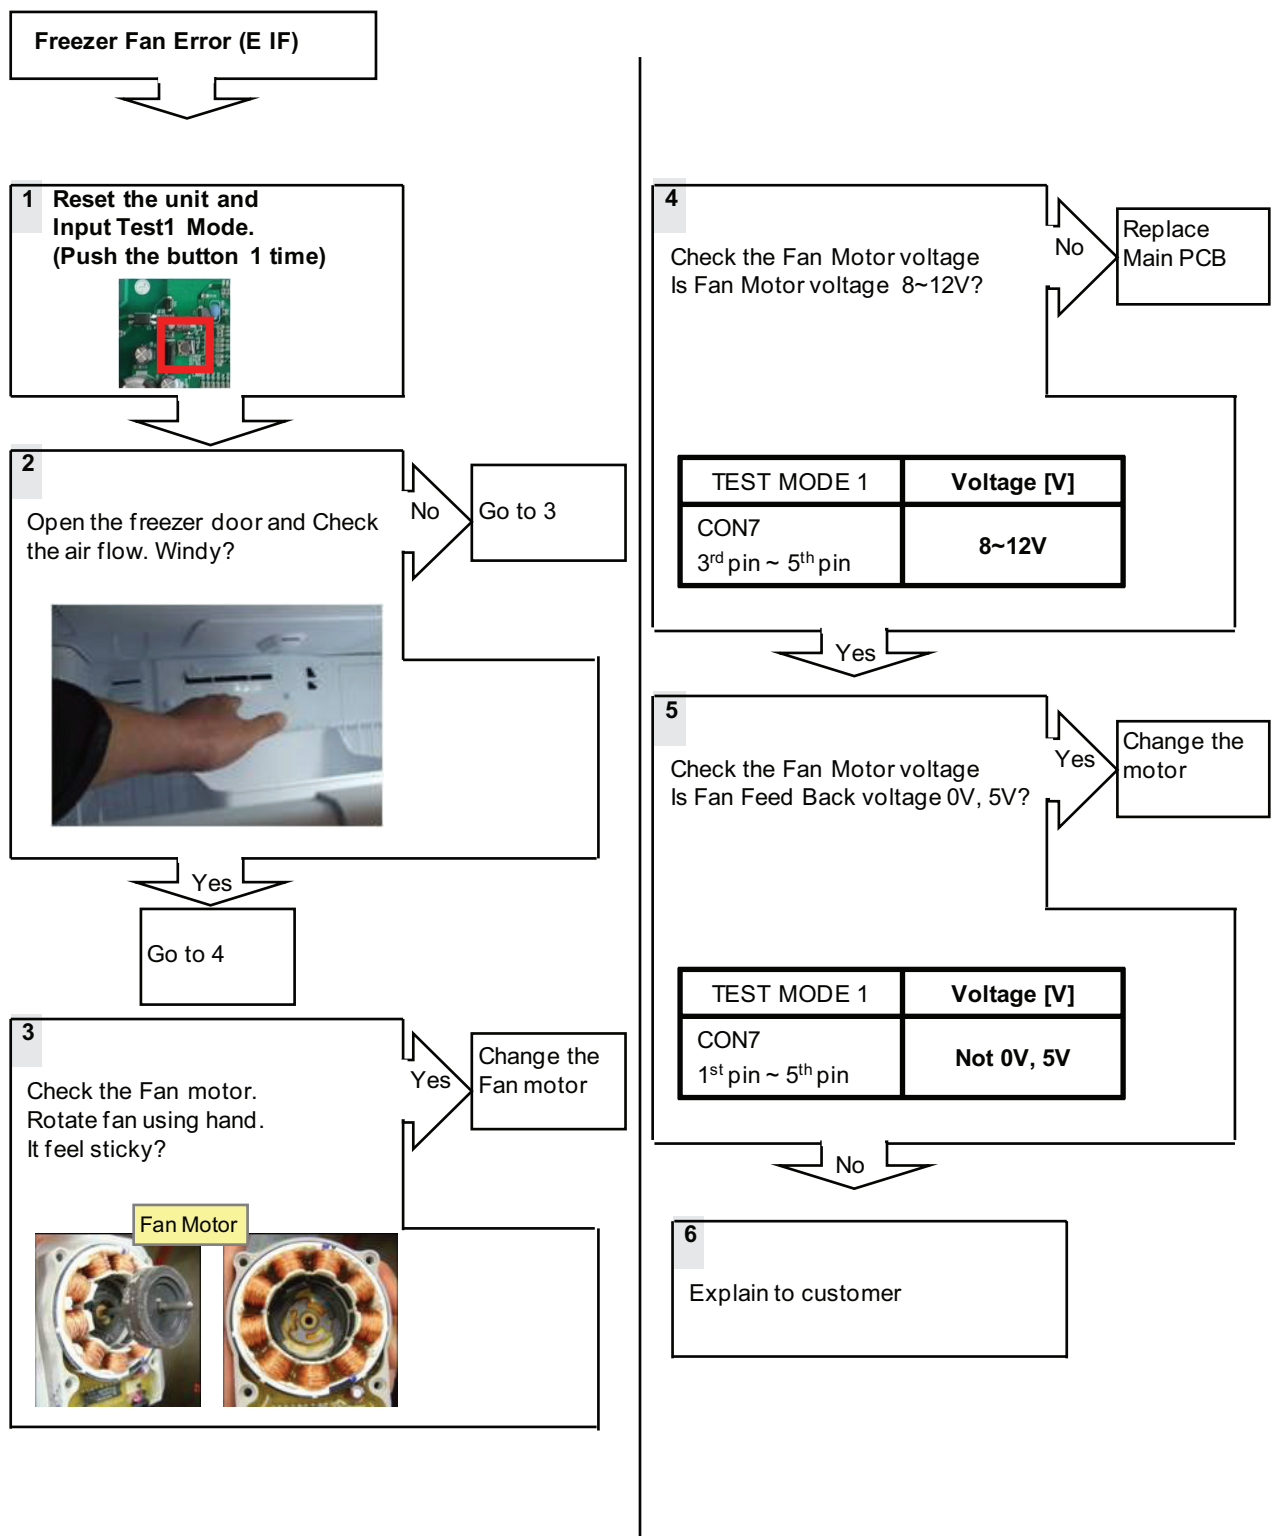


8-11. Condenser Fan Error (E CF)

Symptom	Check Point
1. E CF	1. Check the air flow 2. Check the Connector 2. Check the PCB Fan motor voltage

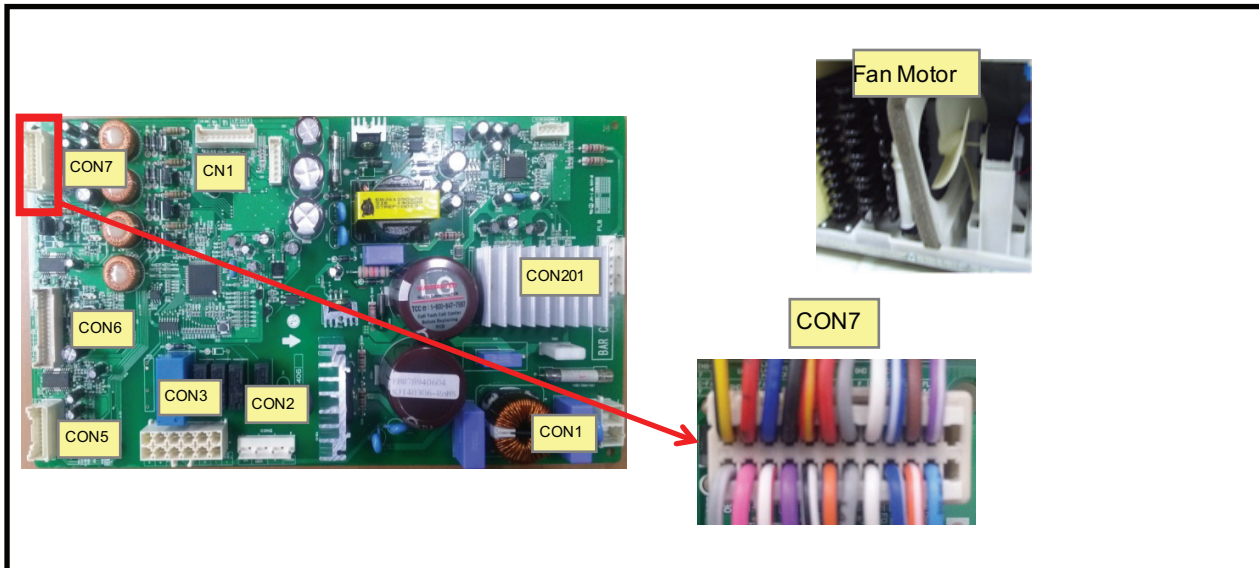


	<table border="1"> <thead> <tr> <th>TEST MODE 1</th><th>Voltage [V]</th></tr> </thead> <tbody> <tr> <td>CON7 4th pin ~ 6th pin</td><td>8~12V</td></tr> <tr> <td>CON7 2nd pin ~ 6th pin</td><td>Not 0V, 5V</td></tr> </tbody> </table>	TEST MODE 1	Voltage [V]	CON7 4 th pin ~ 6 th pin	8~12V	CON7 2 nd pin ~ 6 th pin	Not 0V, 5V
TEST MODE 1	Voltage [V]						
CON7 4 th pin ~ 6 th pin	8~12V						
CON7 2 nd pin ~ 6 th pin	Not 0V, 5V						

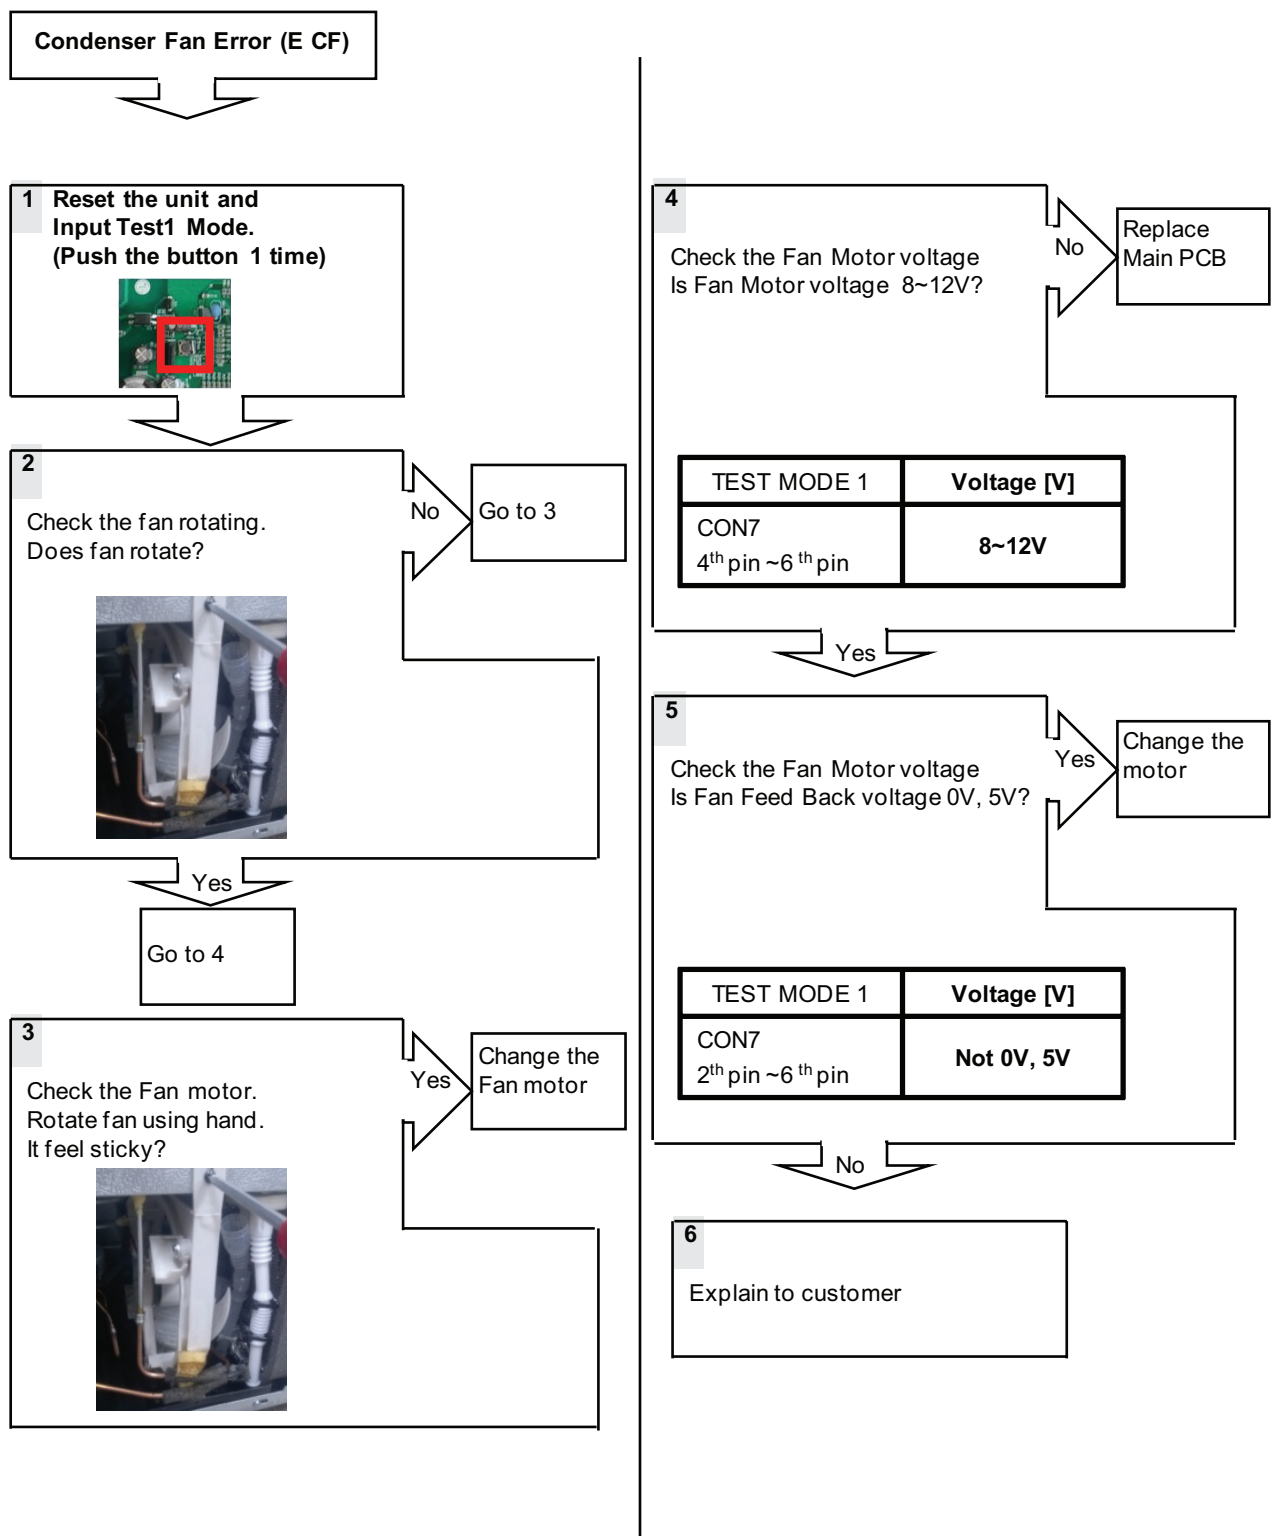


8-12. Communication Error (E CO)

Symptom	Check Point
1. E CO	1. Check the loose connection 2. Check the Hinge connection

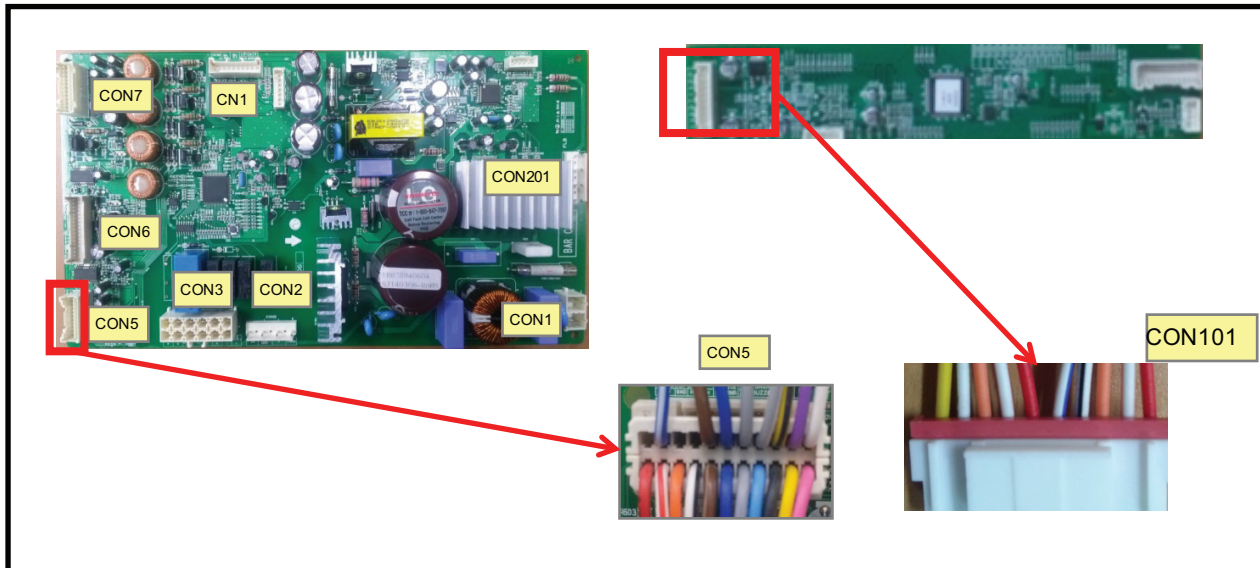


		Voltage [V]
	CON101 1 st pin ~ 2 nd pin	12V
	CON101 2 nd pin ~ 3 rd pin	Not 0V, 5V
	CON101 2 nd pin ~ 4 th pin	Not 0V, 5V
	CON5 4 th pin ~ 6 th pin	Not 0V, 5V
	CON5 4 th pin ~ 8 th pin	Not 0V, 5V

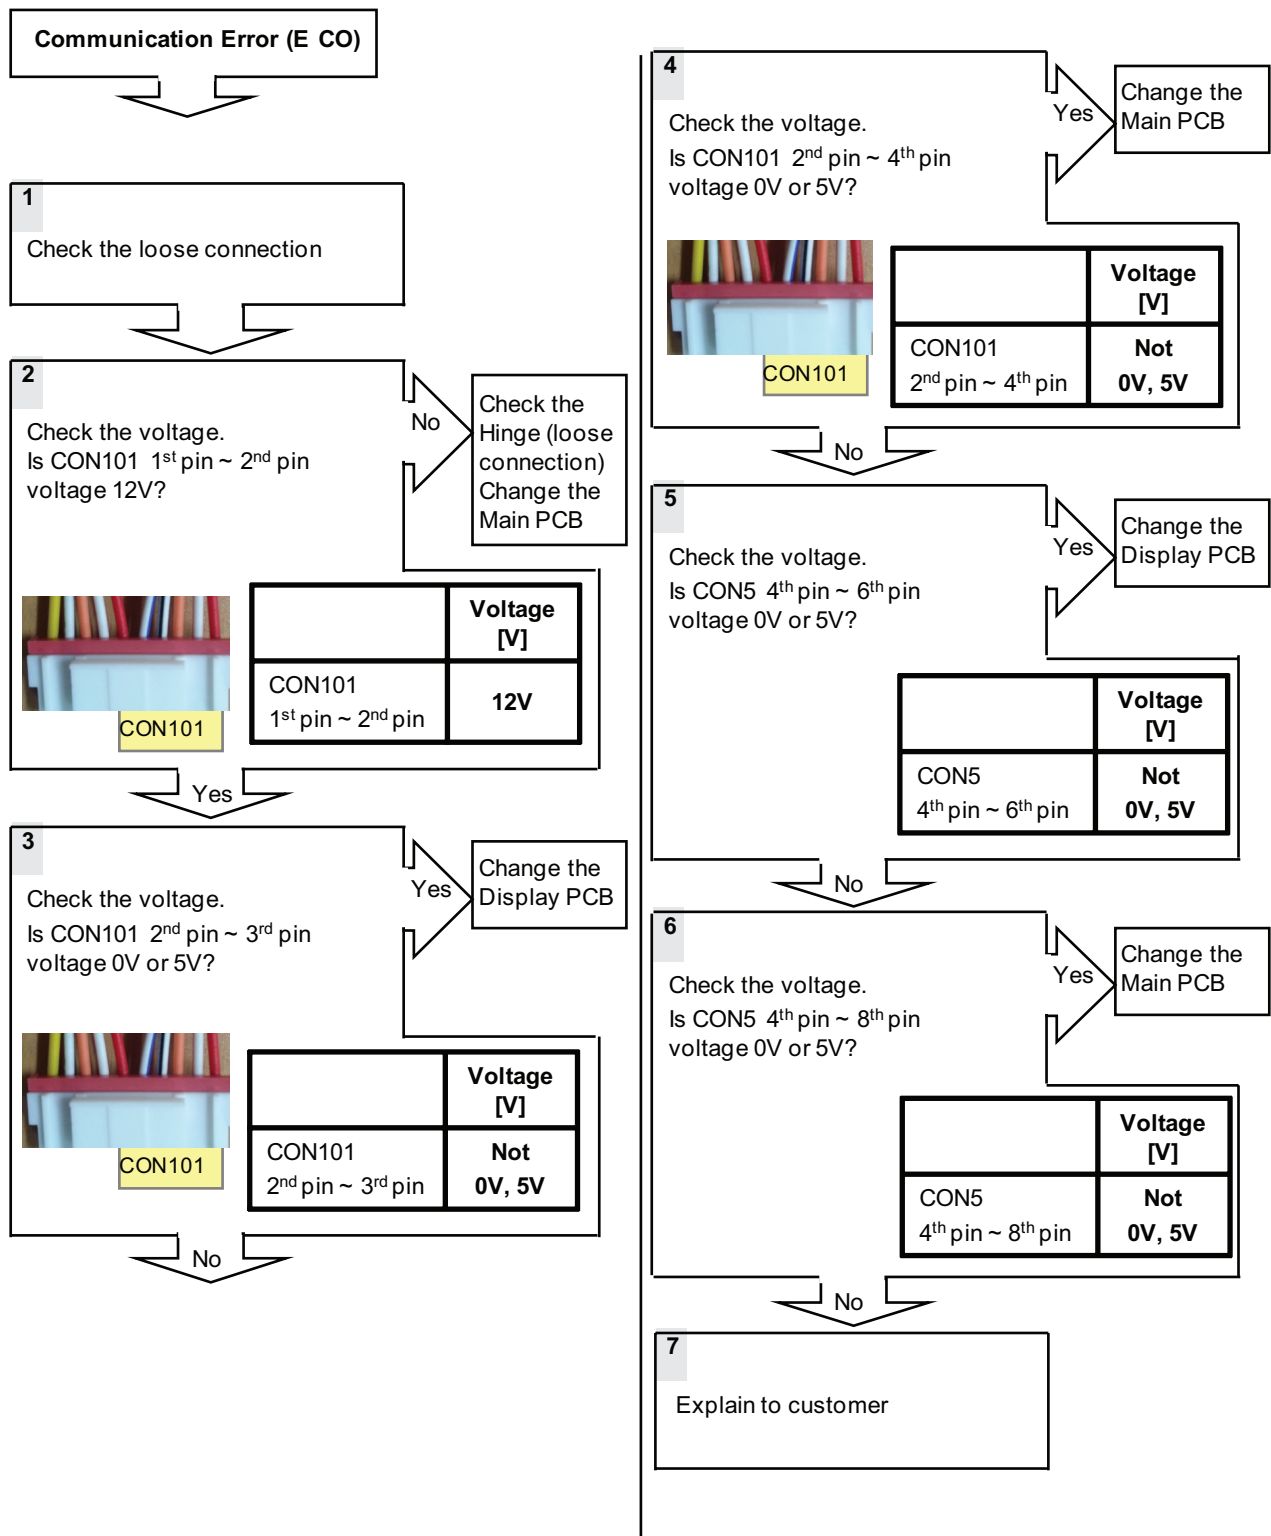


8-13. Cube mode doesn't work

Symptom	Check Point
1. Cube mode doesn't work	1. Check the loose connection 2. Check the resistance

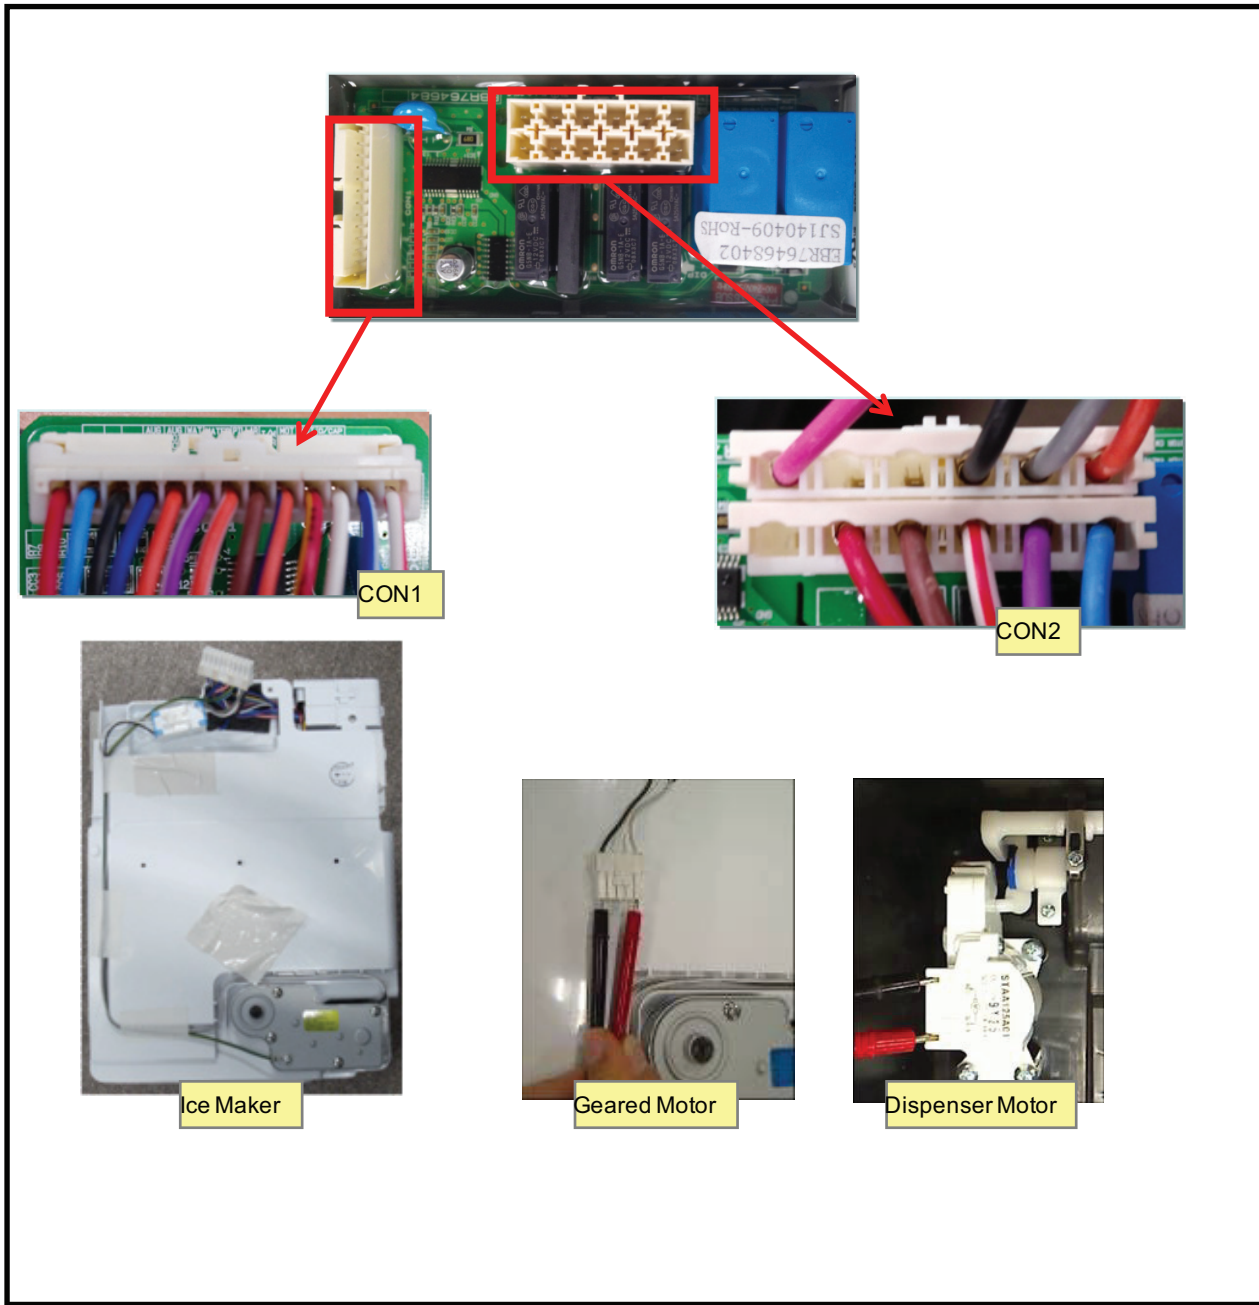


8-14. Cube mode doesn't work

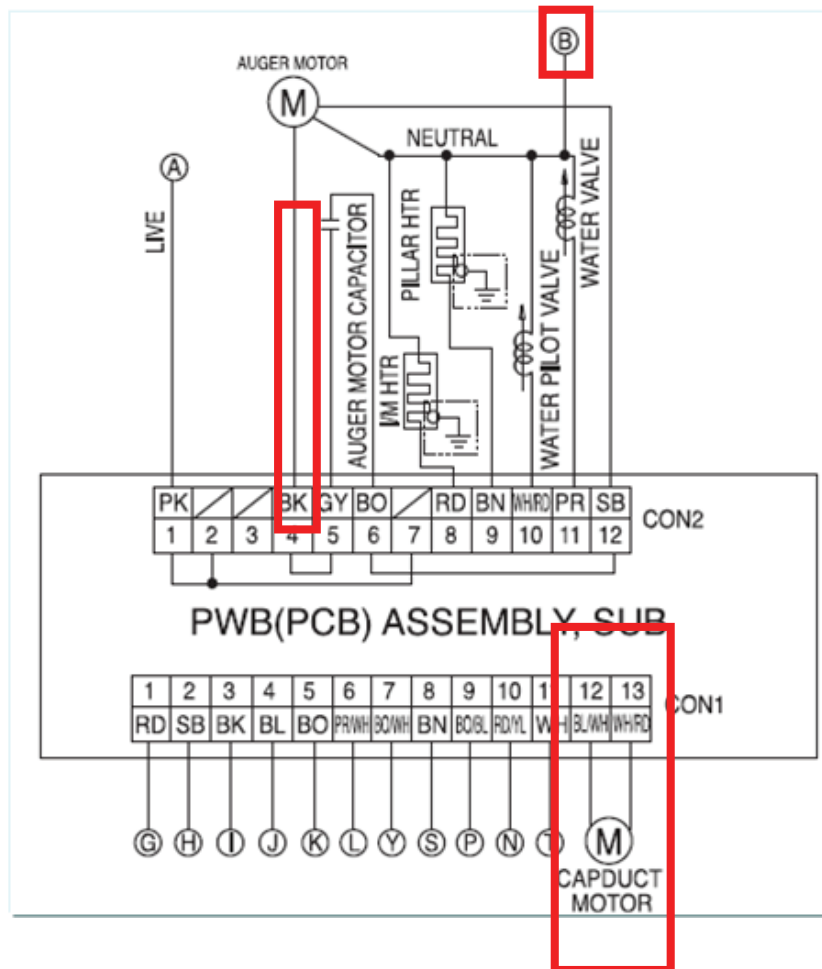


LEVER S/W	Voltage [V]	
CON2 4 th pin ~ B(NEUTRAL)	Pushing	112~115V
	Not Pushing	0~2V
CON1 12 th pin ~ 13 th pin	Pushing	9~12V
	Not Pushing	0~2V

	Resistance [Ω]
Geared Motor	31.1 ~ 42.1
Dispenser Motor	9.9 ~ 12.1

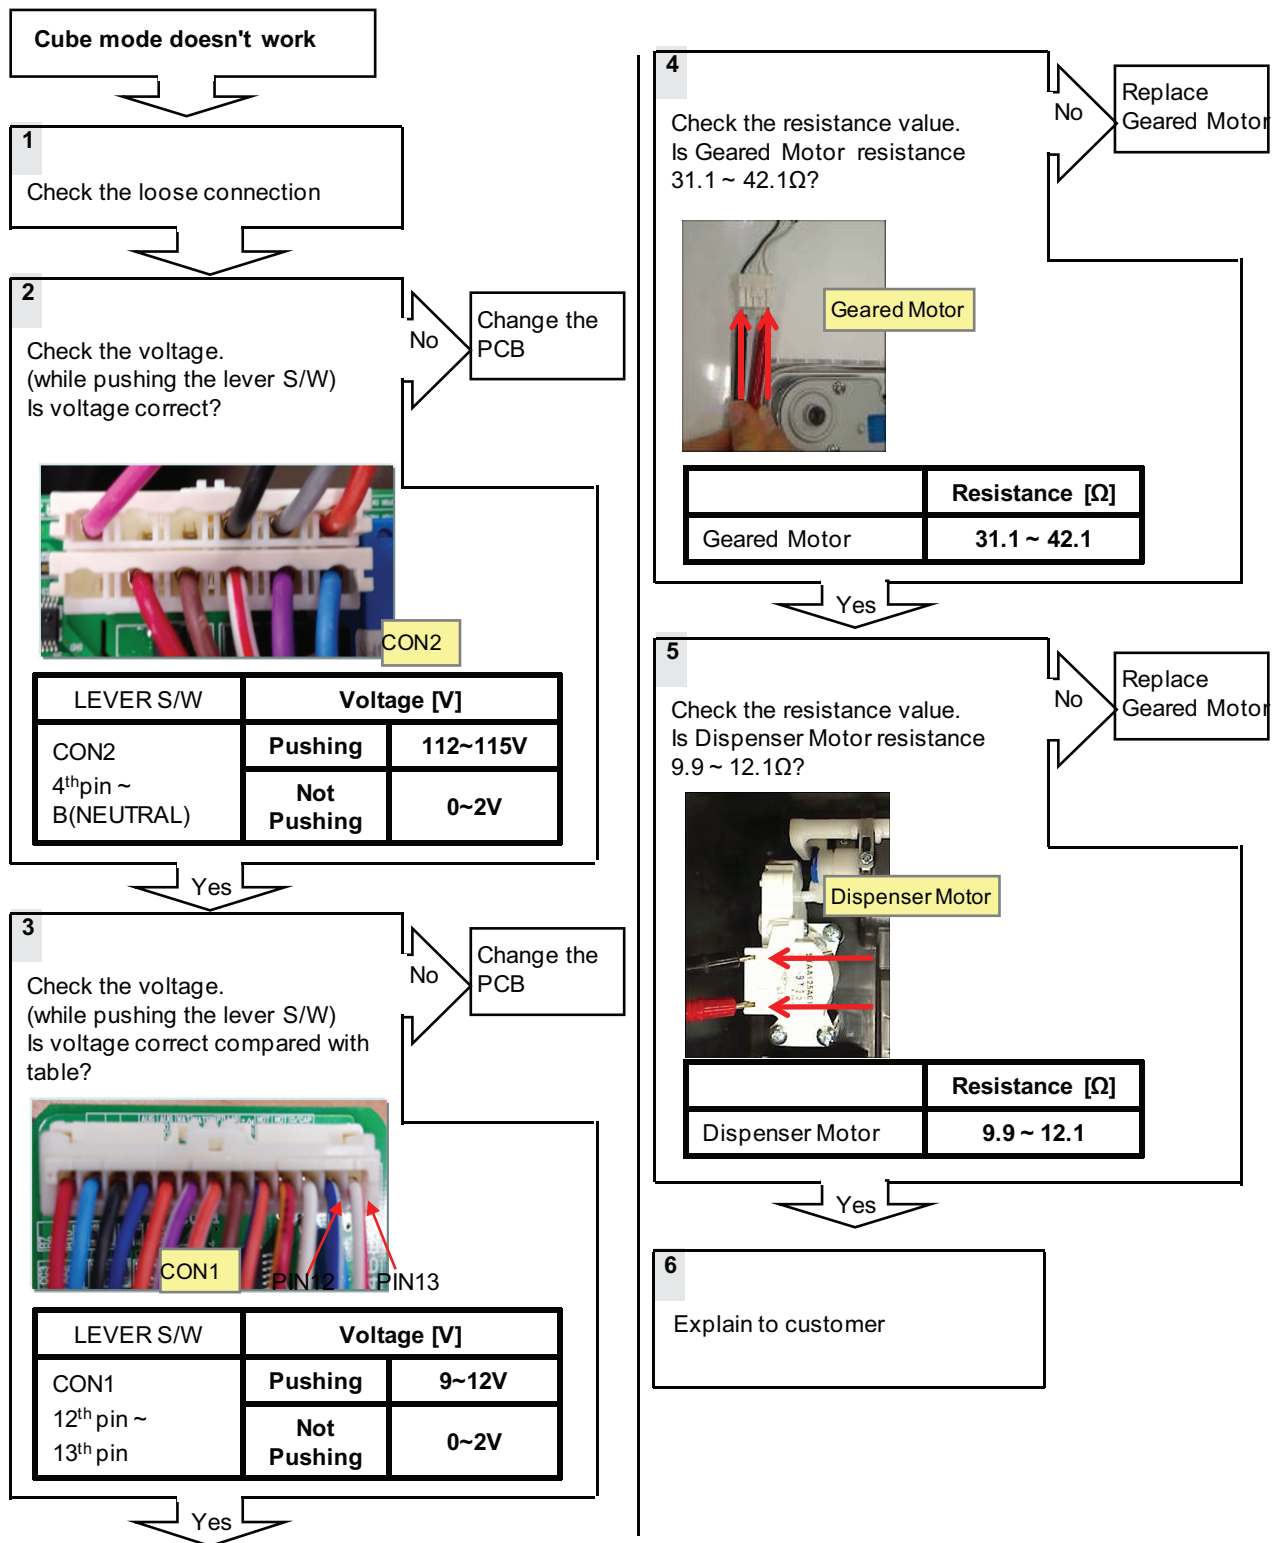


8-15. Crush mode doesn't work

Symptom	Check Point
1. Crush mode doesn't work	1. Check the loose connection 2. Check the resistance

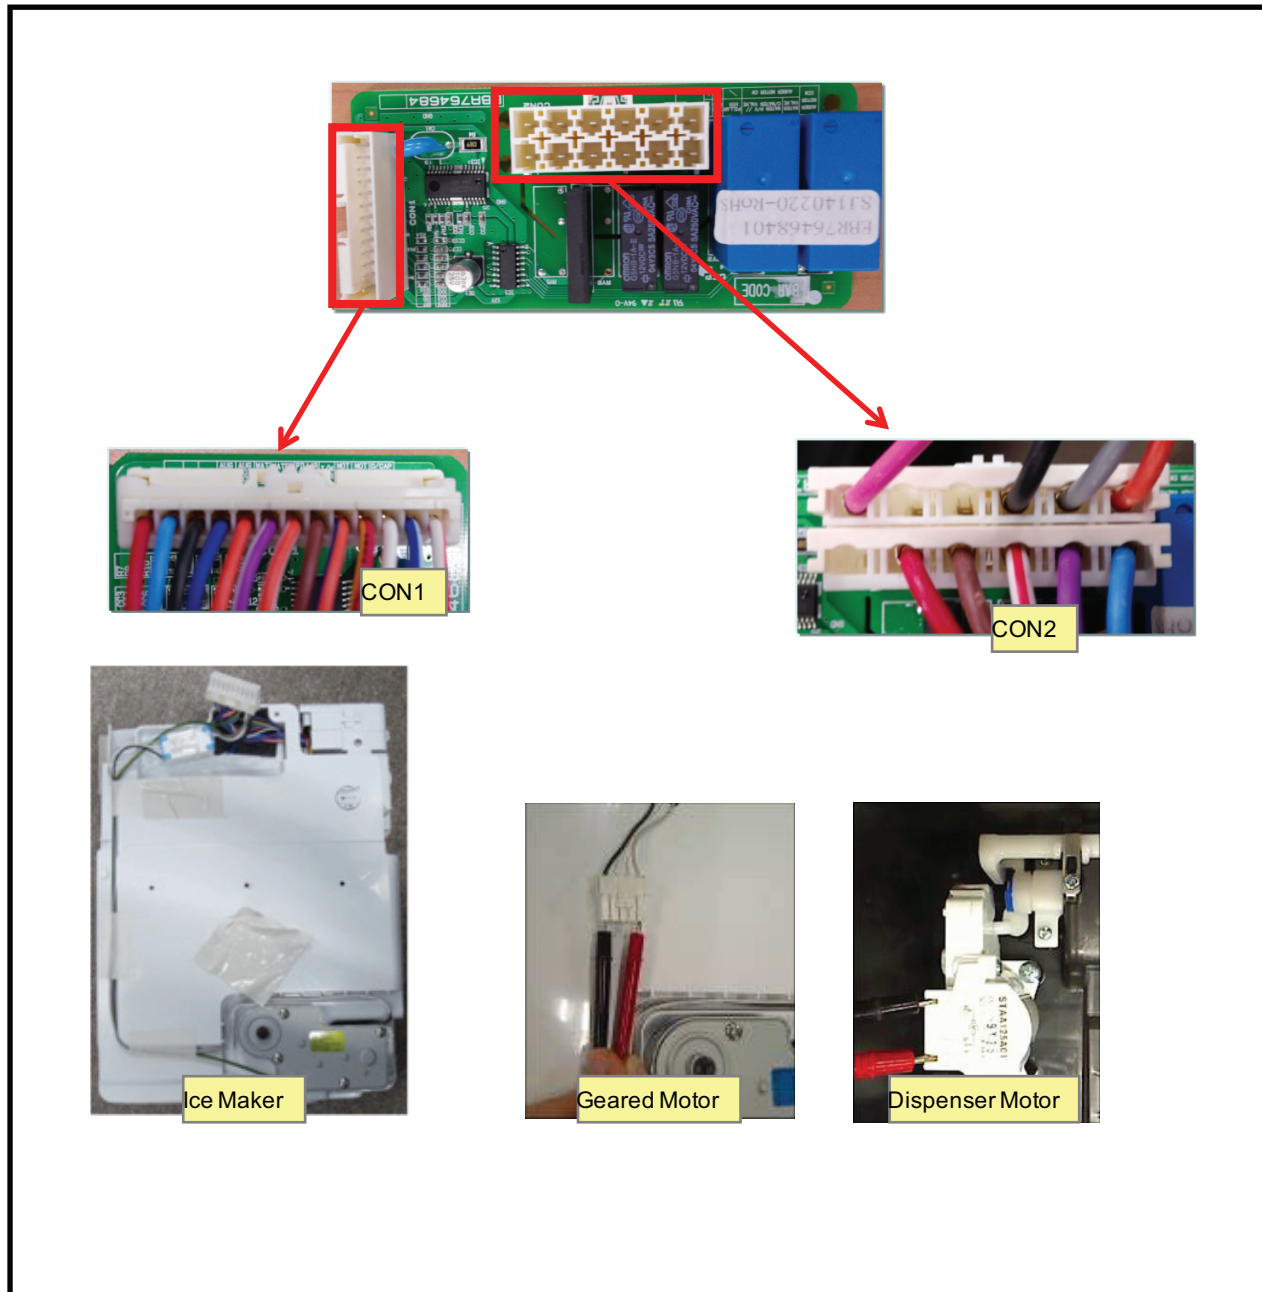


8-15. Crush mode doesn't work

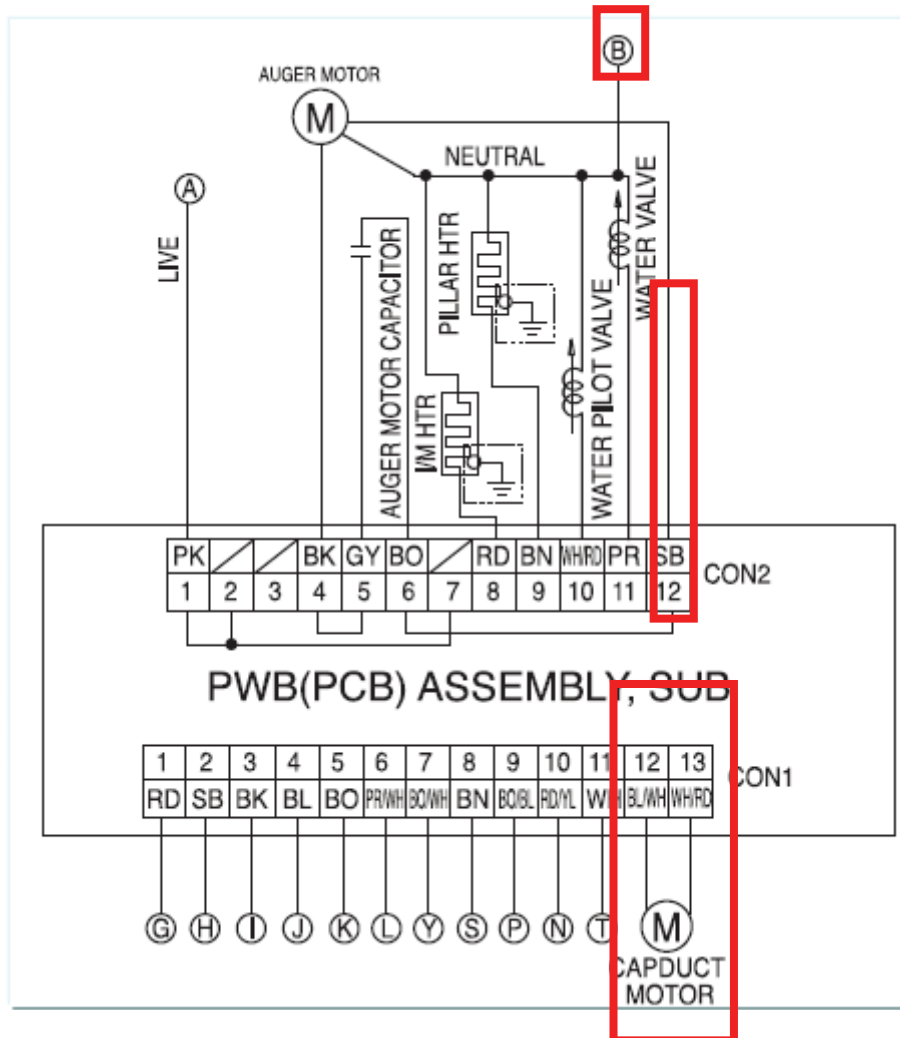



LEVER S/W	Voltage [V]	
CON2 12 th pin ~ B(NEUTRAL)	Pushing	112~115V
	Not Pushing	0~2V
CON1 12 th pin ~ 13 th pin	Pushing	9~12V
	Not Pushing	0~2V

	Resistance [Ω]
Geared Motor	31.1 ~ 42.1
Dispenser Motor	9.9 ~ 12.1

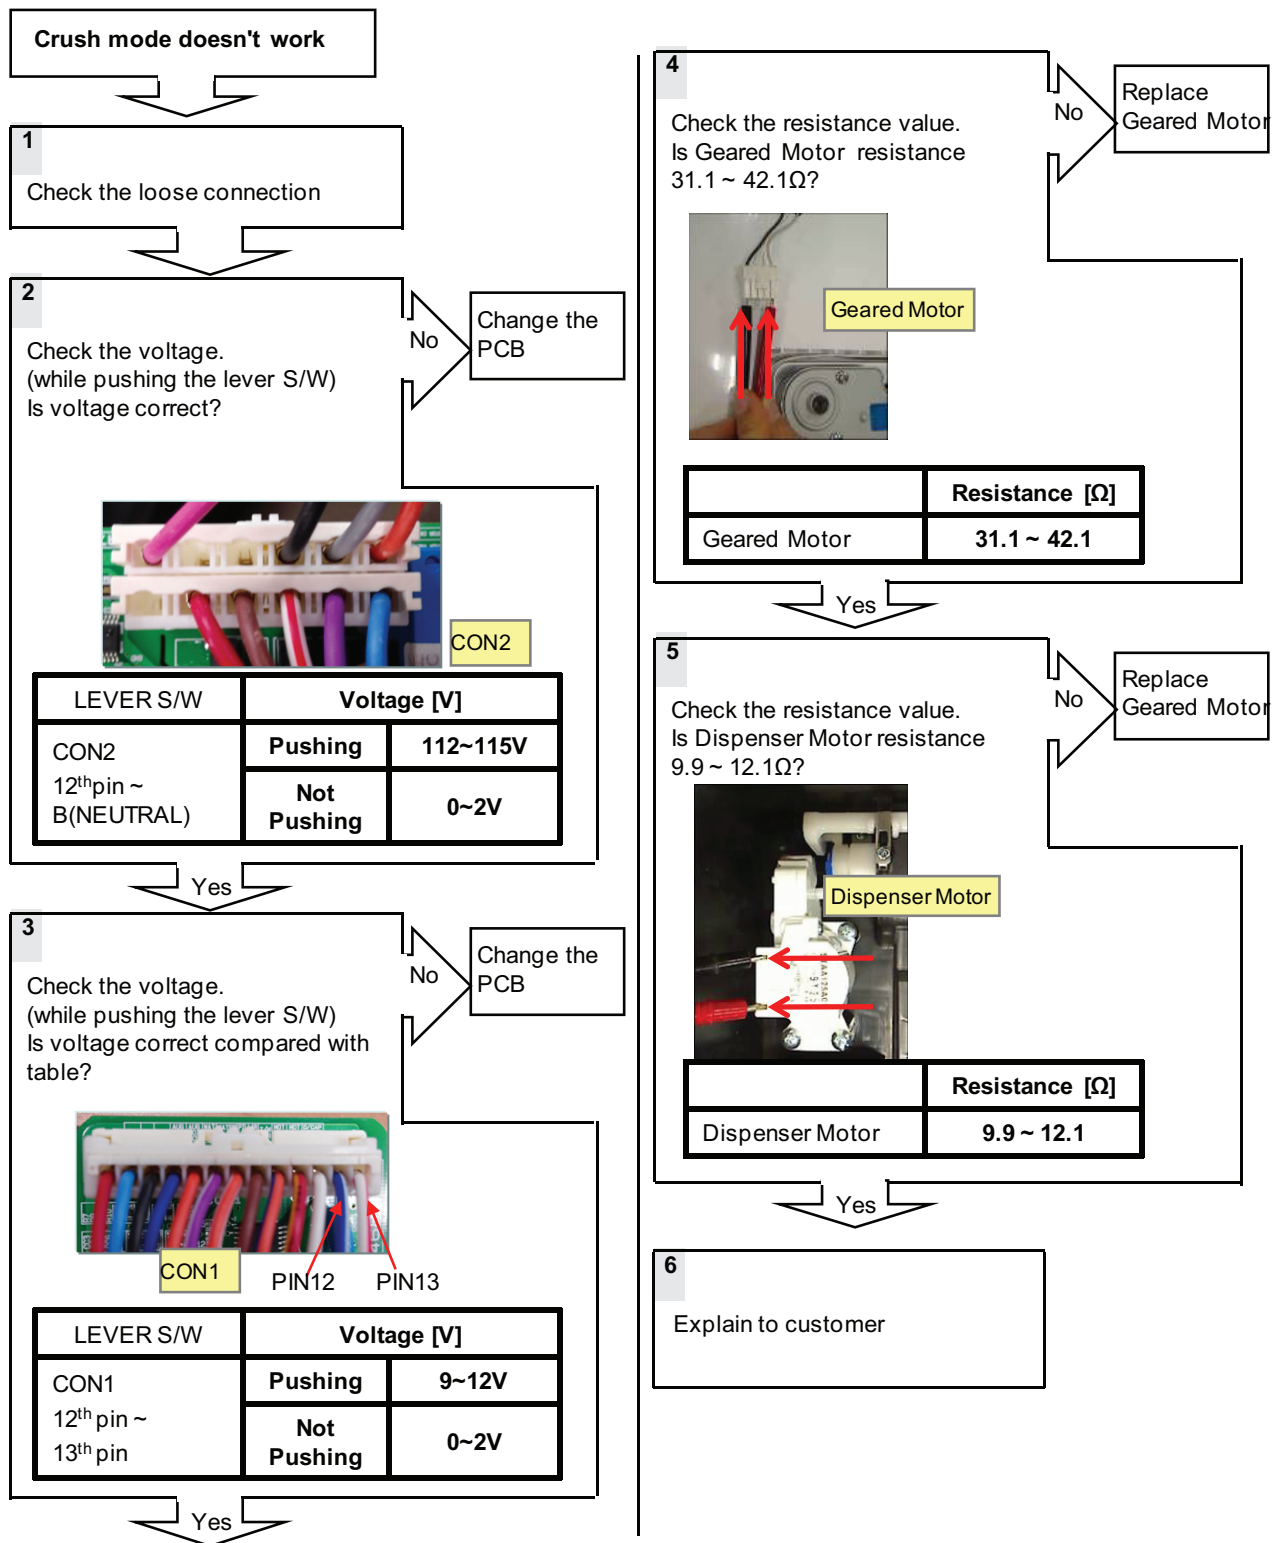


8-16. Water mode doesn't work


Symptom	Check Point
1. Water mode doesn't work	1. Check the loose connection 2. Check the resistance valve

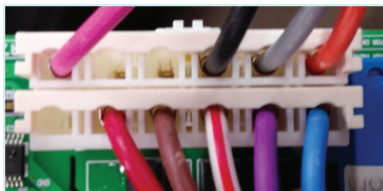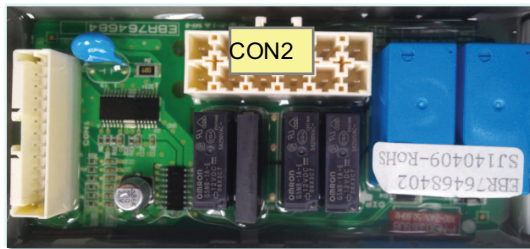


CON2

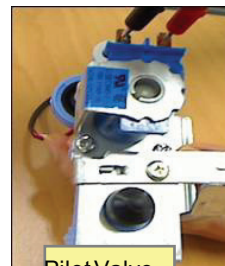

Pilot Valve

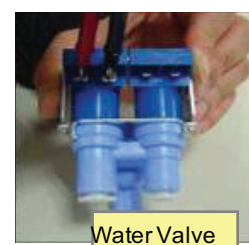

Water Valve

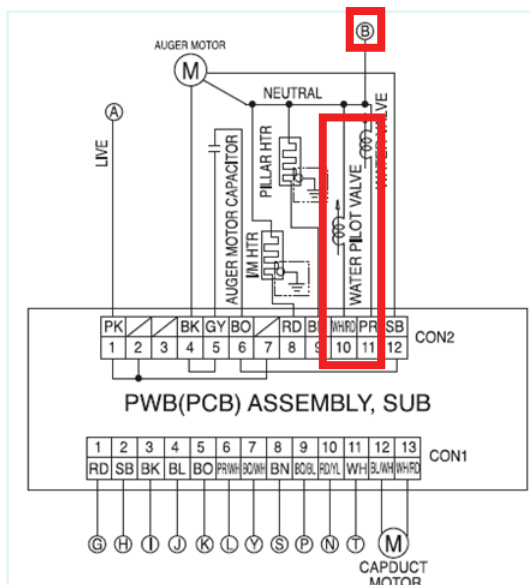


LEVER S/W	Voltage [V]	
CON2 11 th pin ~ B(NEUTRAL)	Pushing	112~115V
	Not Pushing	0~2V
CON2 10 th pin ~ B(NEUTRAL)	Pushing	9~12V
	Not Pushing	0~2V


	Resistance [Ω]
Pilot Valve	360~420
Water valve	360~420


8-17. Freezer room lamp doesn't work

Symptom	Check Point
1. Freezer room lamp doesn't work	1. Check the freezer door switch sticky 2. Check the door S/W resistance 3. Check the LED Lamp

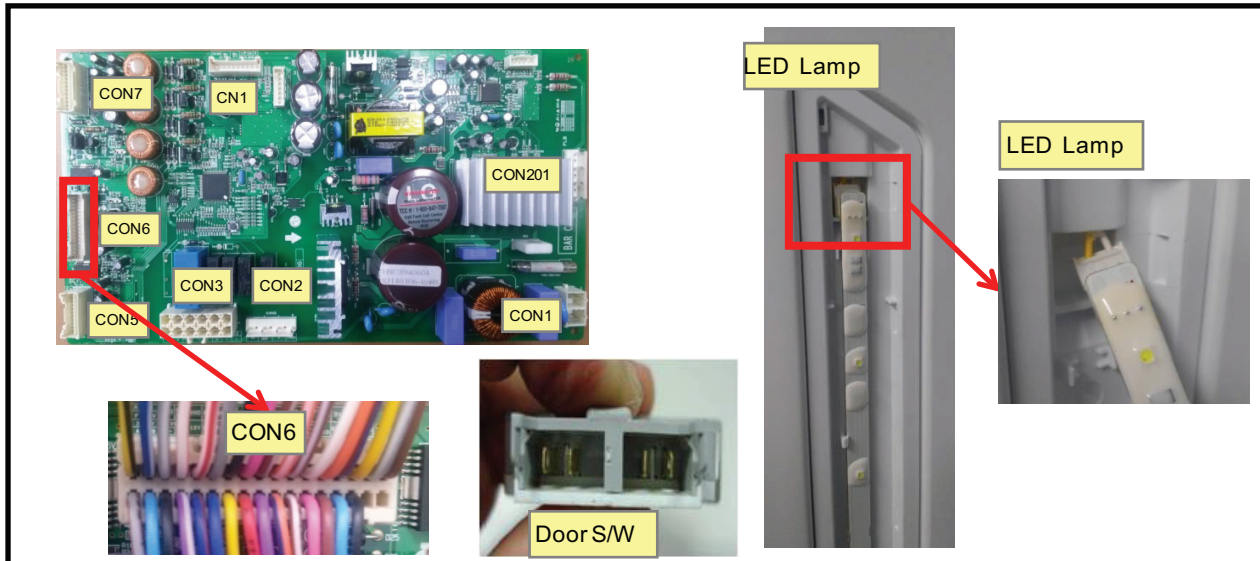


CON6	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
GYRD	YLRL	GY	PRWH	BLWH	BK	YLWK	WHRD	WHRD	BK	BL	YL	RD	PR	BK	BOBL	BNWH	BNWH	PK	BN	BO	GYWH	BK	SB	BK	BK	BK	BK	BK	BK	BK	BK

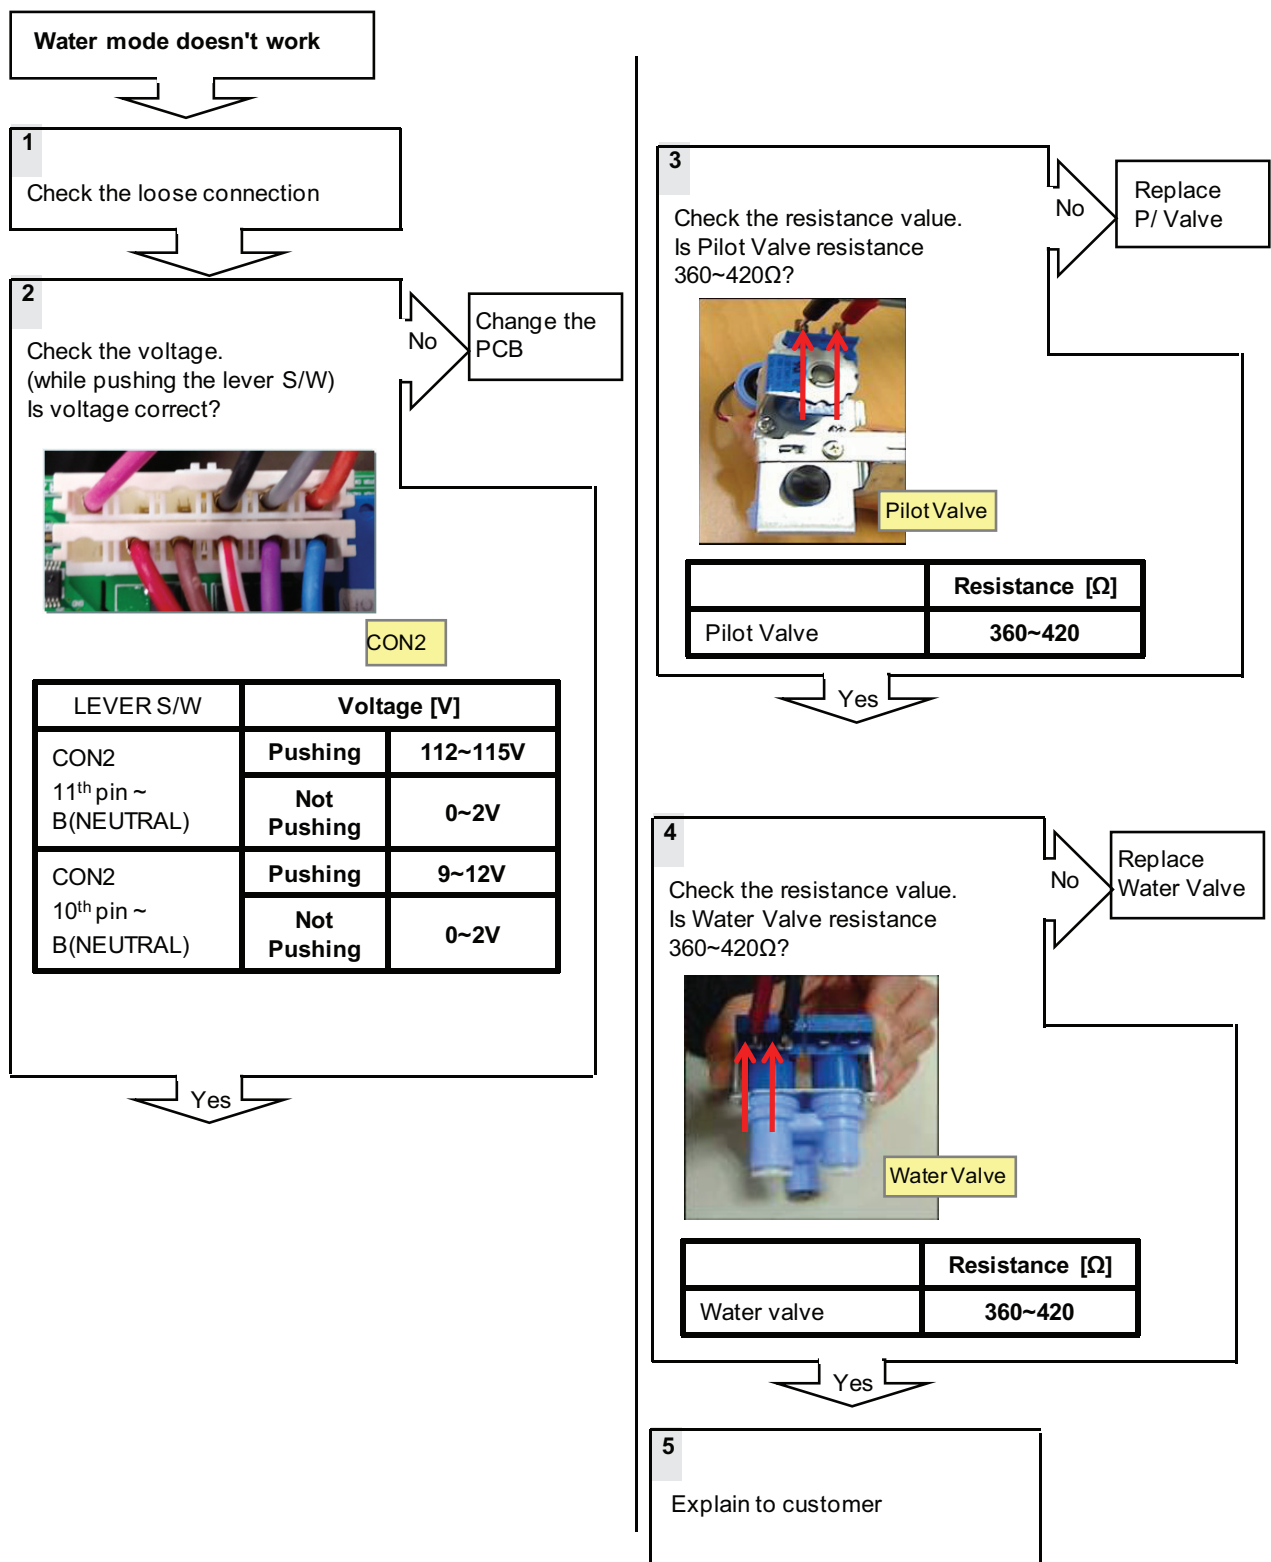

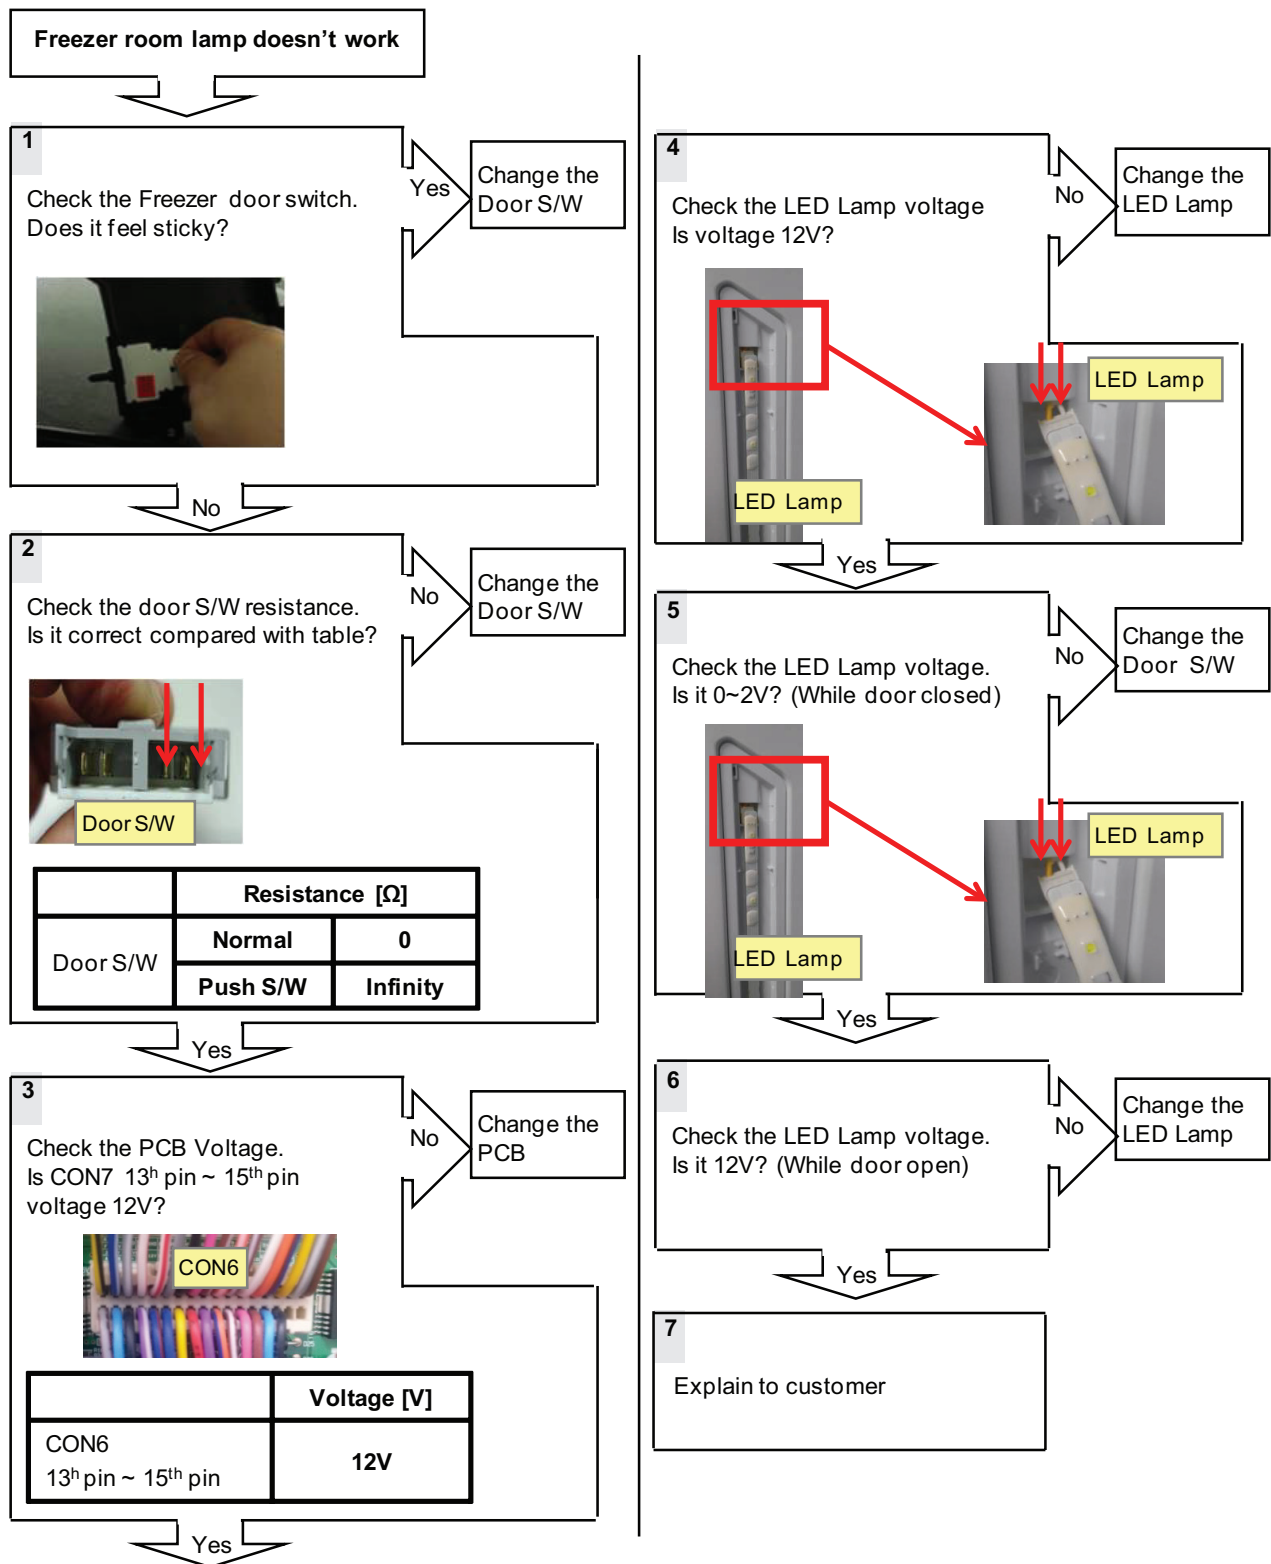

8-18. Refrigerator room lamp doesn't work


Symptom	Check Point
1. Refrigerator room lamp doesn't work	1. Check the Refrigerator door switch sticky 2. Check the door S/W resistance 3. Check the LED Lamp

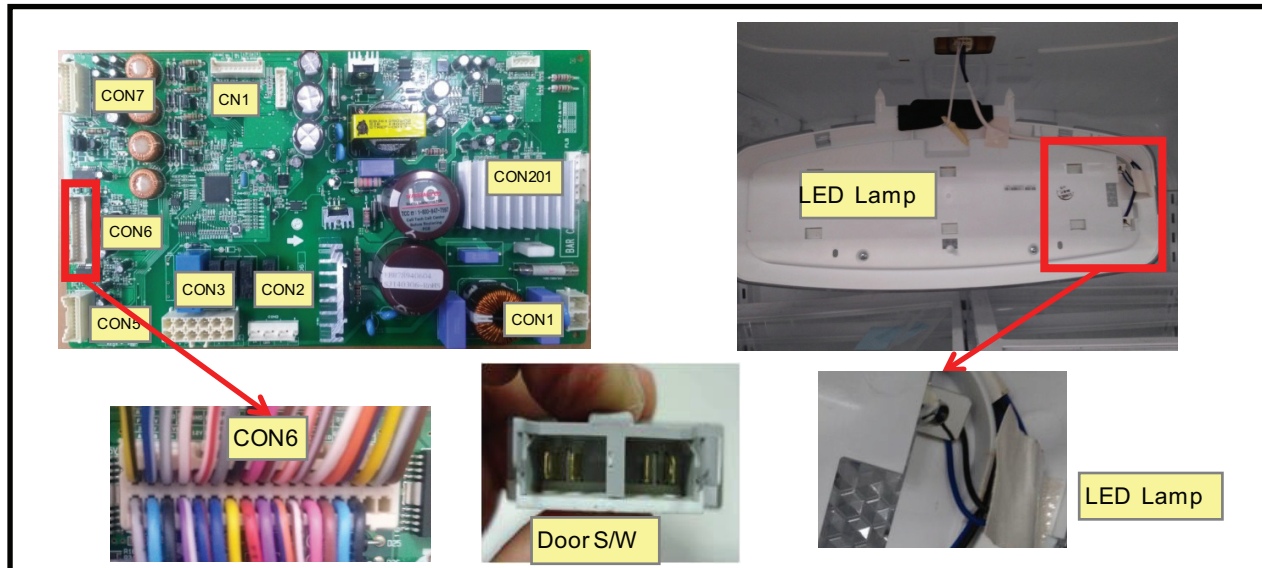

Resistance [Ω]		
Door S/W	Normal	0
	Push S/W	Infinity


Voltage [V]	
CON6 28 th pin ~ 30 th pin	12V

LED Lamp	Voltage [V]	
Blue~ Black	Closed	0~2V
	Open	12V

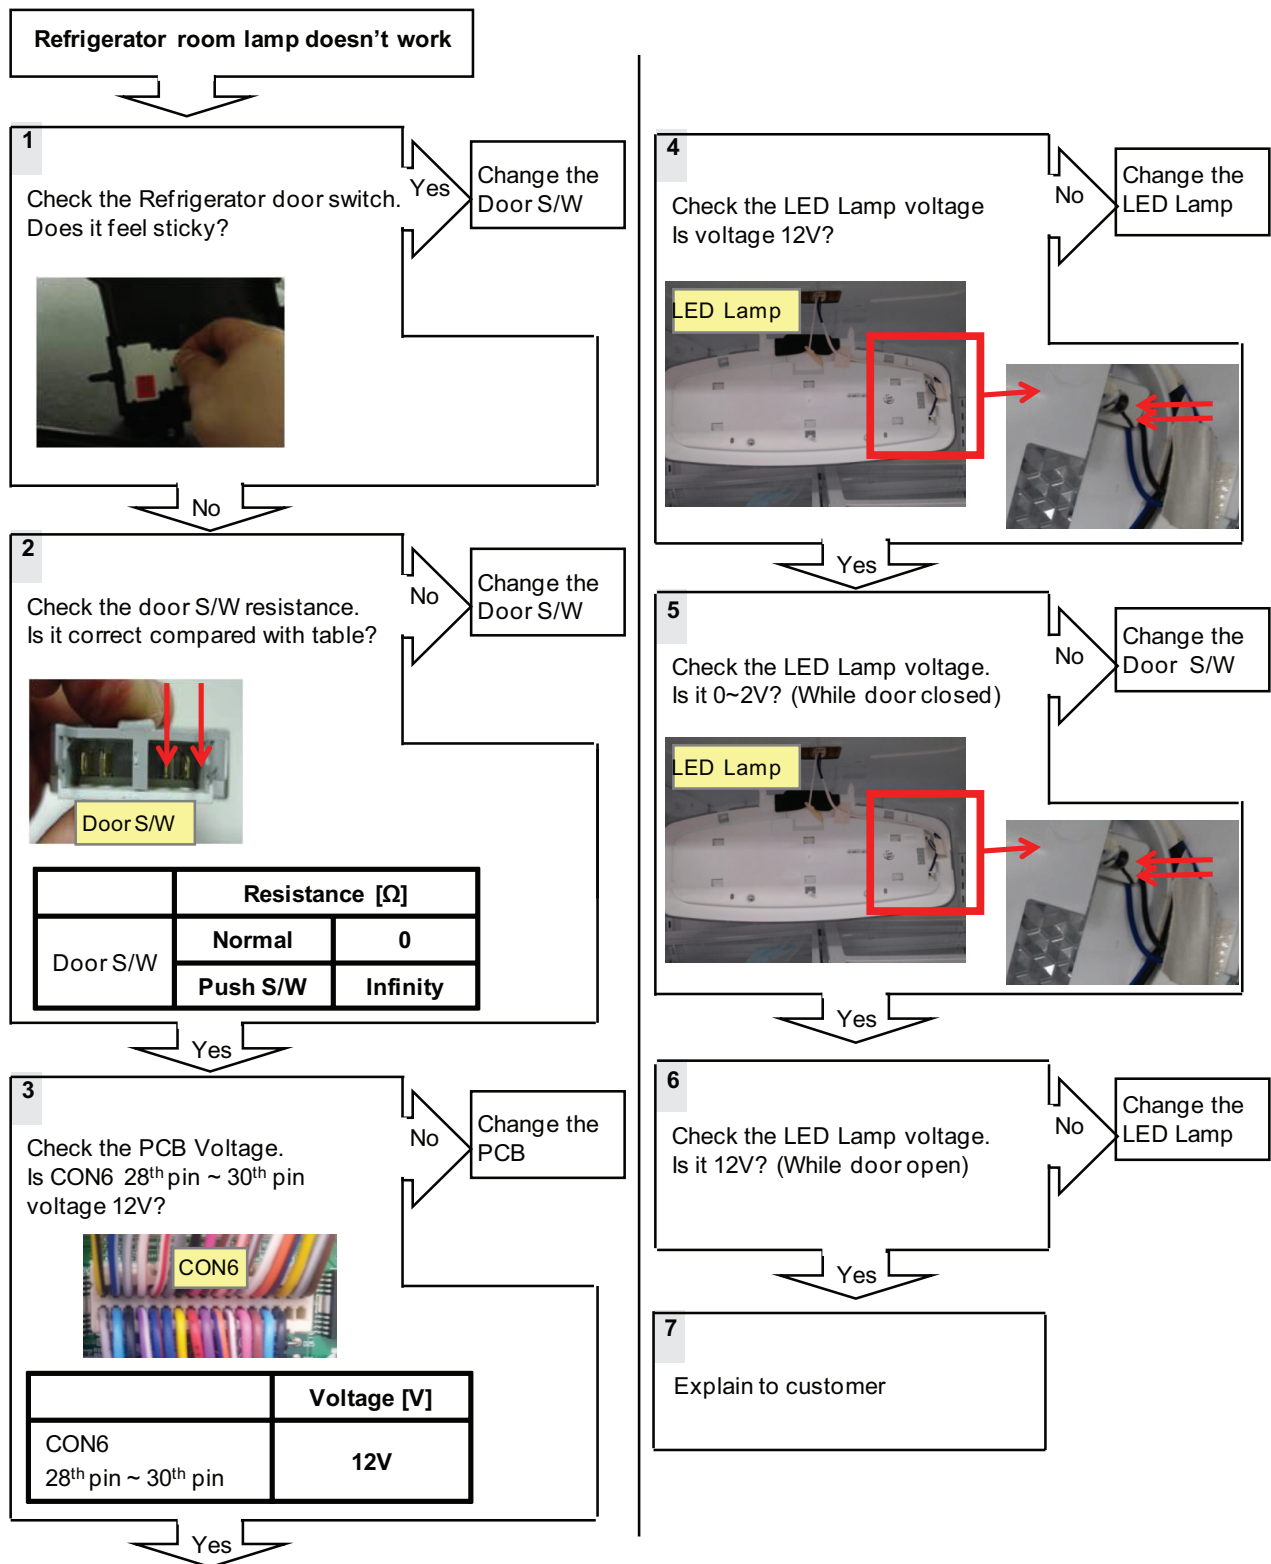


8-19. Poor cooling in Fresh food section

Symptom	Check Point
1. Poor cooling in Fresh food section	1. Check the sensor resistance 2. Check the air flow 3. Check the air Temperature 4. Check the R-Fan motor voltage

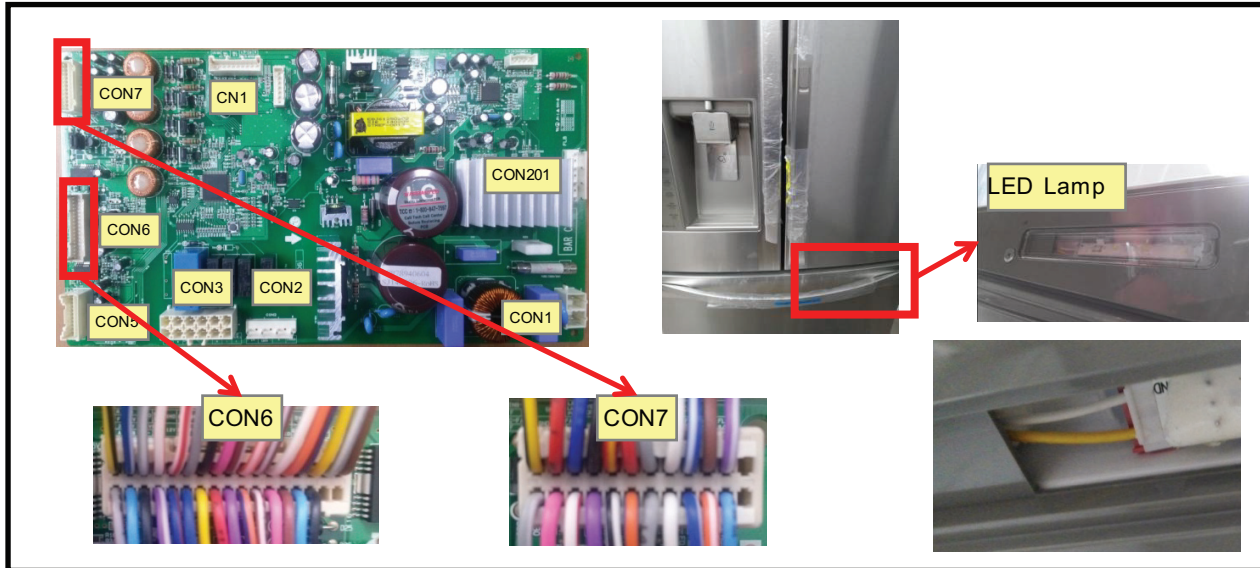


<table border="1"> <thead> <tr> <th>Duct</th><th>Status</th></tr> </thead> <tbody> <tr> <td>Air Flow</td><td>Windy</td></tr> <tr> <td>Air Temperature</td><td>Cold</td></tr> </tbody> </table>	Duct	Status	Air Flow	Windy	Air Temperature	Cold	<table border="1"> <thead> <tr> <th>CON7 13th pin ~ 14th pin</th><th>Resistance [Ω]</th></tr> </thead> <tbody> <tr> <td>23°F / -5°C</td><td>38k</td></tr> <tr> <td>32°F / 0°C</td><td>30k</td></tr> <tr> <td>41°F / 5°C</td><td>24k</td></tr> <tr> <td>50°F / 10°C</td><td>19.5k</td></tr> <tr> <td>59°F / 15°C</td><td>16k</td></tr> </tbody> </table> <table border="1"> <thead> <tr> <th>TEST MODE 1</th><th>Voltage [V]</th></tr> </thead> <tbody> <tr> <td>CON6 3rd pin ~ 5th pin</td><td>8~12V</td></tr> <tr> <td>CON6 1st pin ~ 5th pin</td><td>Not 0V, 5V</td></tr> </tbody> </table>	CON7 13 th pin ~ 14 th pin	Resistance [Ω]	23°F / -5°C	38k	32°F / 0°C	30k	41°F / 5°C	24k	50°F / 10°C	19.5k	59°F / 15°C	16k	TEST MODE 1	Voltage [V]	CON6 3 rd pin ~ 5 th pin	8~12V	CON6 1 st pin ~ 5 th pin	Not 0V, 5V
Duct	Status																								
Air Flow	Windy																								
Air Temperature	Cold																								
CON7 13 th pin ~ 14 th pin	Resistance [Ω]																								
23°F / -5°C	38k																								
32°F / 0°C	30k																								
41°F / 5°C	24k																								
50°F / 10°C	19.5k																								
59°F / 15°C	16k																								
TEST MODE 1	Voltage [V]																								
CON6 3 rd pin ~ 5 th pin	8~12V																								
CON6 1 st pin ~ 5 th pin	Not 0V, 5V																								

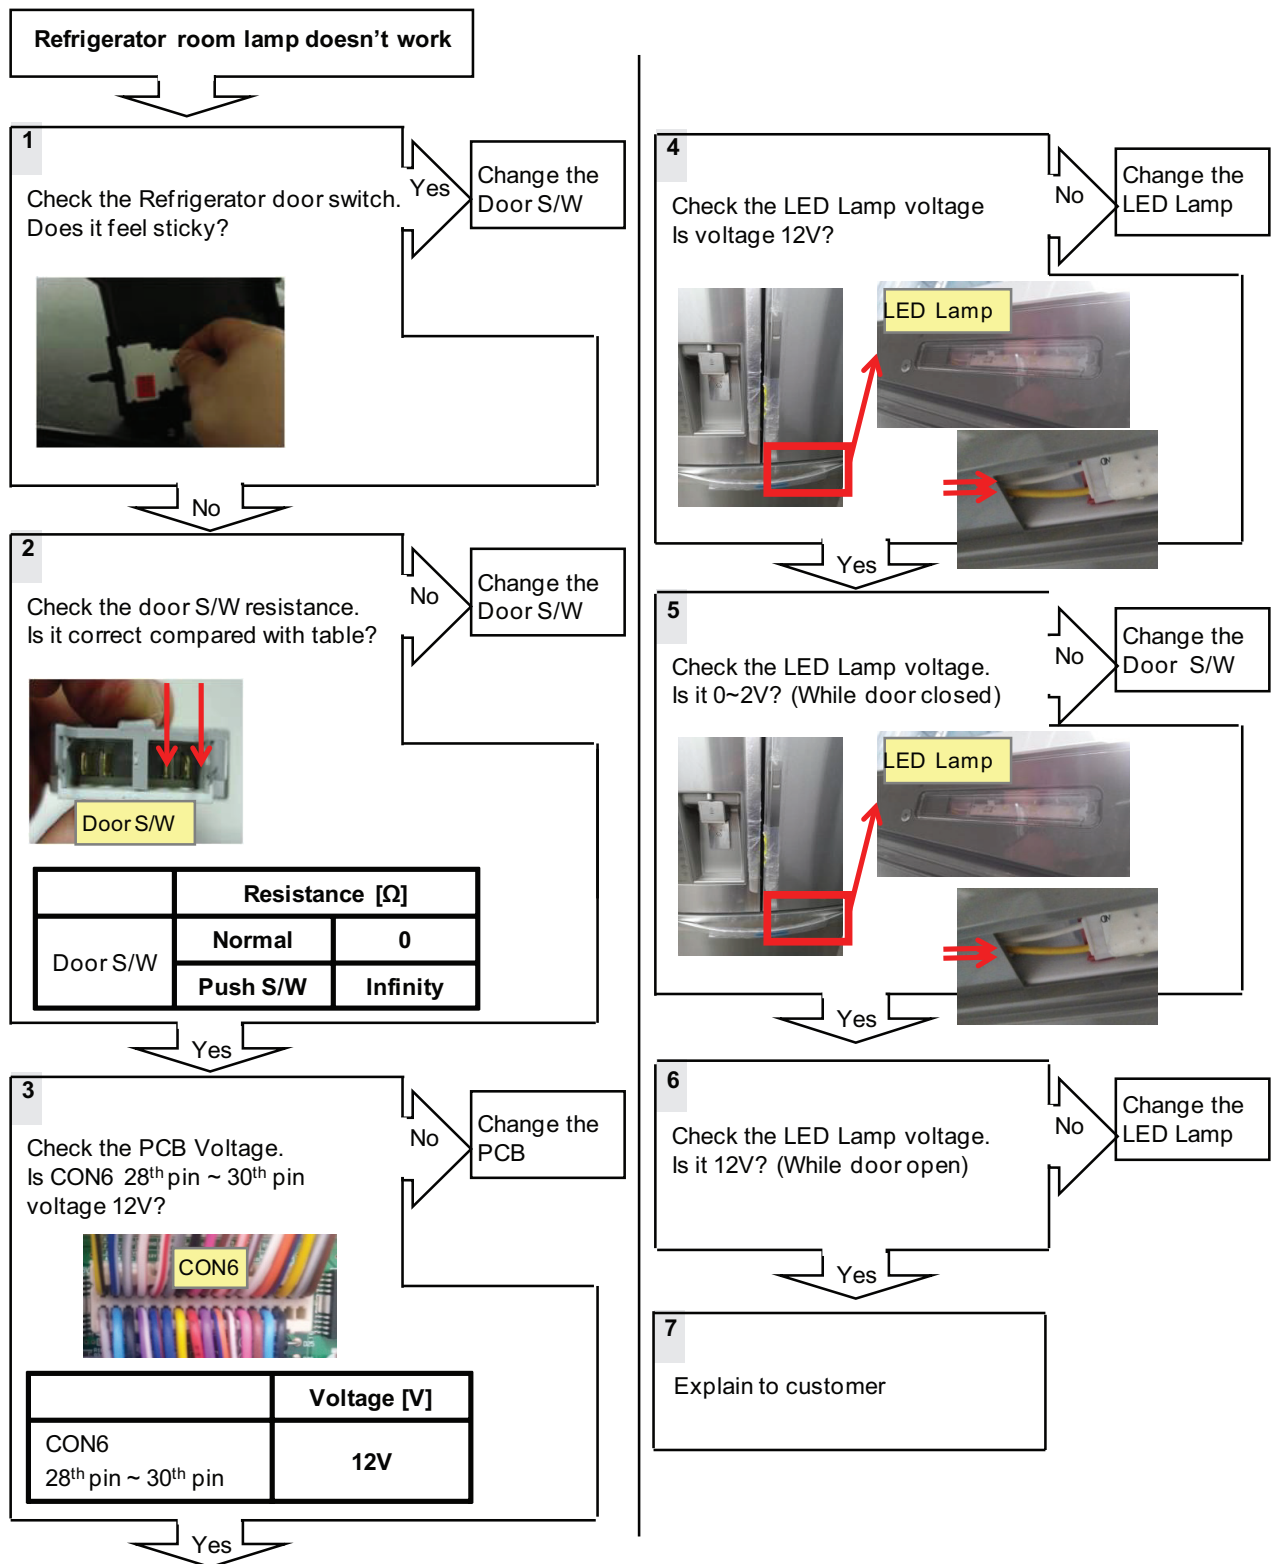



8-20. Poor cooling in Freezer compartment

Symptom	Check Point
1. Poor cooling in Freezer compartment	1. Check the sensor resistance 2. Check the air flow 3. Check the air Temperature 4. Check the Fan motor sticky 4. Check the Fan motor voltage

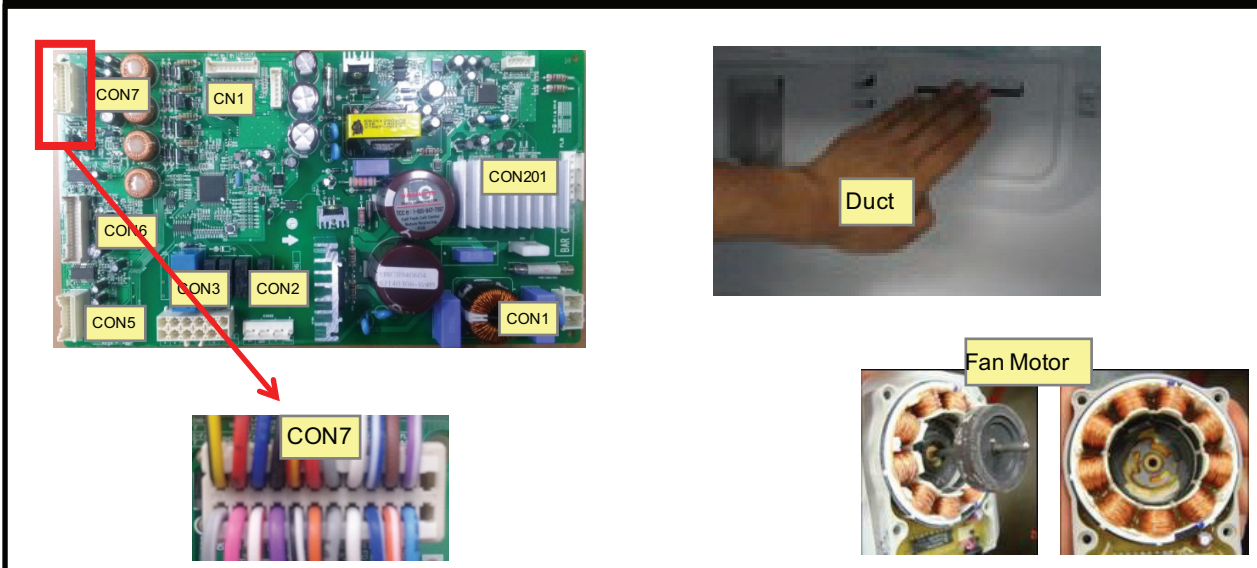

<table border="1"> <tr> <th>Duct</th><th>Status</th></tr> <tr> <td>Air Flow</td><td>Windy</td></tr> <tr> <td>Air Temperature</td><td>Cold</td></tr> </table>	Duct	Status	Air Flow	Windy	Air Temperature	Cold	<table border="1"> <tr> <th>CON7 19th pin ~ 20th pin</th><th>Resistance [Ω]</th></tr> <tr> <td>-22°F / -30°C</td><td>40k</td></tr> <tr> <td>-13°F / -25°C</td><td>30k</td></tr> <tr> <td>-4°F / -20°C</td><td>23k</td></tr> <tr> <td>-13°F / -25°C</td><td>17k</td></tr> <tr> <td>14°F / -10°C</td><td>13k</td></tr> <tr> <td>23°F / -5°C</td><td>10k</td></tr> <tr> <td>32°F / 0°C</td><td>8k</td></tr> </table> <table border="1"> <tr> <th>TEST MODE 1</th><th>Voltage [V]</th></tr> <tr> <td>CON7 10^h pin ~ 12th pin</td><td>8~12V</td></tr> <tr> <td>CON7 8th pin ~ 12th pin</td><td>Not 0V, 5V</td></tr> </table>	CON7 19 th pin ~ 20 th pin	Resistance [Ω]	-22°F / -30°C	40k	-13°F / -25°C	30k	-4°F / -20°C	23k	-13°F / -25°C	17k	14°F / -10°C	13k	23°F / -5°C	10k	32°F / 0°C	8k	TEST MODE 1	Voltage [V]	CON7 10 ^h pin ~ 12 th pin	8~12V	CON7 8 th pin ~ 12 th pin	Not 0V, 5V
Duct	Status																												
Air Flow	Windy																												
Air Temperature	Cold																												
CON7 19 th pin ~ 20 th pin	Resistance [Ω]																												
-22°F / -30°C	40k																												
-13°F / -25°C	30k																												
-4°F / -20°C	23k																												
-13°F / -25°C	17k																												
14°F / -10°C	13k																												
23°F / -5°C	10k																												
32°F / 0°C	8k																												
TEST MODE 1	Voltage [V]																												
CON7 10 ^h pin ~ 12 th pin	8~12V																												
CON7 8 th pin ~ 12 th pin	Not 0V, 5V																												

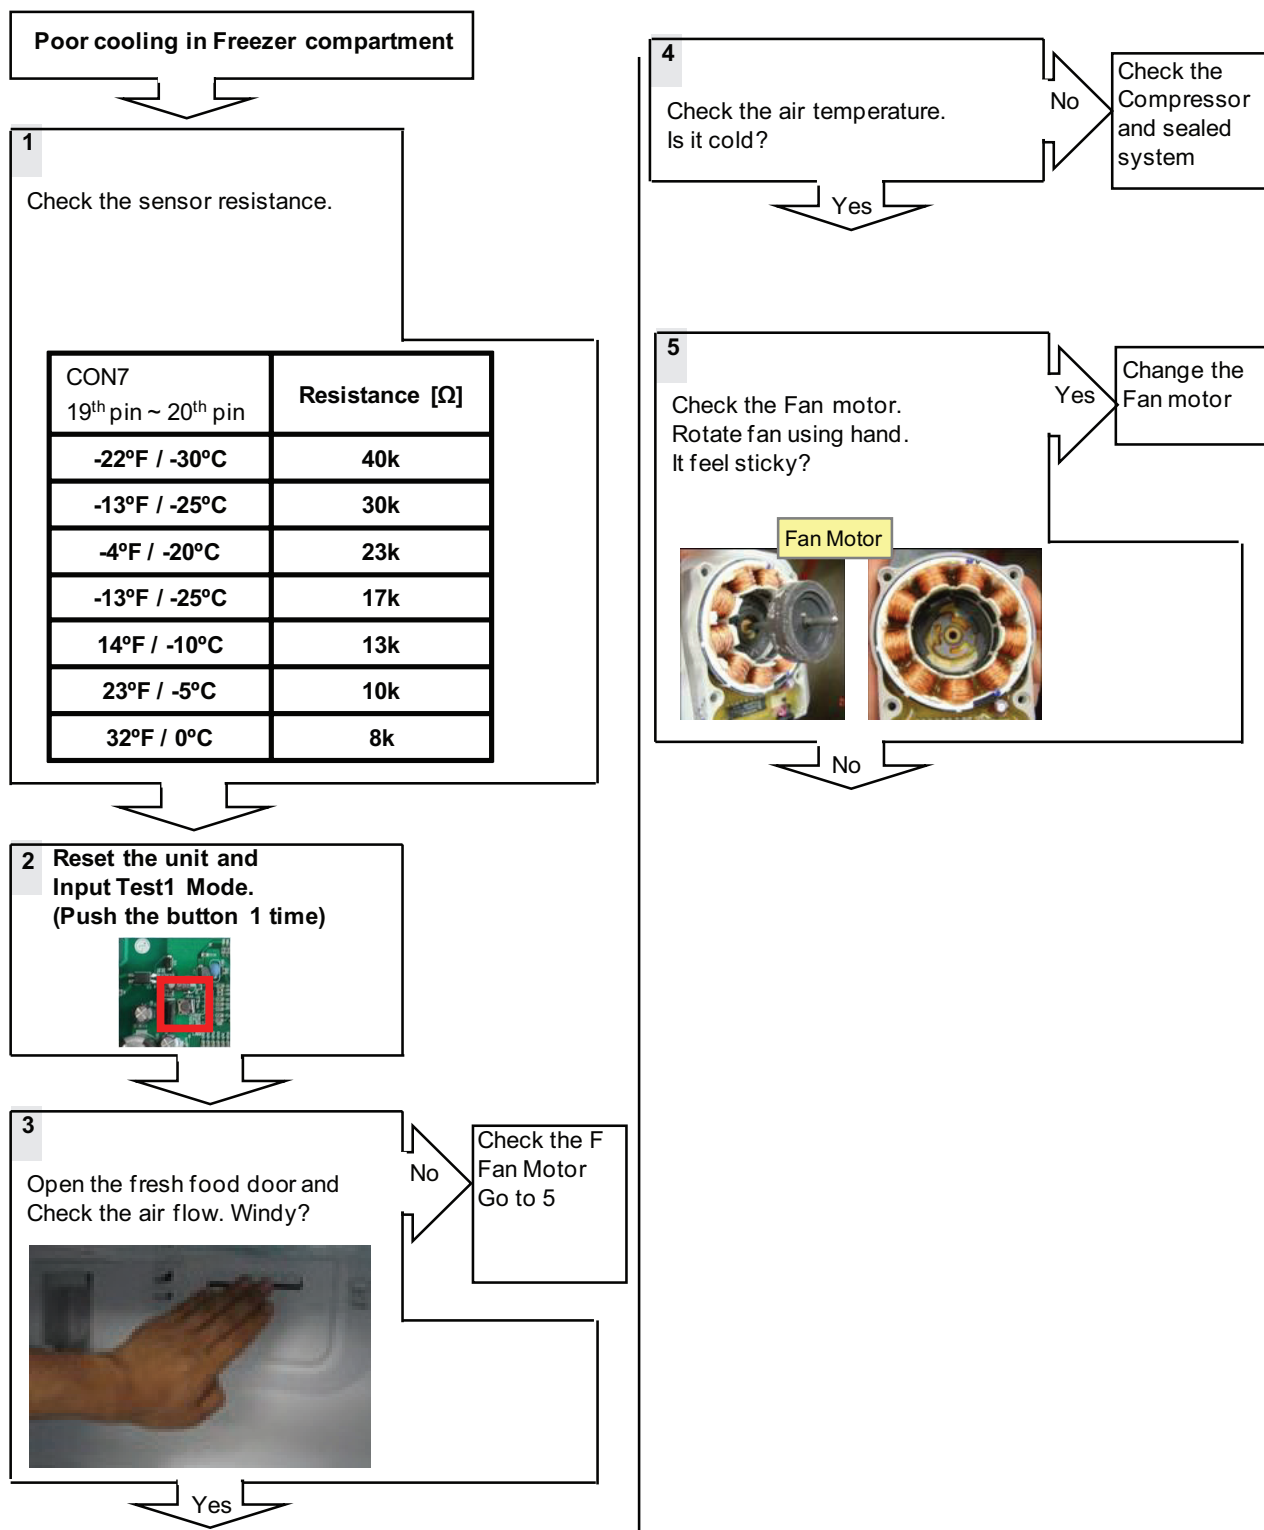

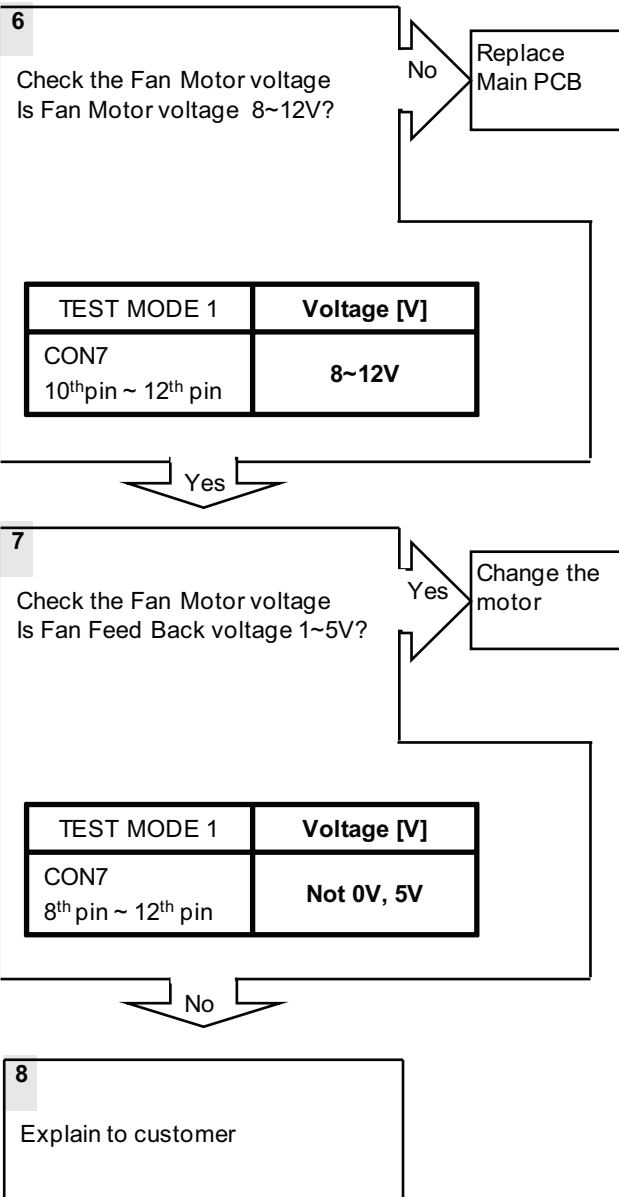


9. Reference

9. TEST MODE and Removing TPA


1. How to make TEST MODE

If you push the test button on the Main PCB, the refrigerator will be enter the TEST MODE.

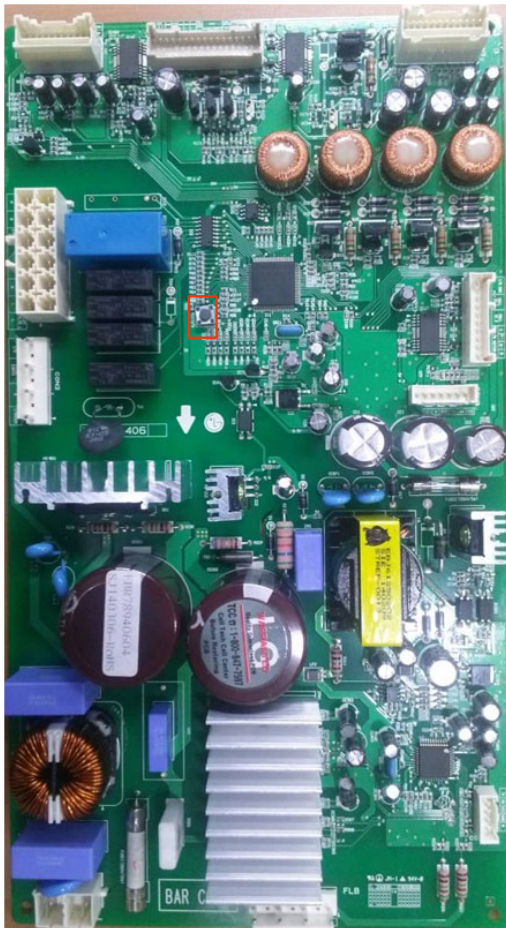


Main PCB

* 1 time : Comp / Damper / All FAN on
(All things displayed)

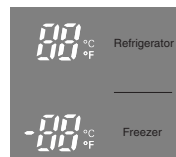

* 2 times : Damper closed
(22 22 displayed)

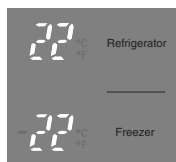


* 3 times : Forced defrost mode
(33 33 displayed)




2. How to remove Terminal Position Assurance (TPA)

<AC TPA>

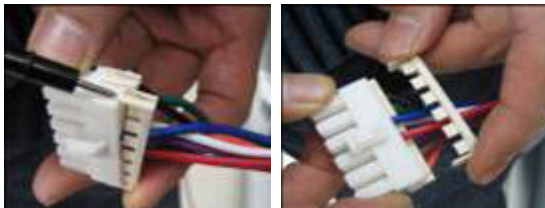

<DC TPA>

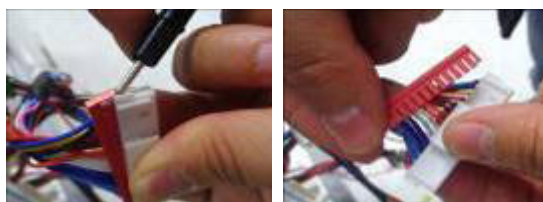

※ After measure the values, you should put in the TPA again.

9-2 TEMPERATRUE CHART - FREEZER AND ICING SENSOR



TEMP	RESISTANCE	VOLTAGE
-39°F (-40°C)	73.29 kΩ	4.09 V
-30°F (-35°C)	53.63 kΩ	3.84 V
-30°F (-21°C)	39.66 kΩ	3.55 V
-13°F (-25°C)	29.62 kΩ	3.23 V
-4°F (-20°C)	22.33 kΩ	2.89 V
5°F (-15°C)	16.99 kΩ	2.56 V
14°F (-10°C)	13.05 kΩ	2.23 V
23°F (-5°C)	10.10 kΩ	1.92 V
32°F (0°C)	7.88 kΩ	1.63 V
41°F (+5°C)	6.19 kΩ	1.38 V
50°F (+10°C)	4.91 kΩ	1.16 V
59°F (+15°C)	3.91 kΩ	0.97 V
68°F (+20°C)	3.14 kΩ	0.81 V
77°F (+25°C)	2.54 kΩ	0.67 V
86°F (+30°C)	2.07 kΩ	0.56 V
95°F (+35°C)	1.69 kΩ	0.47 V
104°F (+40°C)	1.39 kΩ	0.39 V

9-3 TEMPERATRUE CHART - REFRIGERATOR AND DEFROST SENSOR


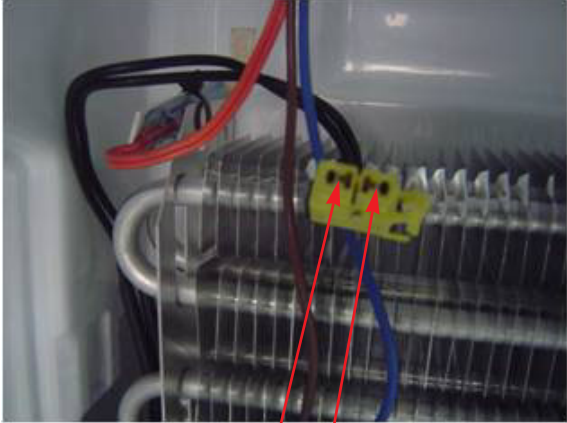
TEMP	RESISTANCE	VOLTAGE
-39°F (-40°C)	225.1 kΩ	4.48 V
-30°F (-35°C)	169.8 kΩ	4.33 V
-30°F (-21°C)	129.3 kΩ	4.16 V
-13°F (-25°C)	99.30 kΩ	3.95 V
-4°F (-20°C)	76.96 kΩ	3.734 V
5°F (-15°C)	60.13 kΩ	3.487 V
14°F (-10°C)	47.34 kΩ	3.22 V
23°F (-5°C)	37.55 kΩ	2.95 V
32°F (0°C)	30 kΩ	2.67 V
41°F (+5°C)	24.13 kΩ	2.40 V
50°F (+10°C)	19.53 kΩ	2.14 V
59°F (+15°C)	15.91 kΩ	1.89 V
68°F (+20°C)	13.03 kΩ	1.64 V
77°F (+25°C)	10.74 kΩ	1.45 V
86°F (+30°C)	8.89 kΩ	1.27 V
95°F (+35°C)	7.40 kΩ	1.10 V
104°F (+40°C)	6.20 kΩ	0.96 V

10. COMPONENT TESTING INFORMATION


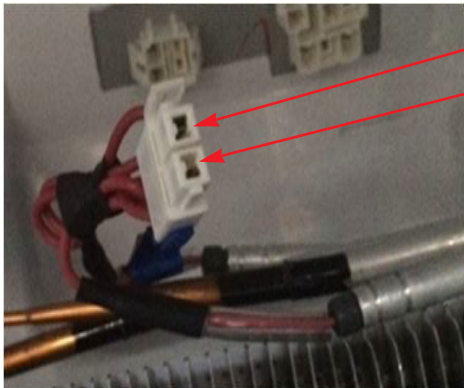
10-1 Defrost Controller Assembly

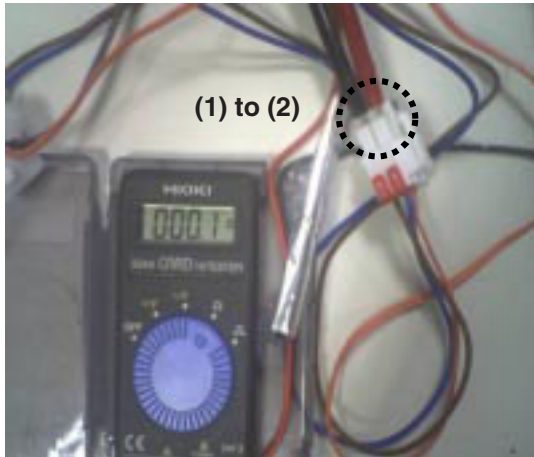Function	The controller assembly is made up of two different kinds of parts. The fuse and the sensor. To determine if these parts are defective, check for resistance. The fuse will cut power to the defrost heater at very high temperatures.														
How to Measure (Fuse-M)		Set a ohmmeter to the 2 housing pin. Measure the 2 pin connected to Fuse-M. If the ohmmeter indicate below 0.1ohm fuse-m is a good condition, But if infinite the part is bad.													
How to Measure (Sensor)		Set a ohmmeter to The 2housing pin. Measure the 2 pin connected to Sensor. If the ohmmeter indicate 11 kΩ (at room temperature) Sensor is good. When check the ohm at other temperatures Check the sensor manual.													
Standard	<table><tr><th colspan="2">Fuse-M (at all temperature)</th><th colspan="2">Sensor (at room temperature)</th></tr><tr><th>Test Point</th><th>Ressult</th><th>Test Point</th><th>Ressult</th></tr><tr><td>(1) to (2)</td><td>0 ~ 0.1 Ω</td><td>(1) to (2)</td><td>11 Ω</td></tr></table>			Fuse-M (at all temperature)		Sensor (at room temperature)		Test Point	Ressult	Test Point	Ressult	(1) to (2)	0 ~ 0.1 Ω	(1) to (2)	11 Ω
Fuse-M (at all temperature)		Sensor (at room temperature)													
Test Point	Ressult	Test Point	Ressult												
(1) to (2)	0 ~ 0.1 Ω	(1) to (2)	11 Ω												

10-2 Sheath Heater (Freezer Room)

Function	Sheath heater is the part for defrost. All heating wire is connected to only one line. So we can decide part is defective or not when we check the resistance.				
How to Measure	<div style="display: flex; justify-content: space-around; align-items: flex-start;">   </div> <p style="text-align: center;">(1) (2)</p> <p>Set a ohmmeter connect to The housing pins. Measure the pins connected to Sheath Heater. If the ohmmeter indicates (V°∅V)/Watt=R is on a good condition, ex) watt=200W, voltage=115V $R=(115 \times 115)/200=66 \Omega$ Infinitive value implies sheath heater is disconnected.</p>				
Standard	<p>Sheath heater (at all temperature)</p> <table border="1"> <thead> <tr> <th>Test Point</th><th>Ressult</th></tr> </thead> <tbody> <tr> <td>(1) to (2)</td><td>62 ~ 70</td></tr> </tbody> </table>	Test Point	Ressult	(1) to (2)	62 ~ 70
Test Point	Ressult				
(1) to (2)	62 ~ 70				


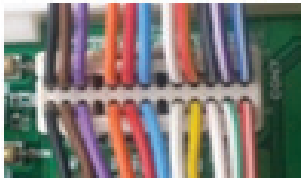
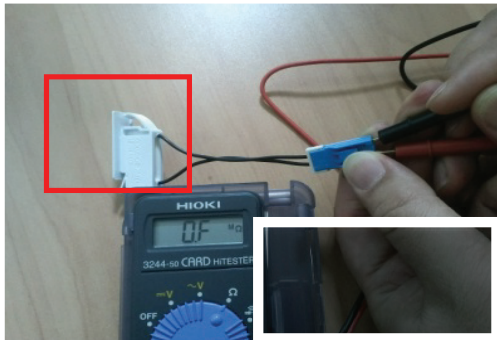
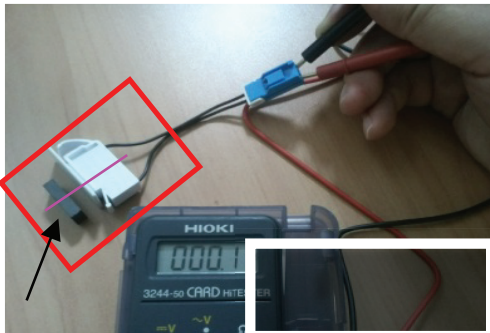
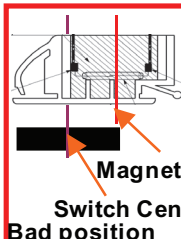
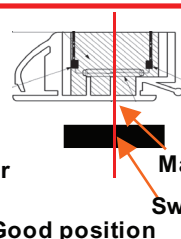
10-2 Sheath Heater (Freezer Room)


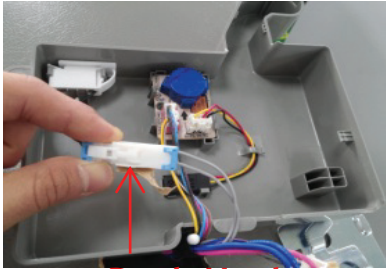
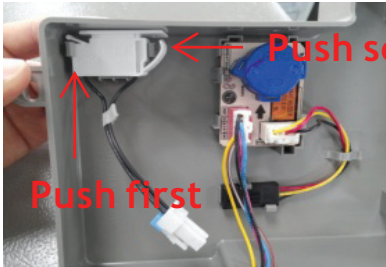
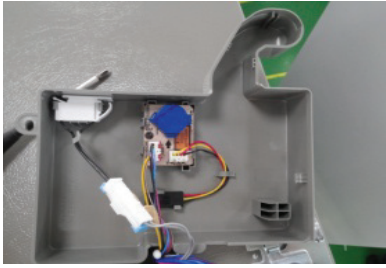
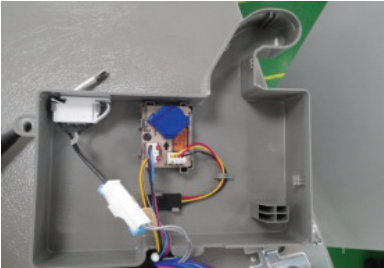
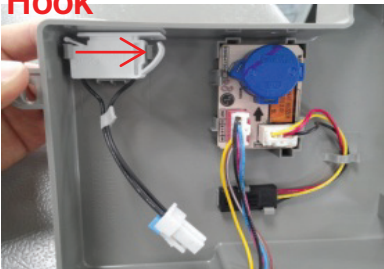
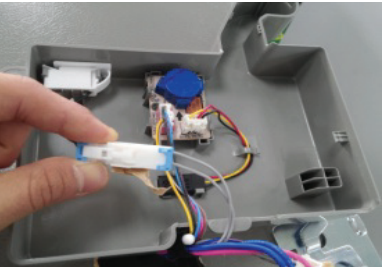

Function	Sheath heater is the part for defrost. All heating wire is connected to only one line. So we can decide part is defective or not when we check the resistance.				
How to Measure	<div style="display: flex; justify-content: space-around; align-items: flex-start;">   <div style="position: absolute; right: 0; top: 250px;"> <p>(1)</p> <p>(2)</p> </div> </div> <p>Set a ohmmeter connect to The housing pins. Measure the pins connected to Sheath Heater. If the ohmmeter indicates $(V^{\circ}\emptyset V)/Watt=R$ is on a good condition, ex) watt=85W, voltage=115V $R=(115 \times 115)/85=156 \Omega$ Infinitive value implies sheath heater is disconnected.</p>				
Standard	<p>Sheath heater (at all temperature)</p> <table border="1"> <thead> <tr> <th>Test Point</th><th>Ressult</th></tr> </thead> <tbody> <tr> <td>(1) to (2)</td><td>144~167</td></tr> </tbody> </table>	Test Point	Ressult	(1) to (2)	144~167
Test Point	Ressult				
(1) to (2)	144~167				


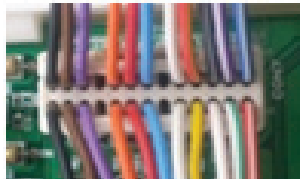
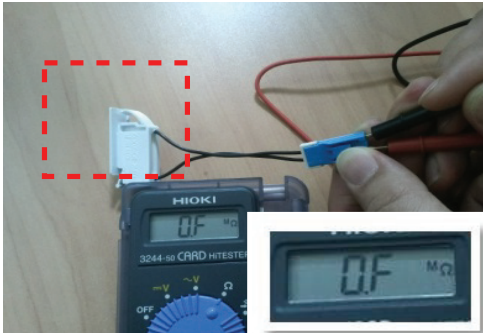
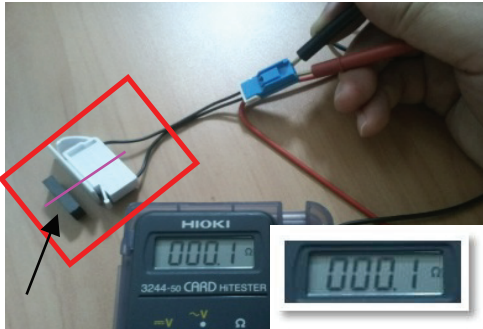
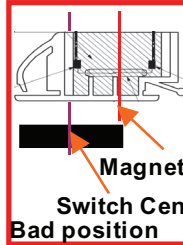
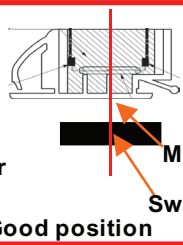
10-3 Sheath Heater (Refrigerator Room)









Function	Sheath heater is the part for defrost. All heating wire is connected to only one line. So we can decide part is defective or not when we check the resistance.				
How to Measure	<div data-bbox="375 502 829 932" data-label="Image"> </div> <div data-bbox="885 549 1352 883" data-label="Image"> </div> <p>Set a ohmmeter connect to The housing pins. Measure the pins connected to Sheath Heater. If the ohmmeter indicates (V°∅V)/Watt=R is on a good condition, ex) watt=130W, voltage=120V $R=(120 \times 120)/130=111 \Omega$ Infinitive value implies sheath heater is disconnected.</p>				
Standard	<p>Sheath heater (at all temperature)</p> <table border="1"> <thead> <tr> <th>Test Point</th><th>Ressult</th></tr> </thead> <tbody> <tr> <td>(1) to (2)</td><td>105~117</td></tr> </tbody> </table>	Test Point	Ressult	(1) to (2)	105~117
Test Point	Ressult				
(1) to (2)	105~117				

10-4 Door Switch


No.	Checking Flow	Result & SVC Action																		
1	<p>► Chink Reed Switch</p> 	<p>The Switch senses if the door is open or close.</p> <ul style="list-style-type: none">-.When the door open, lamp on-.When the door open, the switch give information to Micom-. When the door open, internal contact operate on and off moving plunger of door switch up and down																		
2	<p>► Check Voltage between pin 13 and 14</p> 	<table><tr><th>Status</th><th>Result</th><th>SVC Action</th></tr><tr><td rowspan="2">Close</td><td>5V</td><td>Go to the 4</td></tr><tr><td>Other</td><td>Change the PCB</td></tr></table>	Status	Result	SVC Action	Close	5V	Go to the 4	Other	Change the PCB										
Status	Result	SVC Action																		
Close	5V	Go to the 4																		
	Other	Change the PCB																		
3	<p>► Check the Reed S/W resistance</p> <p>-.No Magnet</p>  <p>-.Magnet Near the Switch</p> 	<p>-.Magnet must be center of Switch</p> <div><p>(X)</p></div> <div><p>(O)</p></div> <p>-.Resistance & Service Action</p> <table><tr><th>Status</th><th>Resistance</th><th>Result</th><th>SVC Action</th></tr><tr><td rowspan="2">No magnet near the Switch</td><td>$\infty \Omega$</td><td>O.K.</td><td>Go to 3</td></tr><tr><td>$10 \Omega \downarrow$</td><td>N.G.</td><td>Go to 4</td></tr><tr><td rowspan="2">Magnet is near the Switch</td><td>$1 \Omega \downarrow$</td><td>O.K.</td><td>Go to 3</td></tr><tr><td>$10 \Omega \uparrow$</td><td>N.G.</td><td>Go to 4</td></tr></table>	Status	Resistance	Result	SVC Action	No magnet near the Switch	$\infty \Omega$	O.K.	Go to 3	$10 \Omega \downarrow$	N.G.	Go to 4	Magnet is near the Switch	$1 \Omega \downarrow$	O.K.	Go to 3	$10 \Omega \uparrow$	N.G.	Go to 4
Status	Resistance	Result	SVC Action																	
No magnet near the Switch	$\infty \Omega$	O.K.	Go to 3																	
	$10 \Omega \downarrow$	N.G.	Go to 4																	
Magnet is near the Switch	$1 \Omega \downarrow$	O.K.	Go to 3																	
	$10 \Omega \uparrow$	N.G.	Go to 4																	

No.	Checking Flow	Result & SVC Action
4	<p data-bbox="264 293 581 329">► Change Reed S/W</p> <p data-bbox="264 329 472 357">-. Remove screw</p>  <p data-bbox="264 689 545 719">-. Disassemble Housing</p>  <p data-bbox="412 998 597 1029">Push Hook</p> <p data-bbox="264 1049 1057 1081">-. Check Resistance of Reed S/W. if it is NG, change it (Number 3)</p> <p data-bbox="264 1117 1151 1149">-. Assemble Reed S/W to hinge cover and Assemble Reed S/W Housing</p>  <p data-bbox="334 1353 506 1385">Push first</p> <p data-bbox="574 1204 794 1236">Push second</p> <p data-bbox="264 1508 675 1540">-. Assemble Screw to hinge cover</p> 	 <p data-bbox="764 710 948 746">Push Hook</p>   





No.	Checking Flow	Result & SVC Action																		
1	<p>► Check the Freezer door switch</p> 	If feel sticky, Change the door S/W																		
2	<p>► Check Voltage between pin 21 and 22</p>  <div>CON7</div>	<table><tr><th>Status</th><th>Result</th><th>SVC Action</th></tr><tr><td rowspan="2">Close</td><td>5V</td><td>Go to the 4</td></tr><tr><td>Other</td><td>Change the PCB</td></tr></table>	Status	Result	SVC Action	Close	5V	Go to the 4	Other	Change the PCB										
Status	Result	SVC Action																		
Close	5V	Go to the 4																		
	Other	Change the PCB																		
3	<p>► Check the Reed S/W resistance</p> <p>-No Magnet</p>  <p>-Magnet Near the Switch</p> 	<p>-Magnet must be center of Switch</p> <div><p>(X)</p><p>(O)</p></div> <p>-Resistance & Service Action</p> <table><tr><th>Status</th><th>Resistance</th><th>Result</th><th>SVC Action</th></tr><tr><td rowspan="2">No magnet near the Switch</td><td>$\infty \Omega$</td><td>O.K.</td><td>Go to 3</td></tr><tr><td>$10 \Omega \downarrow$</td><td>N.G.</td><td>Go to 4</td></tr><tr><td rowspan="2">Magnet is near the Switch</td><td>$1 \Omega \downarrow$</td><td>O.K.</td><td>Go to 3</td></tr><tr><td>$10 \Omega \uparrow$</td><td>N.G.</td><td>Go to 4</td></tr></table>	Status	Resistance	Result	SVC Action	No magnet near the Switch	$\infty \Omega$	O.K.	Go to 3	$10 \Omega \downarrow$	N.G.	Go to 4	Magnet is near the Switch	$1 \Omega \downarrow$	O.K.	Go to 3	$10 \Omega \uparrow$	N.G.	Go to 4
Status	Resistance	Result	SVC Action																	
No magnet near the Switch	$\infty \Omega$	O.K.	Go to 3																	
	$10 \Omega \downarrow$	N.G.	Go to 4																	
Magnet is near the Switch	$1 \Omega \downarrow$	O.K.	Go to 3																	
	$10 \Omega \uparrow$	N.G.	Go to 4																	

No.	Checking Flow	Result & SVC Action
4	<p>► Change Reed S/W</p> <p>- Remove 3 screw and divide housing</p> 	
	<p>- Divide Reed S/W</p>  <p>Push</p>	
	<p>- Push the part of hook and divide Reed S/W</p> <p>- Check the Reed S/W resistance and if it is NG. Change it (Number 3)</p> <p>- Push the Reed S/W to direction of the arrow</p>	
	 <p>First push</p>	 <p>Second push</p>
	<p>- Assemble 3 Screw after Assemble Reed Switch housing</p> 	





10-5 Dispenser DC Motor

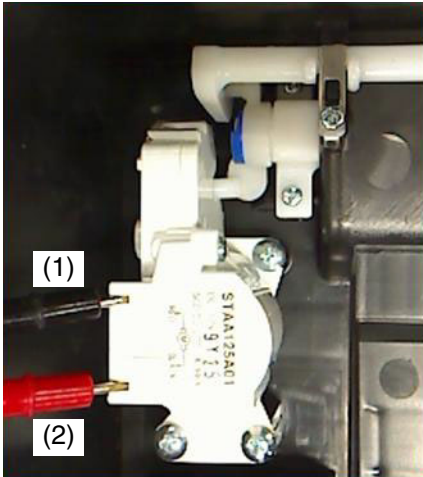Function	- Dispenser DC Motor : When customer push the dispenser button, Pull duct door and abstract from ice bank.				
How to Measure	 <p style="text-align: center;">Dispenser DC Motor</p>				
Standard	<p style="text-align: center;">Dispenser DC Motor</p> <table border="1"> <thead> <tr> <th>Test Points</th><th>Result</th></tr> </thead> <tbody> <tr> <td>(1) to (2)</td><td>9.9 ~ 12.1 Ω</td></tr> </tbody> </table>	Test Points	Result	(1) to (2)	9.9 ~ 12.1 Ω
Test Points	Result				
(1) to (2)	9.9 ~ 12.1 Ω				


10-6 AC Motor ASSEMBLY

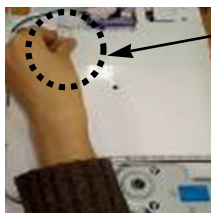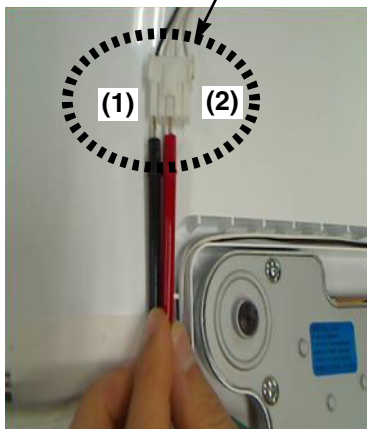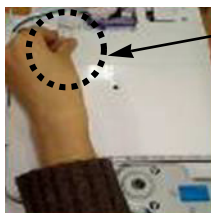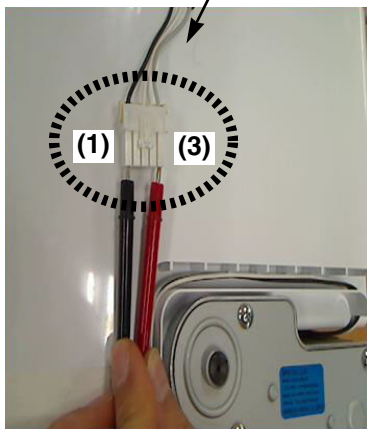Function	The motor in the door pushed the ice into the dispenser.									
How to Measure	<div><div><p>< In-door Motor ></p><div><p>① Separate the housing.</p><p>② Measure the resistance between (1) and (2)</p></div></div><div><p>< In-door Motor ></p><div><p>① Separate the housing.</p><p>② Measure the resistance between (1) and (3)</p></div></div></div> <p>Check the resistance between connectors (In-door motor 1, 2) and (In-door motor 1, 3). It means check whether or not applying an Electric current. If there is resistance, it means the geared motor or solenoid is not inferiority</p>									
Standard	<div><div><p>Geared Motor</p><table><tr><th>Test Points</th><th>Result</th></tr><tr><td>(1) to (2)</td><td>31.1 ~ 42.09Ω</td></tr></table></div><div><p>Cube Solenoid</p><table><tr><th>Test Points</th><th>Result</th></tr><tr><td>(1) to (3)</td><td>31.1 ~ 42.09Ω</td></tr></table></div></div>		Test Points	Result	(1) to (2)	31.1 ~ 42.09Ω	Test Points	Result	(1) to (3)	31.1 ~ 42.09Ω
Test Points	Result									
(1) to (2)	31.1 ~ 42.09Ω									
Test Points	Result									
(1) to (3)	31.1 ~ 42.09Ω									


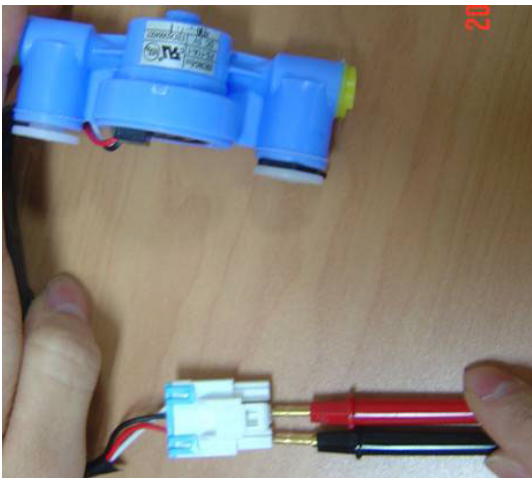
10-7 Damper

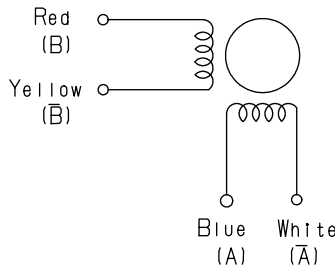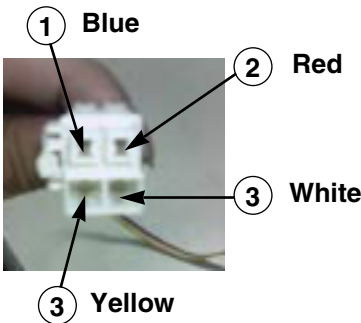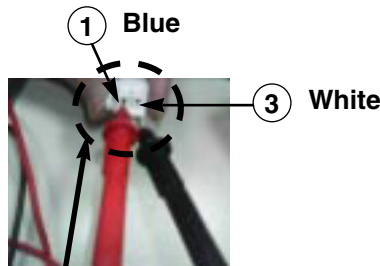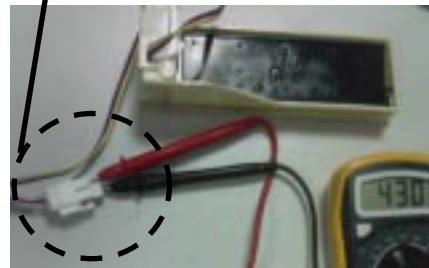Function	The damper supplies cold air from the freezer to the chill room using the damper plate. The chill room is colder when the damper plate is open. When the damper is closed the chill rooms temperature will rise.																														
How to Measure	<div><div><p>Table(1): 결선도(Wiring)</p></div><div><p>Table(2): 2-2상 여자순서(CW Rotation)</p><table><tr><th rowspan="2">Housing No. & L/Wire Color</th><th colspan="4">Step</th></tr><tr><th>1</th><th>2</th><th>3</th><th>4</th></tr><tr><td>1- Blue (A)</td><td>+</td><td>-</td><td>-</td><td>+</td></tr><tr><td>2- Red (B)</td><td>+</td><td>+</td><td>-</td><td>-</td></tr><tr><td>3- White(A)</td><td>-</td><td>+</td><td>+</td><td>-</td></tr><tr><td>4- Yellow(B)</td><td>-</td><td>-</td><td>+</td><td>+</td></tr></table></div></div> <p style="text-align: center;">< Damper Circuit ></p> <div><div><p>Check the ②, ④</p></div><div><p>Check the ①, ③</p><p style="text-align: center;">< extension ></p><p>Check the ①, ③</p></div></div> <p>Check to see if there is electrical current, if there is resistance the damper is good.</p>		Housing No. & L/Wire Color	Step				1	2	3	4	1- Blue (A)	+	-	-	+	2- Red (B)	+	+	-	-	3- White(A)	-	+	+	-	4- Yellow(B)	-	-	+	+
Housing No. & L/Wire Color	Step																														
	1	2	3	4																											
1- Blue (A)	+	-	-	+																											
2- Red (B)	+	+	-	-																											
3- White(A)	-	+	+	-																											
4- Yellow(B)	-	-	+	+																											
Standard	<div><div><p>Damper</p><table><tr><th>Test Points</th><th>Result</th></tr><tr><td>Red and Yellow</td><td>373 ~ 456 Ω</td></tr></table></div><div><table><tr><th>Test Points</th><th>Result</th></tr><tr><td>Blue and White</td><td>373 ~ 456 Ω</td></tr></table></div></div>		Test Points	Result	Red and Yellow	373 ~ 456 Ω	Test Points	Result	Blue and White	373 ~ 456 Ω																					
Test Points	Result																														
Red and Yellow	373 ~ 456 Ω																														
Test Points	Result																														
Blue and White	373 ~ 456 Ω																														

10-8 Lamp Socket

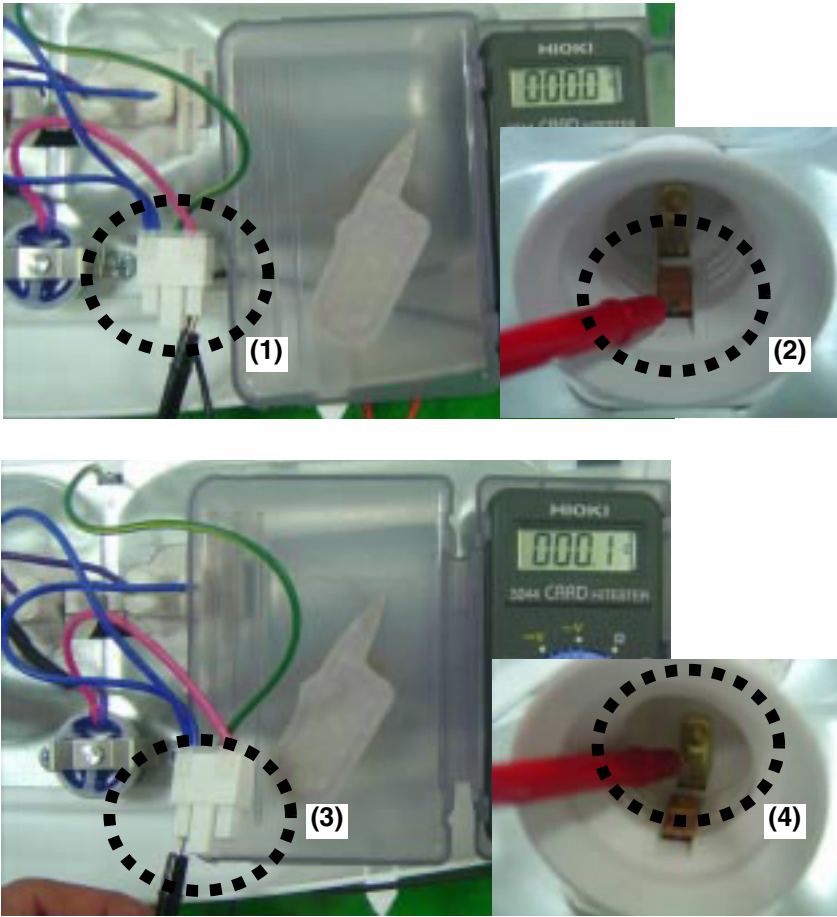
Function	<p>The lamp socket connect cover lamp assembly to lamp.</p> <p>The lamp socket fix lamp and unite lamp and cover lamp assembly.</p> <p>The lamp socket supply electric source to lamp also.</p>				
How to Measure	 <p>Check the resistance between connector of housing and connector of lamp socket. It means check whether or not applying an electric current.</p> <p>If there is resistance it means the lamp socket is good.</p>				
Standard	<table border="1"> <thead> <tr> <th>Test Points</th><th>Result</th></tr> </thead> <tbody> <tr> <td>(1) to (2) and (3) to (4)</td><td>0 Ω</td></tr> </tbody> </table>	Test Points	Result	(1) to (2) and (3) to (4)	0 Ω
Test Points	Result				
(1) to (2) and (3) to (4)	0 Ω				

10-9 Flow Sensor

Function	Flow Sensor (in machine room) Count the water quantity from city water to water filter in refrigerator					
How to Measure	<div></div> <p>Flow Sensor (in machine room)</p>					
Standard	<table><tr><td>Test Points</td><td>Result</td></tr><tr><td>Red wire to Black wire</td><td>4 ~ 30 kΩ</td></tr></table>		Test Points	Result	Red wire to Black wire	4 ~ 30 kΩ
Test Points	Result					
Red wire to Black wire	4 ~ 30 kΩ					

11. Compressor Troubleshooting


PCB Check (Simplify)

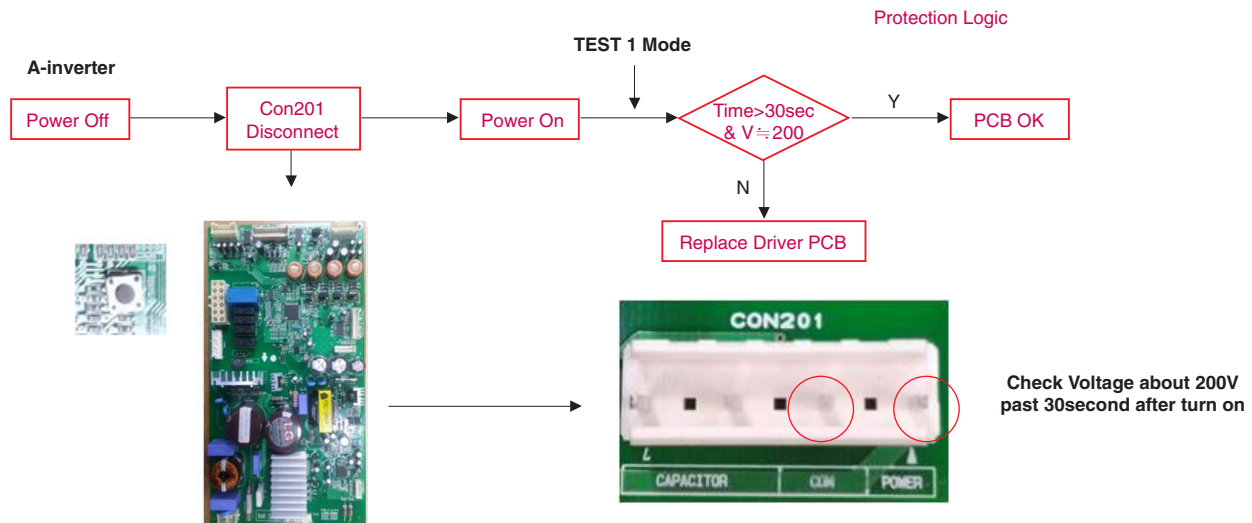

Test Mode

	Ref.	Comp	Display & sound	Refer
		FLB075(A-Inverter)		
TEST1	Forced Starting	TDC (Full Stroke)	Display ON, Buzz 1 time	

Troubleshooting

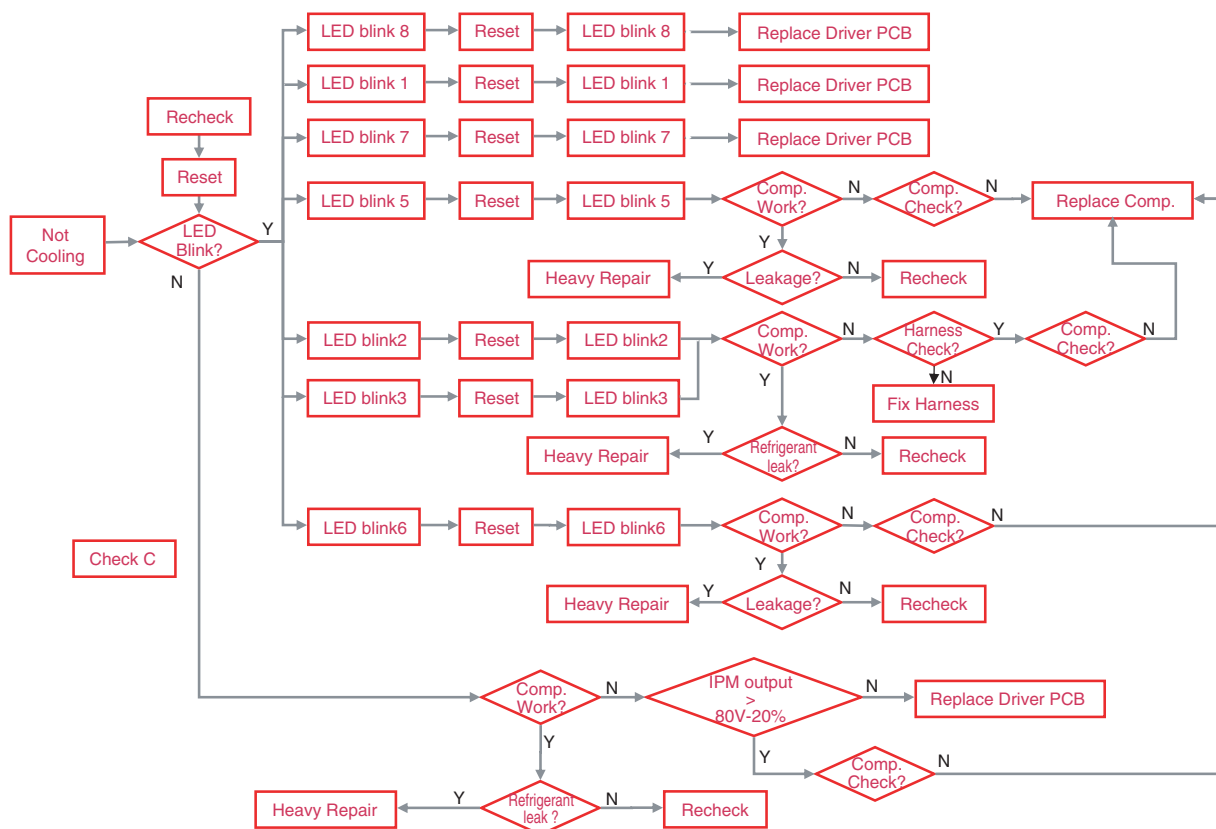

11-1 Check A

- There is PC Board located in the PCB case.
The control driver is PC board for the compressor.
- This step shows the source voltage of the driver PC board.

Step1. Open PCB Cover



Step2. Check Driver PCB




LED Lamp

* Driver PCB located in machine room.

IPM Output check

- Measure the voltage between the POWER and COMM pins of the connector as shown below.

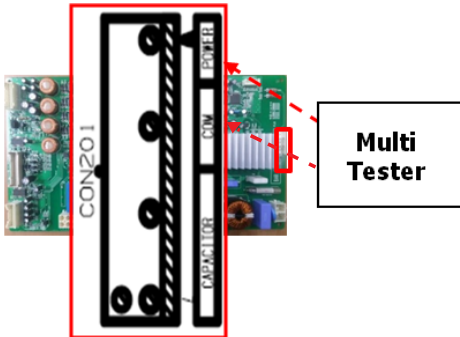

Check to make sure compressor is receiving voltage from IPM

- In order to determine whether the compressor is operating normally, check the output voltage during the refrigeration cycle.
- After initial power-up, when the compressor begins to operate, wait 10 minutes before checking.
- The compressor is operating normally if the voltage is greater than 80V.

11-2 Check B

B1. LED blinks once, then repeats (FCT0 Fault: A-Inverter)



Protection Logic



Blink OFF Blink OFF

- Purpose: Detecting motor current and voltage error
- Check voltage at **point A** (Motor Voltage), **point B** (Motor Current) and **Point C** (Capacitor Voltage) when **compressor is off**.
- Spec: **Points A, B, & C** $2.5V \pm 0.3V$

⊙ GND
○ Voltage

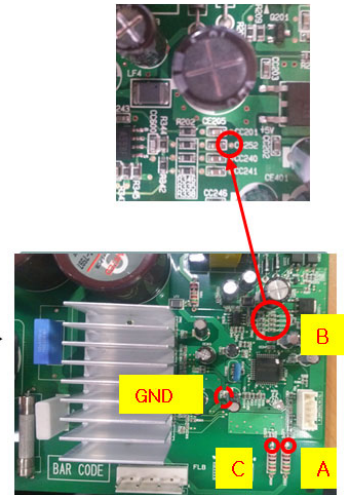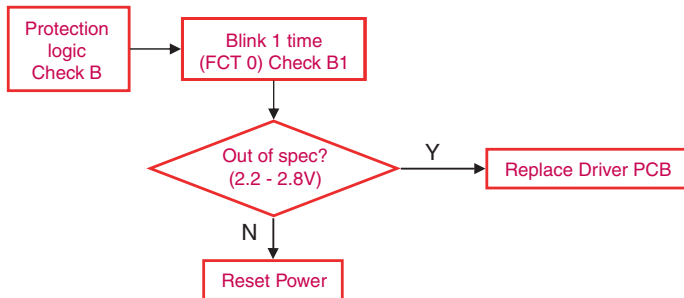

※ **Caution : Devices should not be short-circuited during check C**


B2. LED blinks two times, then repeats (Stroke Trip: A & E Inverters)

Protection Logic



Blink Blink OFF Blink Blink OFF

- Purpose: Prevent abnormally long piston strokes.
- Case 1. If compressor doesn't work and LED blinks - Cause: Possibly harness from compressor to PCB might be defective.
- Case 2. If compressor works intermittently and LED blinks - Cause: Condenser Fan or Freezer Fan is not running. Sealed system problem such as moisture restriction, restriction at capillary tube or refrigerant leak.
- Logic: Compressor is forced to off and then tries to restart after 1 minute.

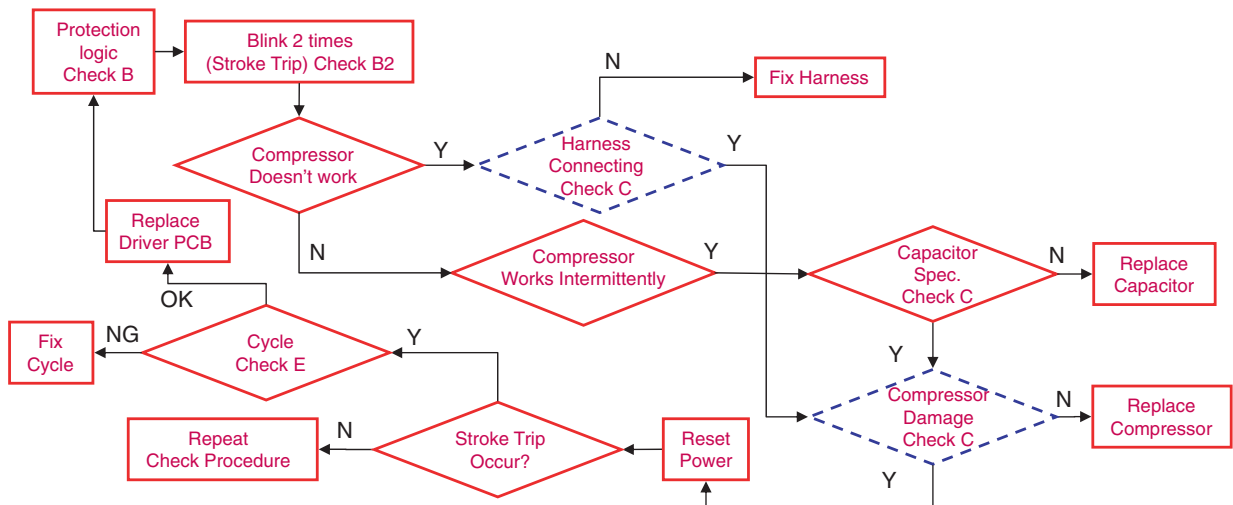


B3. LED blinks three times, then repeats (Stroke Trip)

Protection Logic



Blink Blink Blink OFF Blink Blink Blink OFF

- Purpose : Prevent over voltage and current detecting connecting error.
- Cause : -.Connecting error of PCB and Comp, Capacitor harness -. Comp insulation damage.
- Logic : Compressor is forced off and tries to restart within 40 seconds.

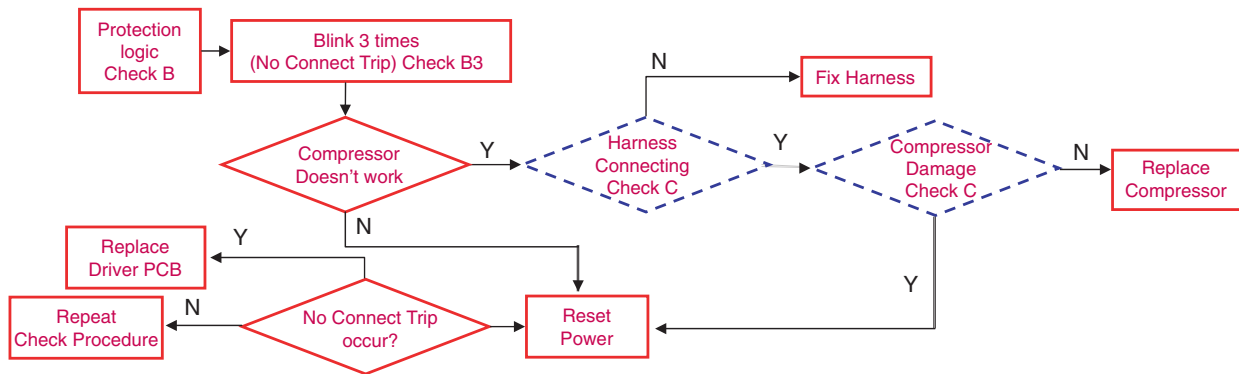


B4. LED blinks five times, then repeats (Locked Piston: A & E Inverters)

Protection Logic



Blink Blink Blink Blink Blink OFF

- Purpose: To detect locked piston
- Cause: Lack of oil to the cylinder, cylinder or piston damaged and or restricted discharge. A Locked Piston can also be caused by foreign materials inside the compressor.
- Logic: Compressor is forced off and tries to restart within 2.5 minutes.

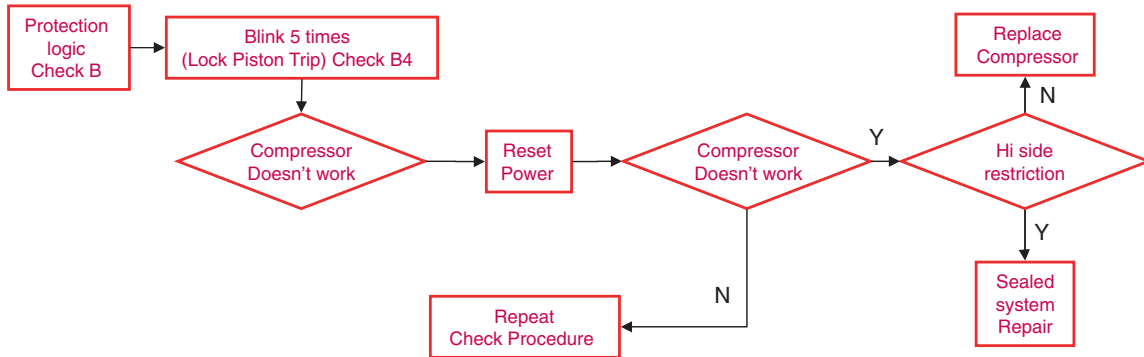


B5. LED blinks six times, then repeats (Current Trip: A & E-Inverters)

Protection Logic



Blink Blink Blink Blink Blink Blink OFF

- Purpose: Prevent over-current (overload protect)
- Cause: Ambient temperature is high (over 43°C) and/or refrigerator's condenser air movement is restricted.
- Condenser Fan is stopped, restricted discharge line, compressor is damaged, or IPM device is defective.
- Logic: Compressor is forced off and tries to restart after 6 minutes.



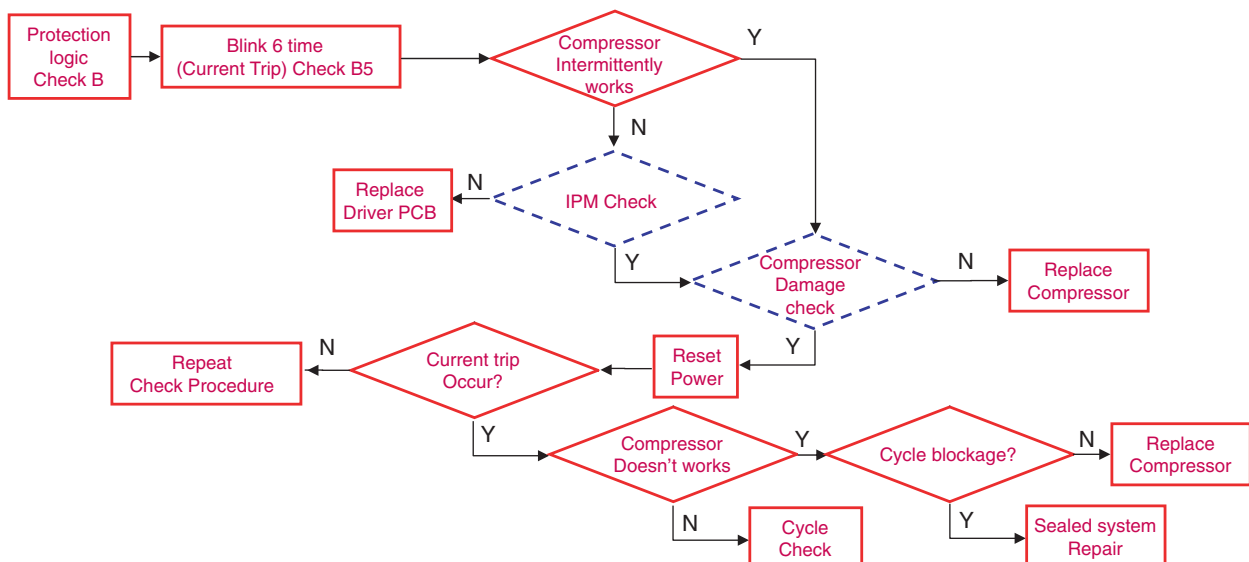


B6. LED blinks seven times, then repeats (IPM Fault: A & E Inverters)



Blink Blink Blink Blink Blink Blink Blink OFF

- Purpose: Prevent high current due to IPM Short
- Cause: Damaged IPM (Dead Short)
- Test for a dead short at **Point A** with a VOM.
- Logic: Compressor is forced off and tries to restart in 20 seconds.

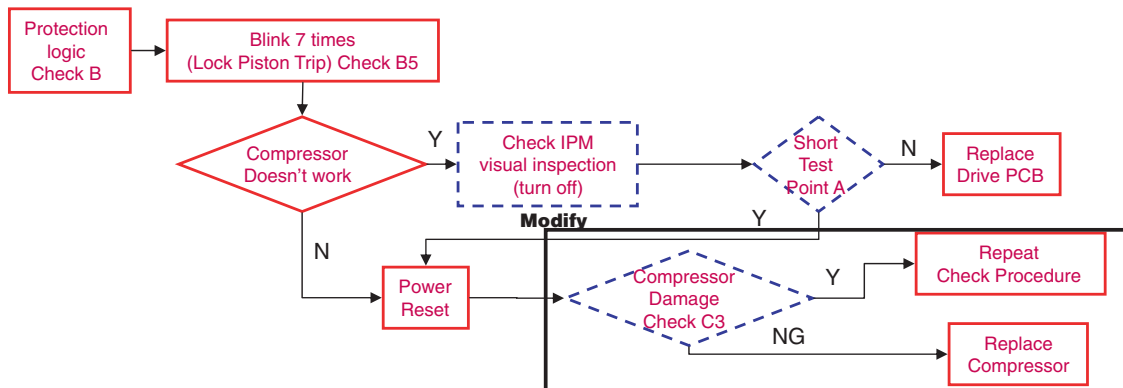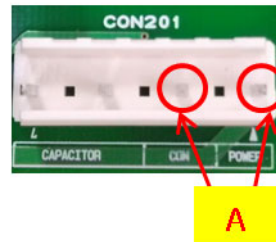
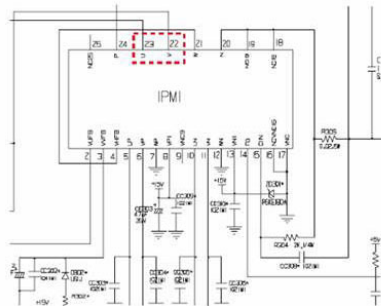


B7. LED Blinks eight times, then repeats (Communication Error)



Blink Blink Blink Blink Blink Blink Blink Blink OFF

- Purpose: To detect Set control Micom and communication error
- Cause : Communication Error
- Logic : LED blink. (Compressor runs reference value before occuring communication Error)

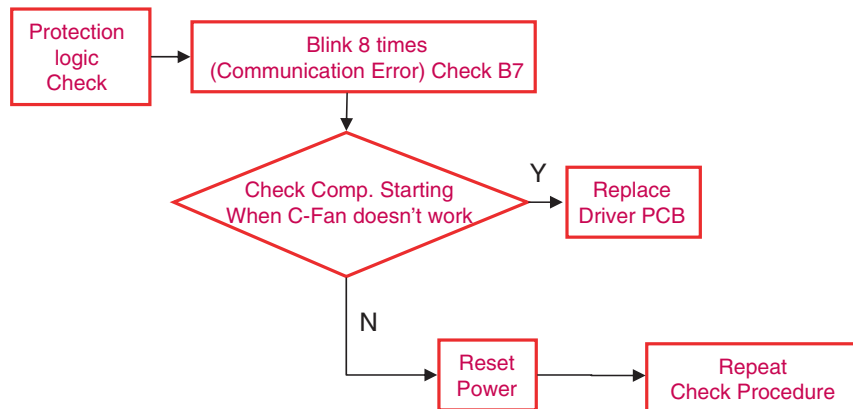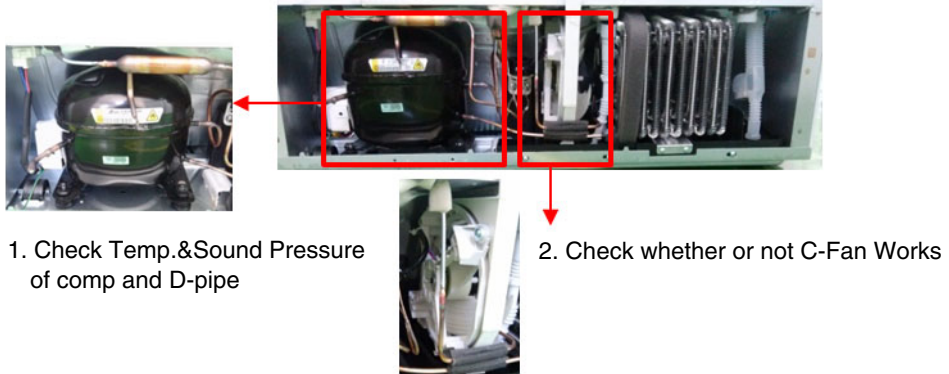

11-3 Check C


C1. Harness Connection Check

C2. Capacitor Specifications

C3. Compressor Check


Check Process

- Step 1. Power off. Step 2. Check capacitor spec. (table1). Step3. Check resistance of point A
Step 4. Check wire harness (INF ohm). Step 5. Check resistance at point B. Step 6. Point D.

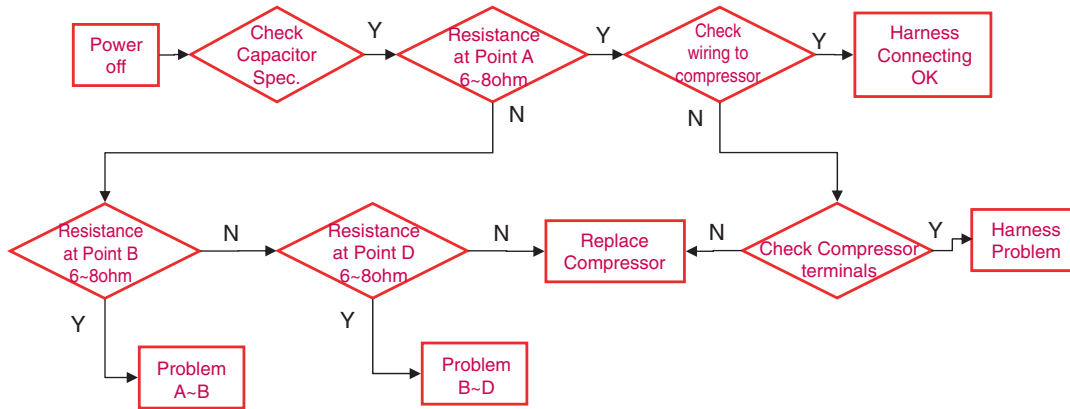

Caution : Turn off power during check C

- Measure the resistance at each point except point C
- Dead short check: measure the resistance between power line in compressor and earth ground in refrigerator (Inf. Ohm)

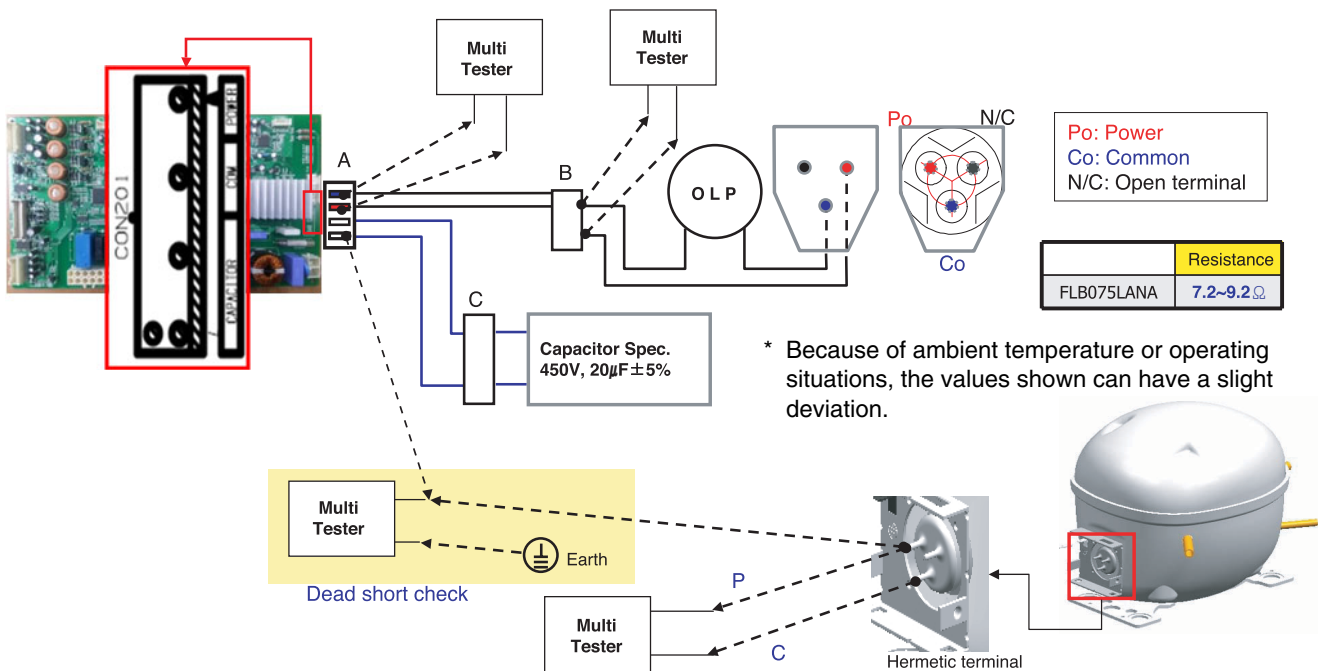


11-4 Check D

D1. Activate Protection logic


Cycle check with protection logic

- We have to check Condenser fan and Freezer fan before performing Check D
- Locked Piston, Current trip and stroke trip can be activated by other problems than the driver or compressor.

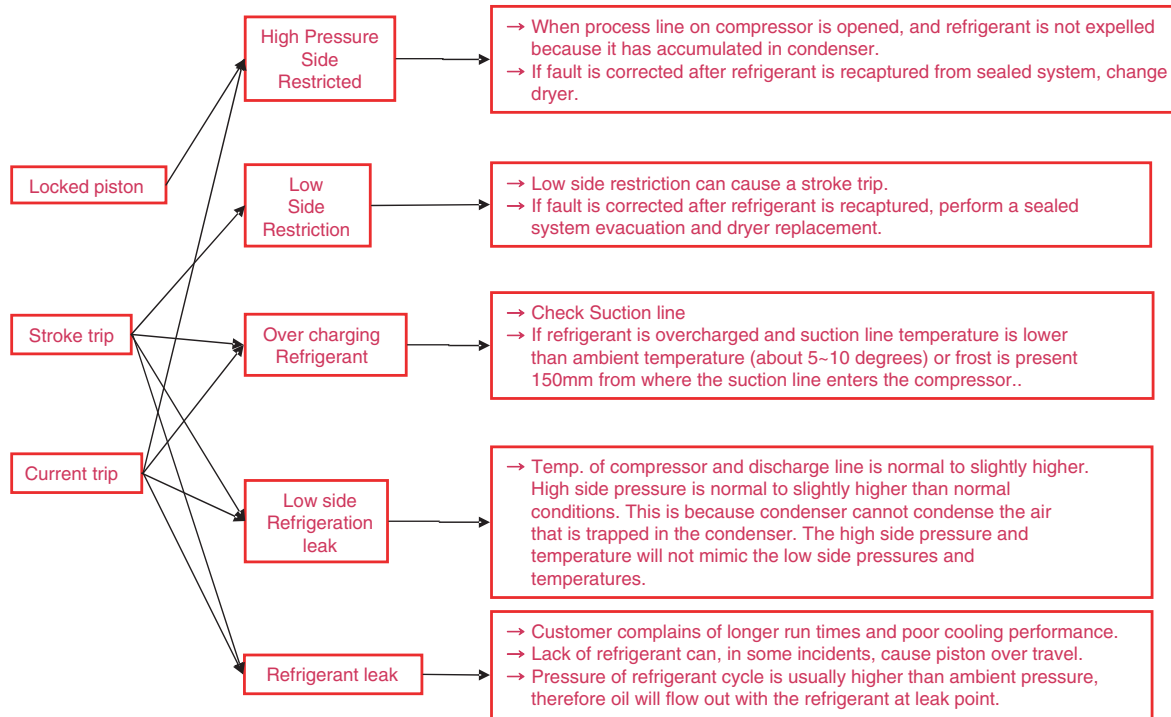

D2. sealed system diagnosis

- Check as follows;

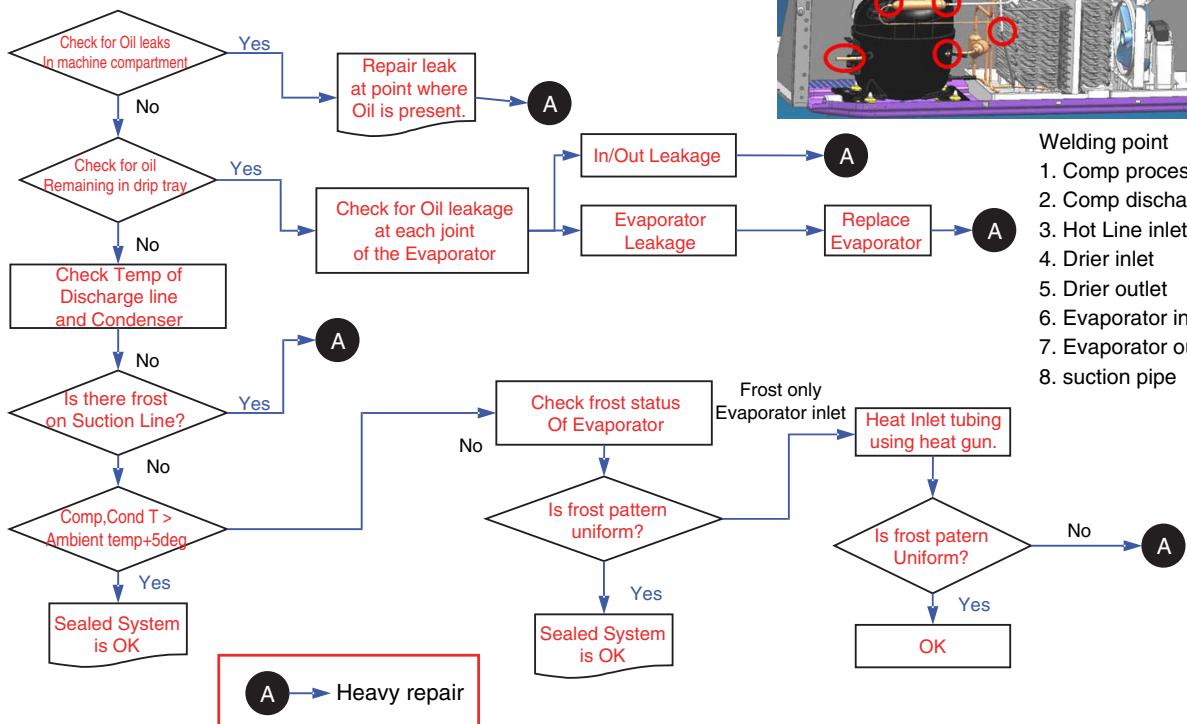

Compressor Troubleshooting

⚠ WARNING HIGH VOLTAGE

Step 1) Open PCB cover







Step 2) Check for blinking frequency of LED and PCB



LED Lamp


When compressor is normal, it does not blink
: Refer to the next page to find out what actions to take according to how many times LED blink

No	LED operating condition	Cause	Service guideline
1	<p>LED two - time repetiton (Stroke Trip)</p>  <p>..on - on - off - on - on - off - on - on - off ..repeating</p>	PCB Parts defect or Compress or Connector miss connecting (Piston over run)	<ol style="list-style-type: none"> 1. Please check, Whether connector of compressor is attached rightly or not. after power off 2. After the first action, You check on normal operation of compressor. 3. If the same symptom arises after the second action, replace PCB
2	<p>LED five - time repetiton (Piston Lock Trip)</p>  <p>..on - on - on - on - on - off - on - on - on - on - on - off ..repeating</p>	Piston constraint	<ol style="list-style-type: none"> 1. After resetting power, check if it is running normal 2. If the same symptom arises after the first action 3. If the same symptom arises after the second action, replace compressor
3	<p>LED six - time repetiton (Current Trip)</p>  <p>..on - on - on - on - on - on - off - on - on - on - on - on - off ..repeating</p>	Circuit over current error Or cycle error	<ol style="list-style-type: none"> 1. After resetting power, check if it is running normal 2. If the same symptom arises after the first action 3. If the same symptom arises after the second action, replace compressor
4	<p>LED seven- time repetiton (IPM Fault Trip)</p>  <p>..on - on - on - on - on - on - on - off - on - on - on - on - on - on - off ..repeating</p>	PCB parts defect (IPM)	<ol style="list-style-type: none"> 1. After resetting power, check if it is running normal 2. If the same symptom arises after the first action, replace PCB

11-5 SERVICE DIAGNOSIS CHART

COMPLAINT	POINTS TO BE CHECKED	REMEDY
No Cooling.	<ul style="list-style-type: none"> Is the power cord unplugged from the outlet? Check if the power switch is set to OFF. Check if the fuse of the power switch is shorted. Measure the voltage of the power outlet. 	<ul style="list-style-type: none"> Plug into the outlet. Set the switch to ON. Replace the fuse. If the voltage is low, correct the wiring.
Cools poorly.	<ul style="list-style-type: none"> Check if the unit is placed too close to the wall. Check if the unit is placed too close to the stove, gas cooker, or in direct sunlight. Is the ambient temperature too high or the room door closed? Check if food put in the refrigerator is hot. Did you open the door of the unit too often or check if the door is sealed properly? Check if the Control is set to Warm position. 	<ul style="list-style-type: none"> Place the unit about 4 inches (10 cm) from the wall. Place the unit away from these heat sources. Lower the ambient temperature. Put in foods after they have cooled down. Don't open the door too often and close it firmly. Set the control to Recommended position.
Food in the Refrigerator is frozen.	<ul style="list-style-type: none"> Is food placed in the cooling air outlet? Check if the control is set to colder position. Is the ambient temperature below 41°F(5°C)? 	<ul style="list-style-type: none"> Place foods in the high-temperature section. (front part) Set the control to Recommended position. Set the control to Warm position.
Condensation or ice forms inside the unit.	<ul style="list-style-type: none"> Is liquid food sealed? Check if food put in the refrigerator is hot. Did you open the door of the unit too often or check if the door is sealed properly? 	<ul style="list-style-type: none"> Seal liquid foods with wrap. Put in foods after they have cooled down. Don't open the door too often and close it firmly.
Condensation forms in the Exterior Case.	<ul style="list-style-type: none"> Check if the ambient temperature and humidity of the surrounding air are high. Is there a gap in the door gasket? 	<ul style="list-style-type: none"> Wipe moisture with a dry cloth. It will disappear in low temperature and humidity. Fill up the gap.
There is abnormal noise.	<ul style="list-style-type: none"> Is the unit positioned in a firm and even place? Are any unnecessary objects placed in the back side of the unit? Check if the Drip Tray is not firmly fixed. Check if the cover of the compressor enclosure in the lower front side is taken out. 	<ul style="list-style-type: none"> Adjust the Leveling Screw, and position the refrigerator in a firm place. Remove the objects. Fix the Drip Tray firmly in the original position. Place the cover in its original position.
Door does not close well.	<ul style="list-style-type: none"> Check if the door gasket is dirty with an item like juice. Is the refrigerator level? Is there too much food in the refrigerator? 	<ul style="list-style-type: none"> Clean the door gasket. Position in a firm place and level the Leveling Screw. Make sure food stored in shelves does not prevent the door from closing.
Ice and foods smell unpleasant.	<ul style="list-style-type: none"> Check if the inside of the unit is dirty. Are foods with a strong odor unwrapped? The unit smells of plastic. 	<ul style="list-style-type: none"> Clean the inside of the unit. Wrap foods that have a strong odor. New products smell of plastic, but this will go away after 1-2 weeks.

●Other possible problems:

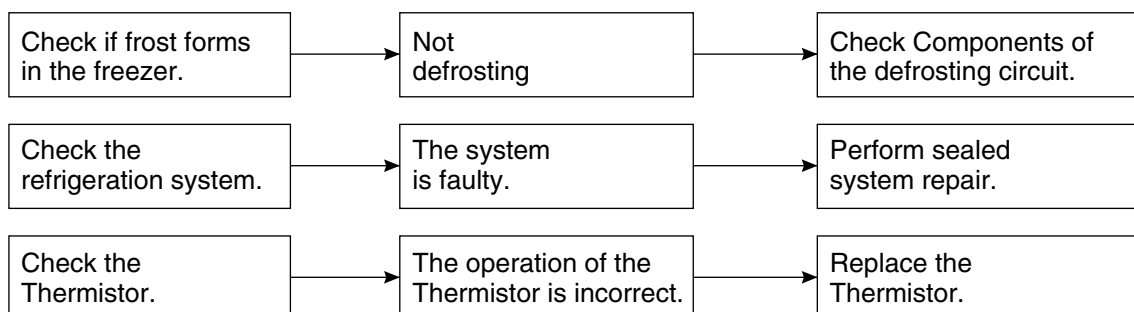

11-6 REFRIGERATION CYCLE

▼ Troubleshooting Chart

CAUSE		STATE OF THE UNIT	STATE OF THE EVAPORATOR	TEMPERATURE OF THE COMPRESSOR	REMARKS
LEAKAGE	PARTIAL LEAKAGE	Freezer compartment and Refrigerator don't cool normally.	Low flowing sound of Refrigerant is heard and frost forms in inlet only.	A little higher than ambient temperature.	<ul style="list-style-type: none"> Refrigerant level is low due to a leak. Normal cooling is possible by restoring the normal amount of refrigerant and repairing the leak.
	COMPLETE LEAKAGE	Freezer compartment and Refrigerator don't cool normally.	Flowing sound of refrigerant is not heard and frost isn't formed.	Equal to ambient temperature.	<ul style="list-style-type: none"> No discharging of Refrigerant. Normal cooling is possible by restoring the normal amount of refrigerant and repairing the leak.
CLOGGED BY DUST	PARTIAL CLOG	Freezer compartment and Refrigerator don't cool normally.	Flowing sound of refrigerant is heard and frost forms in inlet only.	A little higher than ambient temperature.	<ul style="list-style-type: none"> Normal discharging of the refrigerant. The capillary tube is faulty.
	WHOLE CLOG	Freezer compartment and Refrigerator don't cool.	Flowing sound of refrigerant is not heard and frost isn't formed.	Equal to ambient temperature.	<ul style="list-style-type: none"> Normal discharging of the Refrigerant.
MOISTURE CLOG		Cooling operation stops periodically.	Flowing sound of refrigerant is not heard and frost melts.	Lower than ambient temperature.	<ul style="list-style-type: none"> Cooling operation restarts when heating the inlet of the capillary tube.
DEFECTIVE COMPRESSION	COMP-RESSION	Freezer and Refrigerator don't cool.	Low flowing sound of refrigerant is heard and frost forms in inlet only.	A little higher than ambient temperature.	<ul style="list-style-type: none"> Low pressure at high side of compressor due to low refrigerant level.
	NO COMP-RESSION	No compressing operation.	Flowing sound of refrigerant is not heard and there is no frost.	Equal to ambient temperature.	<ul style="list-style-type: none"> No pressure in the high pressure part of the compressor.


12-6-1 Cleaning

There is no need for routine condenser cleaning in normal Home operating environments. If the environment is particularly greasy or dusty, or there is significant pet traffic in the home, the condenser should be cleaned every 2 to 3 months to ensure maximum efficiency.

If you need to clean the condenser:

- Remove the mechanical cover.
- Use a vacuum cleaner with a soft brush to clean the grille, the open areas behind the grille and the front surface area of the condenser.
- Replace the mechanical cover.


11-6-2 SEALED SYSTEM DIAGNOSIS

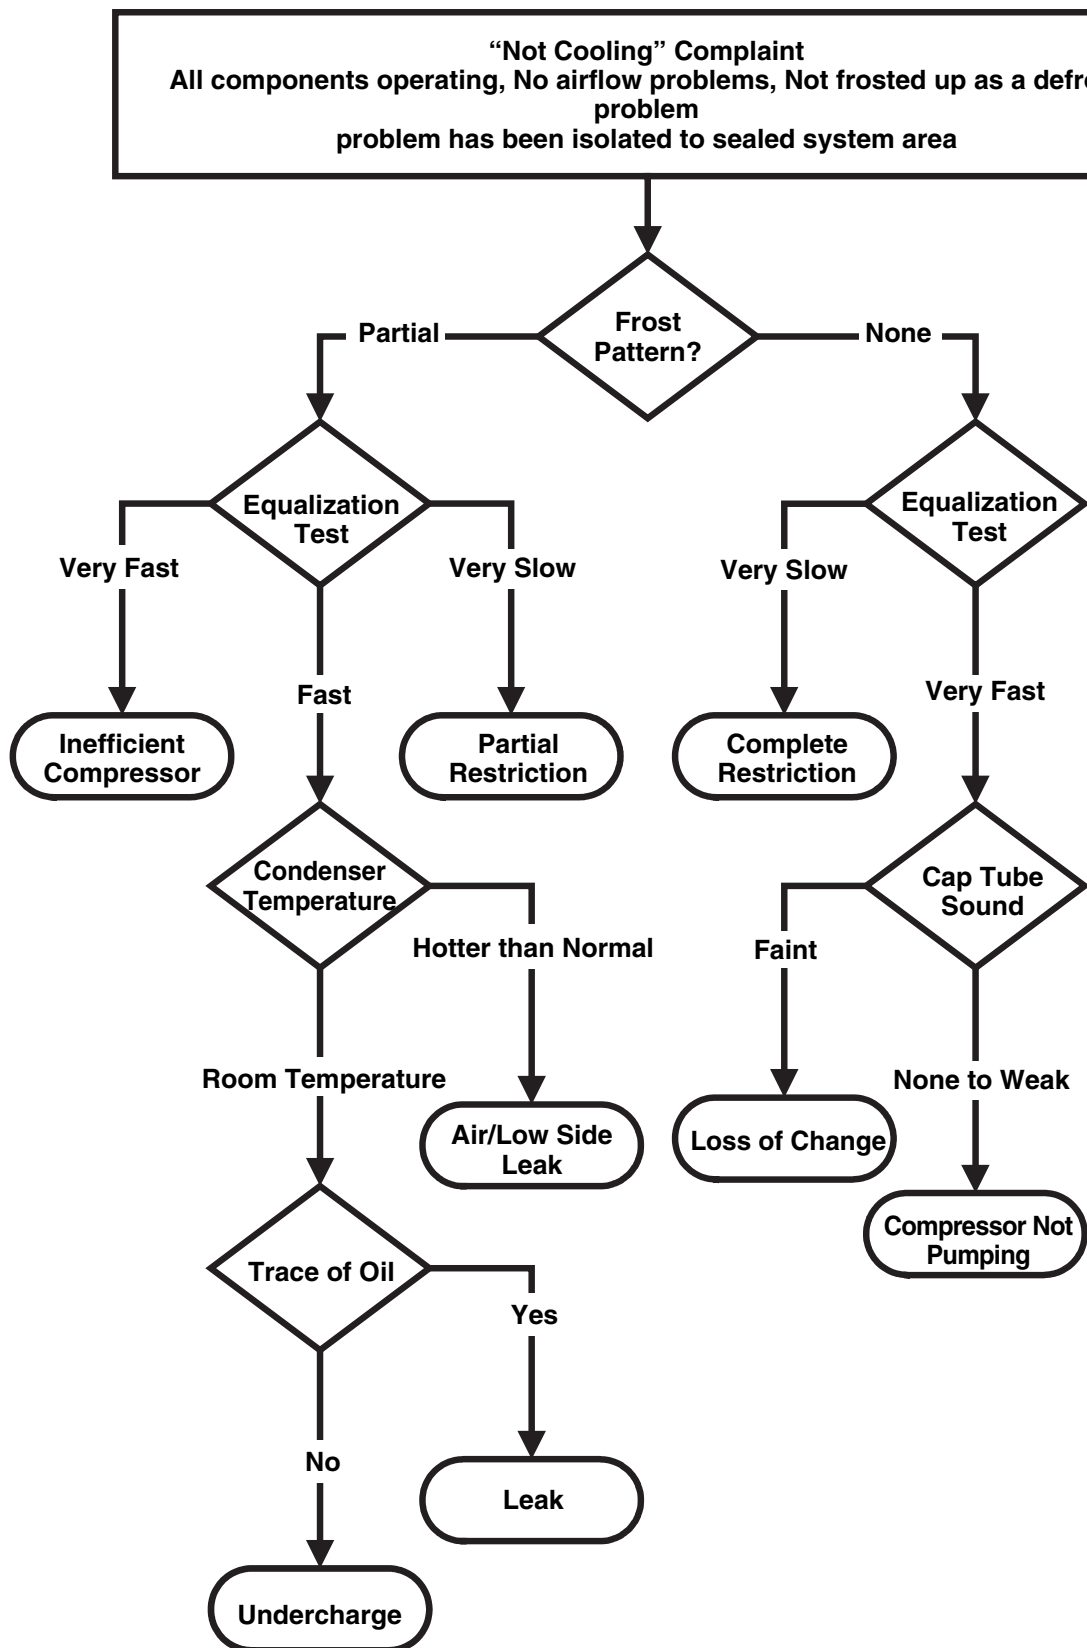


(The equalization test is trying to restart a compressor using a start kit after it has been operating.)

12. ICEMAKER OPERATING METHOD AND TROUBLE SHOOTING

12-1 Icemaker's Basic Operating Method

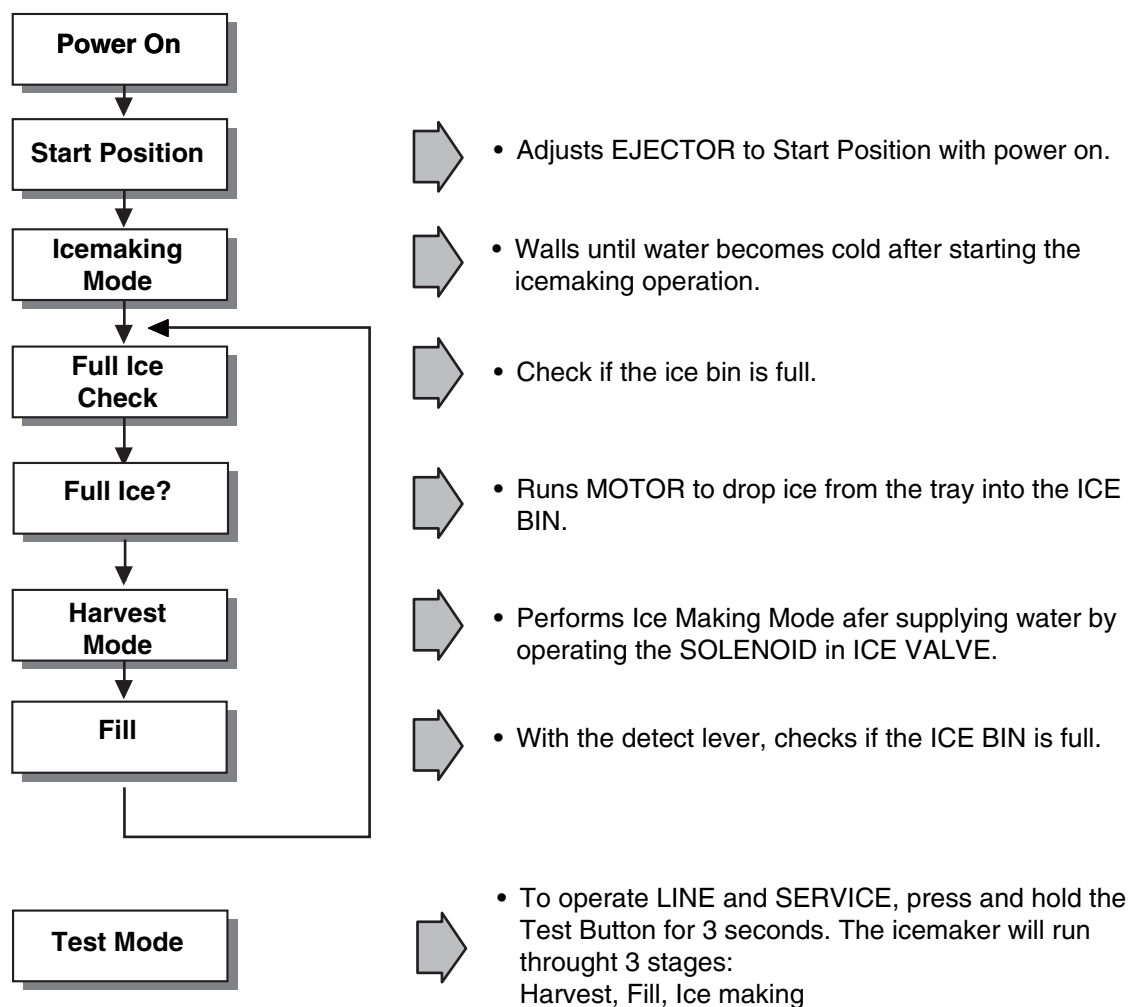

※ While ICE OFF indicator is on, icemaker stops making ice. But you can dispense the ices until the ices run out from the ice store.

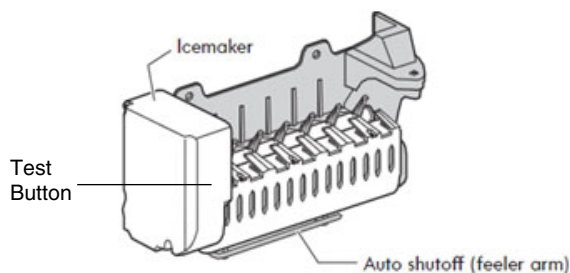


12-2 Trouble Shooting Ice & Water system Issues

12-3-1 Icemaker not making ice or not making enough ice (Environmental Diagnosis)

► Icemaker can't make ices itself. Basically, water, temperature and time are needed.

- Water : If no Water, then no Ice.
- Temperature : The compartment, where the icemaker is located, has to be at least 1°F so that icemaker dumps ices to the bin.
- Time : At least 35 minutes must be passed to make one series of ices after water comes into icemaker.

※ **Test Mode should not be carried out before checking below.**

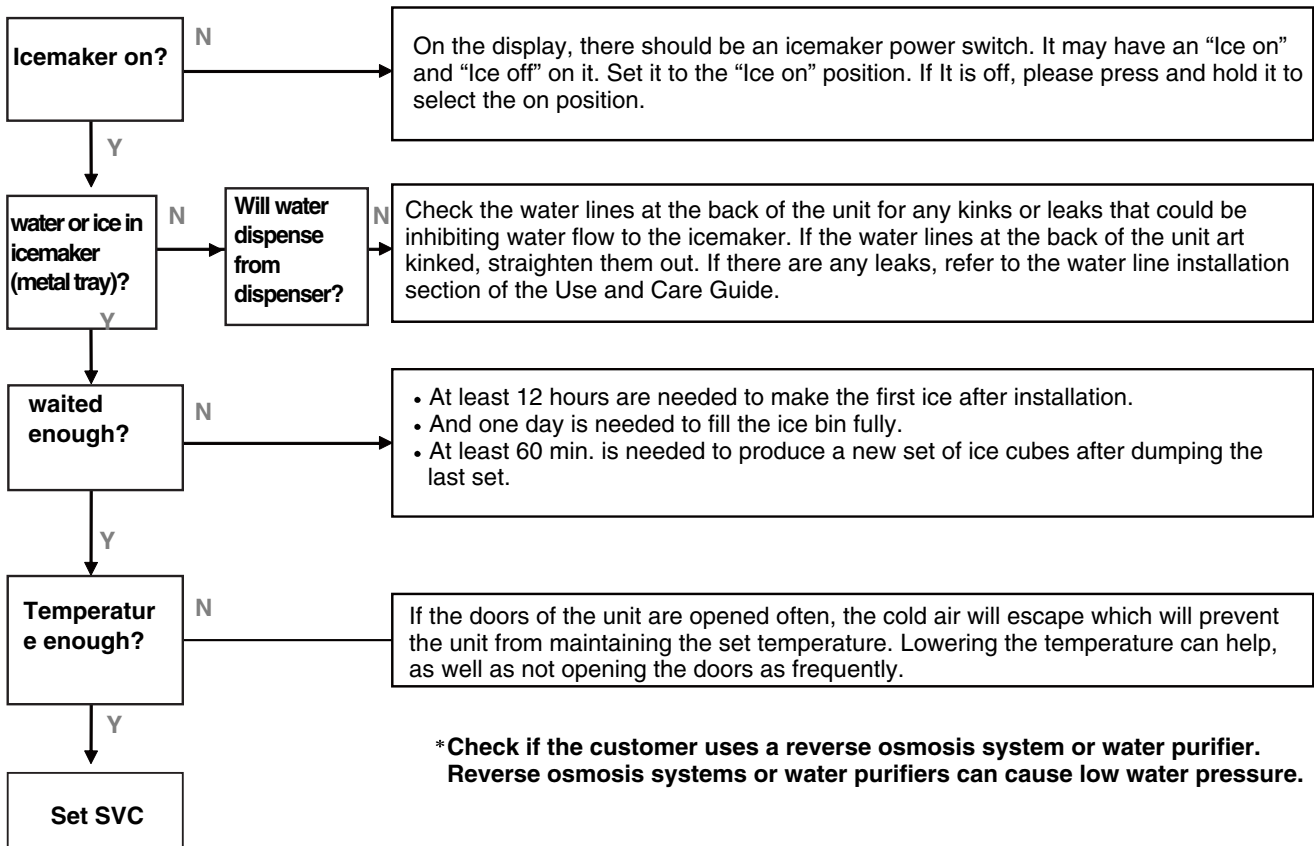

13. DESCRIPTION OF FUNCTION & CIRCUIT OF MICOM

13-1 FUNCTION

13-1-1 Function

1. When the appliance is plugged in, it is set to 37° F for Refrigerator and 0° F for freezer.
You can adjust the Refrigerator and the Freezer control temperature by pressing the ADJUST button.
2. When the power is initially applied or restored after a power failure, it is set to Control temperature Previously.
3. If you do not press any button after turning on the power, only CRUSH or CUBE Label that has been selected will be turned on and all other LEDs on the display Panel will be turned off within 60 seconds. (Power Save Mode)
4. If you press a button, only CRUSH, CUBE label and Lock icon that has been selected will be turned on and all other LEDs on the display Panel will be turned off within 20 seconds. (Power Save Mode)




13-1-2 How to Toggle the Display between °F & °C

1. The initial setting is °F and the display temperature mode can be changed from °F to °C or °C to °F by pressing and holding the FRZ TEMP and the REF TEMP keys at the same time for over 5 seconds.

13-1-3 Lock function (dispenser and display button lock)

1. When the refrigerator is first turned on, the buttons are not locked.
"LOCK" is deactivated with "Unlock Icon" on.
2. To lock the display, the dispenser, and the control panel, press and hold the LOCK button for 3 seconds. "LOCK" is activated with "Lock Icon" on.
3. The LOCK button is the only control feature that remains active in the locked state. The buzzer sound, other control buttons, and the dispenser are deactivated.
4. To release from the locked state, press and hold the LOCK button again for 3 seconds.
5. If you don't hold the Alarm/Lock button more than 3 seconds, Alarm function will be changed and alarm for opened door will be on/off same as alarm icon indicating.

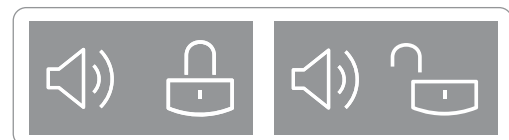

Ex) In selecting
"LOCK"

Ex) In selecting
"LOCK" again

13-1-4 Filter condition display function

1. There is a replacement indicator light for the filter cartridge on the dispenser.
2. Water filter needs replacement once six months or of using water filter.
3. When the Water Filter Icon blinks, you must exchange the filter.
4. After replacing the filter, press and hold the Light/Filter button for more than 3 seconds.
After then water Filter icon turn off with reset status.

Classification

Filter Status Display

In initial Power On / Filter RESET	Blinking

13-1-5 Air Filter condition display function

1. There is a replacement indicator light for the Air Filter cartridge.
2. Air filter needs replacement once every 6 months.
3. When the charger Icon blinks, you must exchange the filter.
4. After replacing the filter, press and hold Air filter button for more than 3 seconds.
After then Air filter icon turn off with reset status.

Classification

Filter Status Display

In initial Power On / Filter RESET	Blinking

13-1-6 Air Filter selection


Please select this function for Air Filter.

1. When you press the Air Filter Button, the POWER will be turned on again.
2. Air Filter POWER function automatically turns off after a fixed time passes.



13-1-7 Ice Plus selection

1. Please select ice plus function for quick freezing.
2. When you press the ice plus button, the ice plus icon will be turned on again.
3. Ice plus function automatically turns off after a fixed time passes.

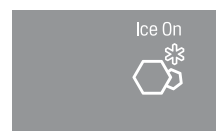

13-1-8 Dispenser use selection

You can select water or ice by separated pad switch.

1. When you press ice type button, ice type will be changed. (Crush or Cube)
2. Hold your cup in the dispenser for a few seconds after dispensing ice or water to allow the last pieces of ice drops of water to fall into the cup.
3. When after initially establishing the water comes out, the water tank inside fills and until at the time of quality the hour is caught.



WATER PAD
ICE PAD



13-1-9 CONTROL OF FREEZER FAN MOTOR

1. Freezer fan motor has high and standar speed.
2. When refrigerator is overloaded, fan motor runs in high speed as powered-up Standard speeds is used for general purposes.
3. To improve cooling speed, the RPM of freezer fan motor changs from normal speed to high.

13-1-10 Cooling Fan Motor

1. The cooling fan is switched ON and OFF in conjunction with the compressor.
2. The Failure sensing method is the same as in the fan motor of the freezing fan motor(refer to failure diagnosis function table for failure display).

13-1-11 Ice Compartment Fan

1. The Icing Fan is controlled by the the sensor on the top of the ice compartment.
2. The Failure sensing method is the same as in the fan motor of the freezer (refer to failure diagnosis function table for failure display)

13-1-12 Refrigeration room Fan Motor

1. The refrigeration room fan is switched ON and OFF in conjunction with the refrigeration room temperature.
2. The Failure sensing method is the same as in the fan motor of the freezing fan motor (refer to failure diagnosis function table for failure display).

13-1-13 Ice PLUS

1. The purpose of this function is to intensify the cooling speed of freezer and to increase the amount of ice.
2. Whenever selection switch is pressed, selection/release, the Icon will turn ON or OFF.
3. If there is a power outage and the refrigerator is powered on again, Ice PLUS will be canceled.
4. To activate this function, press the Ice PLUS key and the Icon will turn ON. This function will remain activated for 24 hrs.
 - (1) control temperature of freezer room is to set -2 ° F notch temperture.
 - (2) If ice bin is full of ice, no change logic of ice compartment fan.
 - (3) If funcion is activitied and de-ice status to be, ice compartment fan is operated by force.
 - Upper RT 18 ° C, Standard RPM
 - Below RT 18 ° C, operate low speed RPM

13-1-14 How to set the display mode and cancel it

1. With the refrigerator door open, keep pressing the Refrigerator Temp Button and ICE PLUS Button more than 5 seconds, then it goes to the display mode with Special Beep Sound With Special Beep Sound.
2. Perform the same way again to cancel the display mode.
3. All Freezing unit will be turned off at display mode (Exceptions : Lamp, Display)

13-1-15 Defrosting (removing frost)

1. Defrosting starts each time the COMPRESSOR running time Between 7~50 hours.
2. Defrosting stops if the sensor temperature reaches 41°F(5°C) or more. If the sensor doesn't reach 41°F(5°C) in 1 hours, the defrost mode is malfunctioning. (Refer to the defect diagnosis function)
3. Defrosting won't function if its sensor is defective (wires are cut or short circuited)

13-1-16 Defect Diagnosis Function

1. Automatic diagnosis makes servicing the refrigerator easy.
2. When a defect occurs, the buttons will not operate.
3. When the defect CODE removes the sign, it returns to normal operation (RESET).
4. The defect CODE shows on the Refrigerator and Freezer Display.



- * Display check function: If simultaneously pressing Ice Plus button and freezing temperature adjustment button for a second, display LCD graphics on. If releasing the button, the LCD graphic displays the previous status.
You can check the error code Within 3-hour Period from initial error


13-1-17 Auto pantry

1. The temperature control will automatically start upon the selected Auto Pantry temperature control.
2. You can adjust the Pantry control with three different temperature ranges by pressing the Temp.Selector button.

14. EXPLODED VIEW & REPLACEMENT PARTS LIST


CASE PARTS

CAUTION : Use the part number to order part, not the position number.

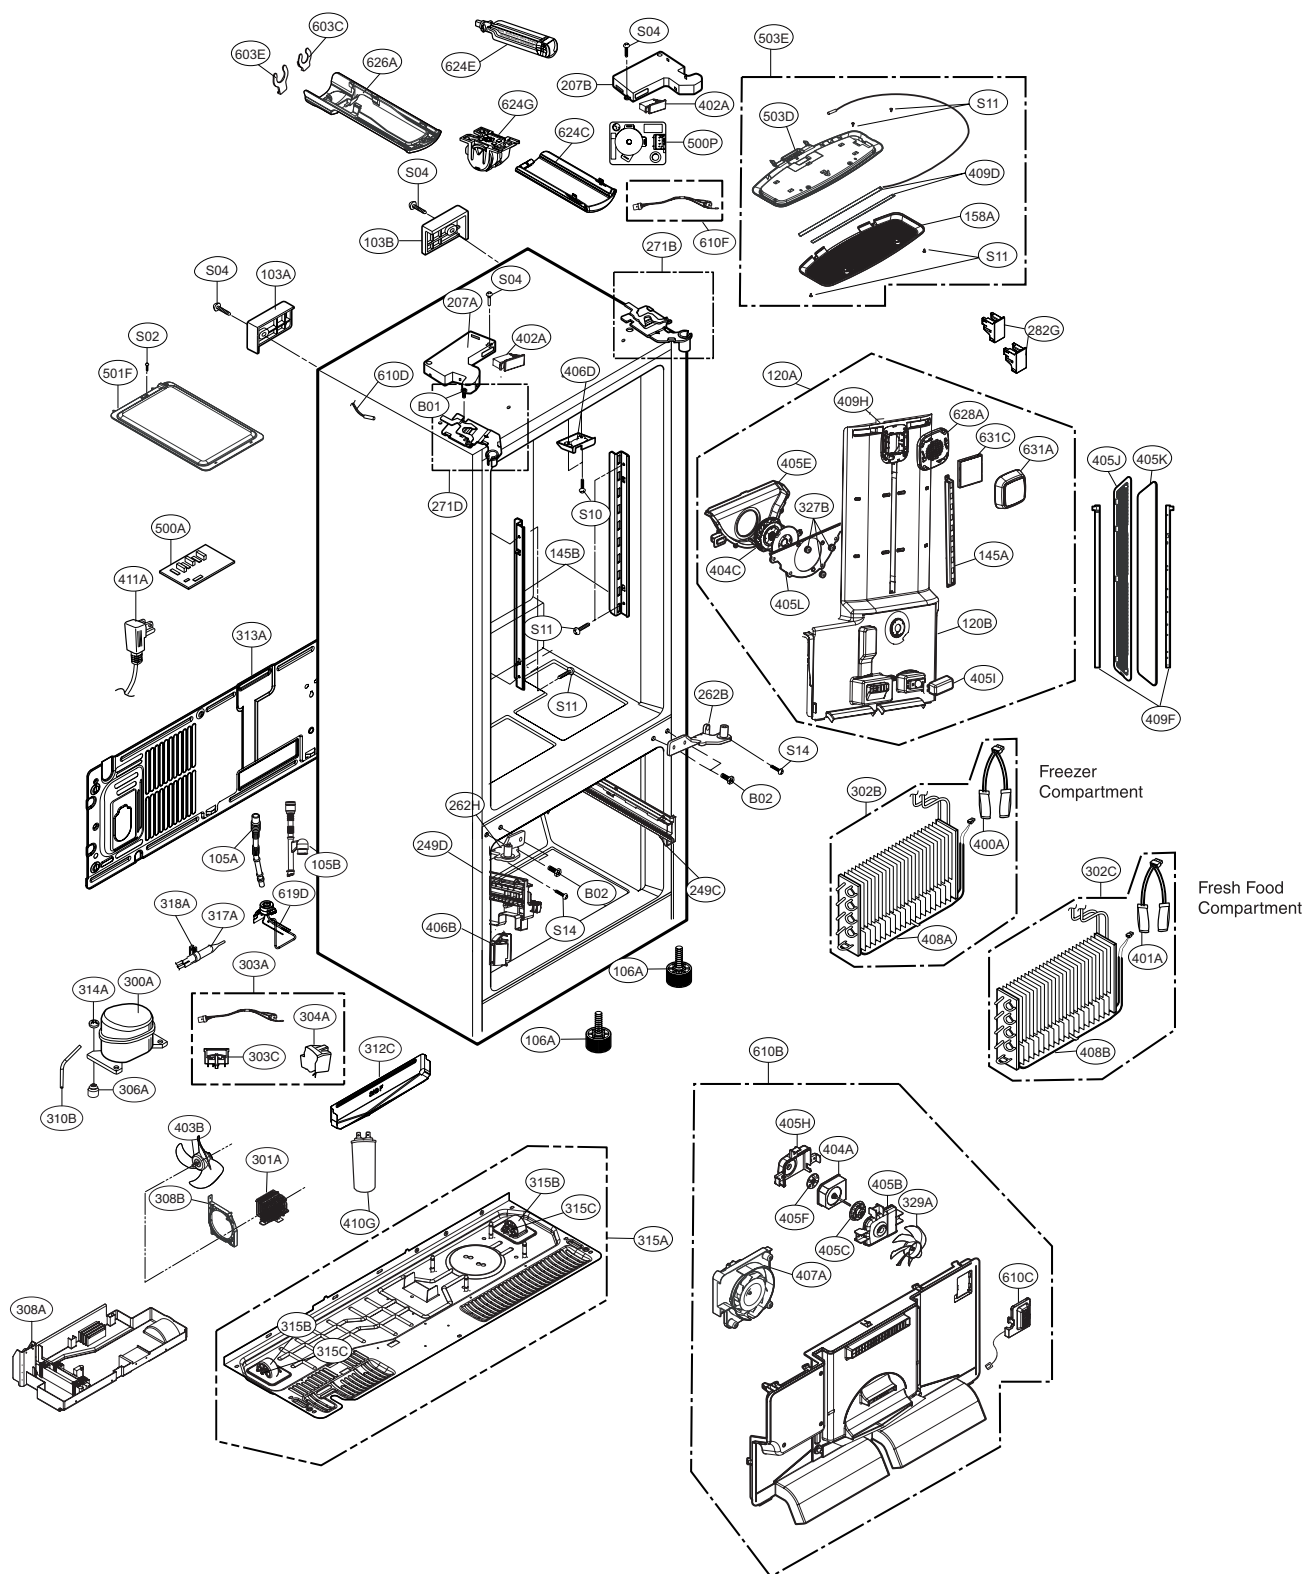


FREEZER PARTS

CAUTION: Use the part number to order part, not the position number.

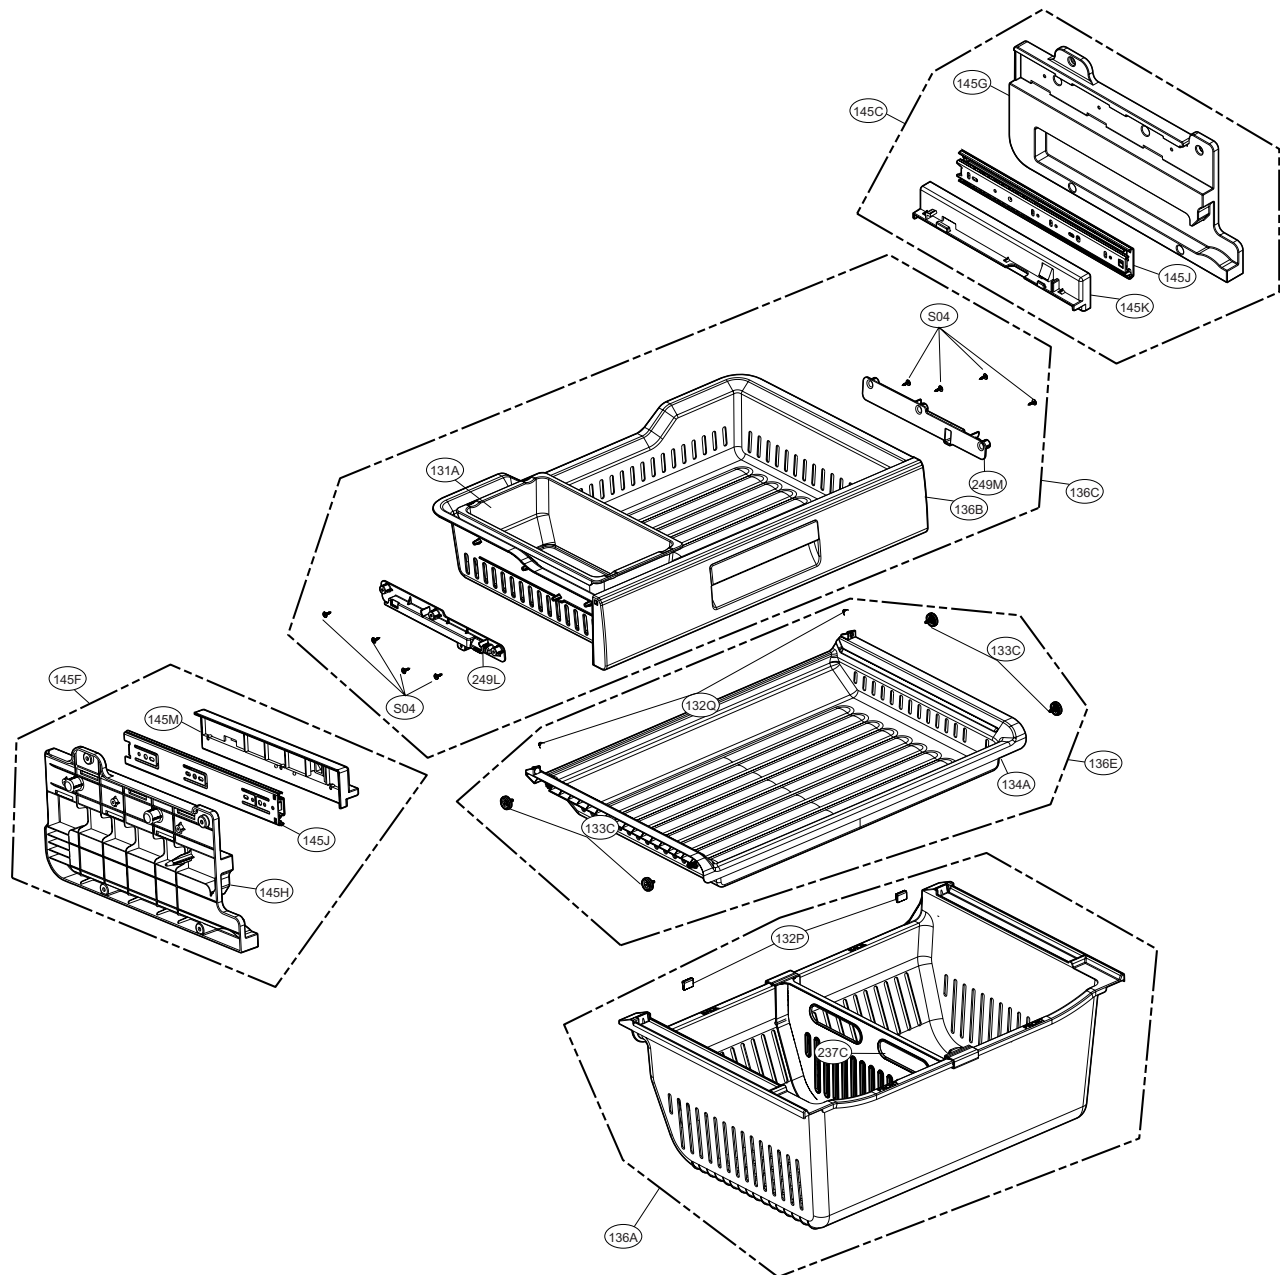


REFRIGERATOR PARTS

CAUTION: Use the part number to order part, not the position number.

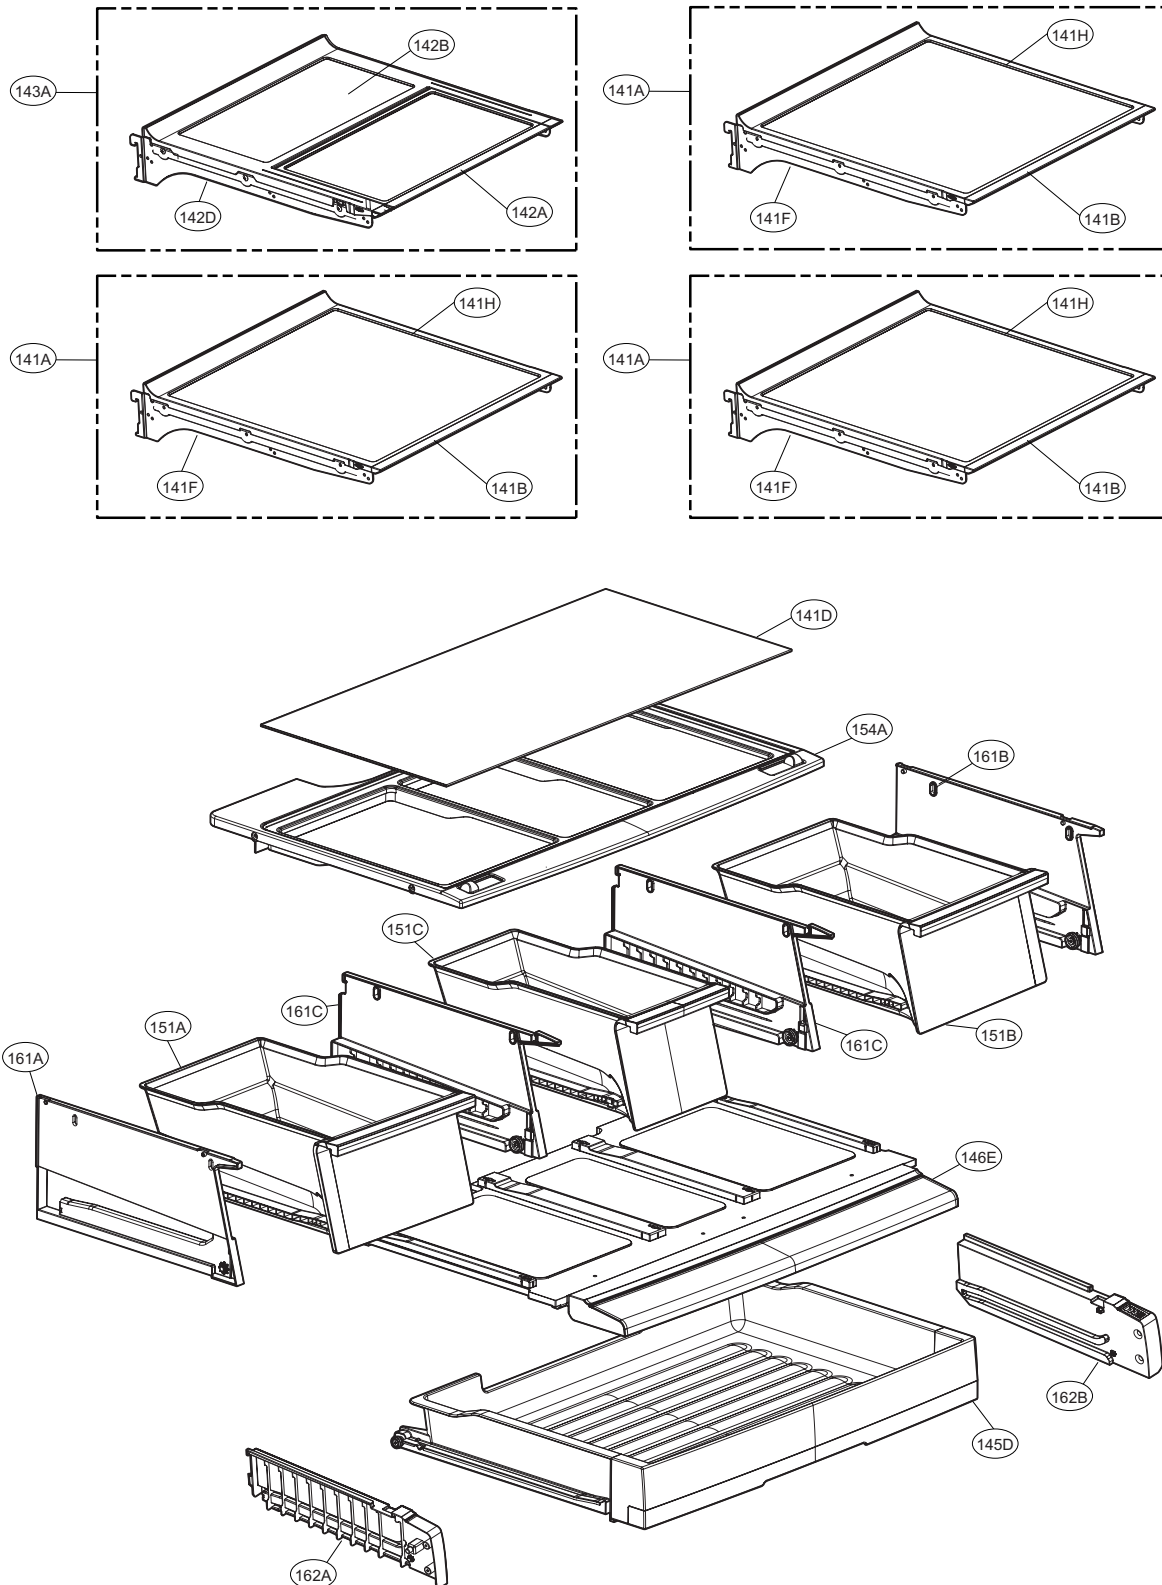


DISPENSER PARTS

CAUTION: Use the part number to order part, not the position number.

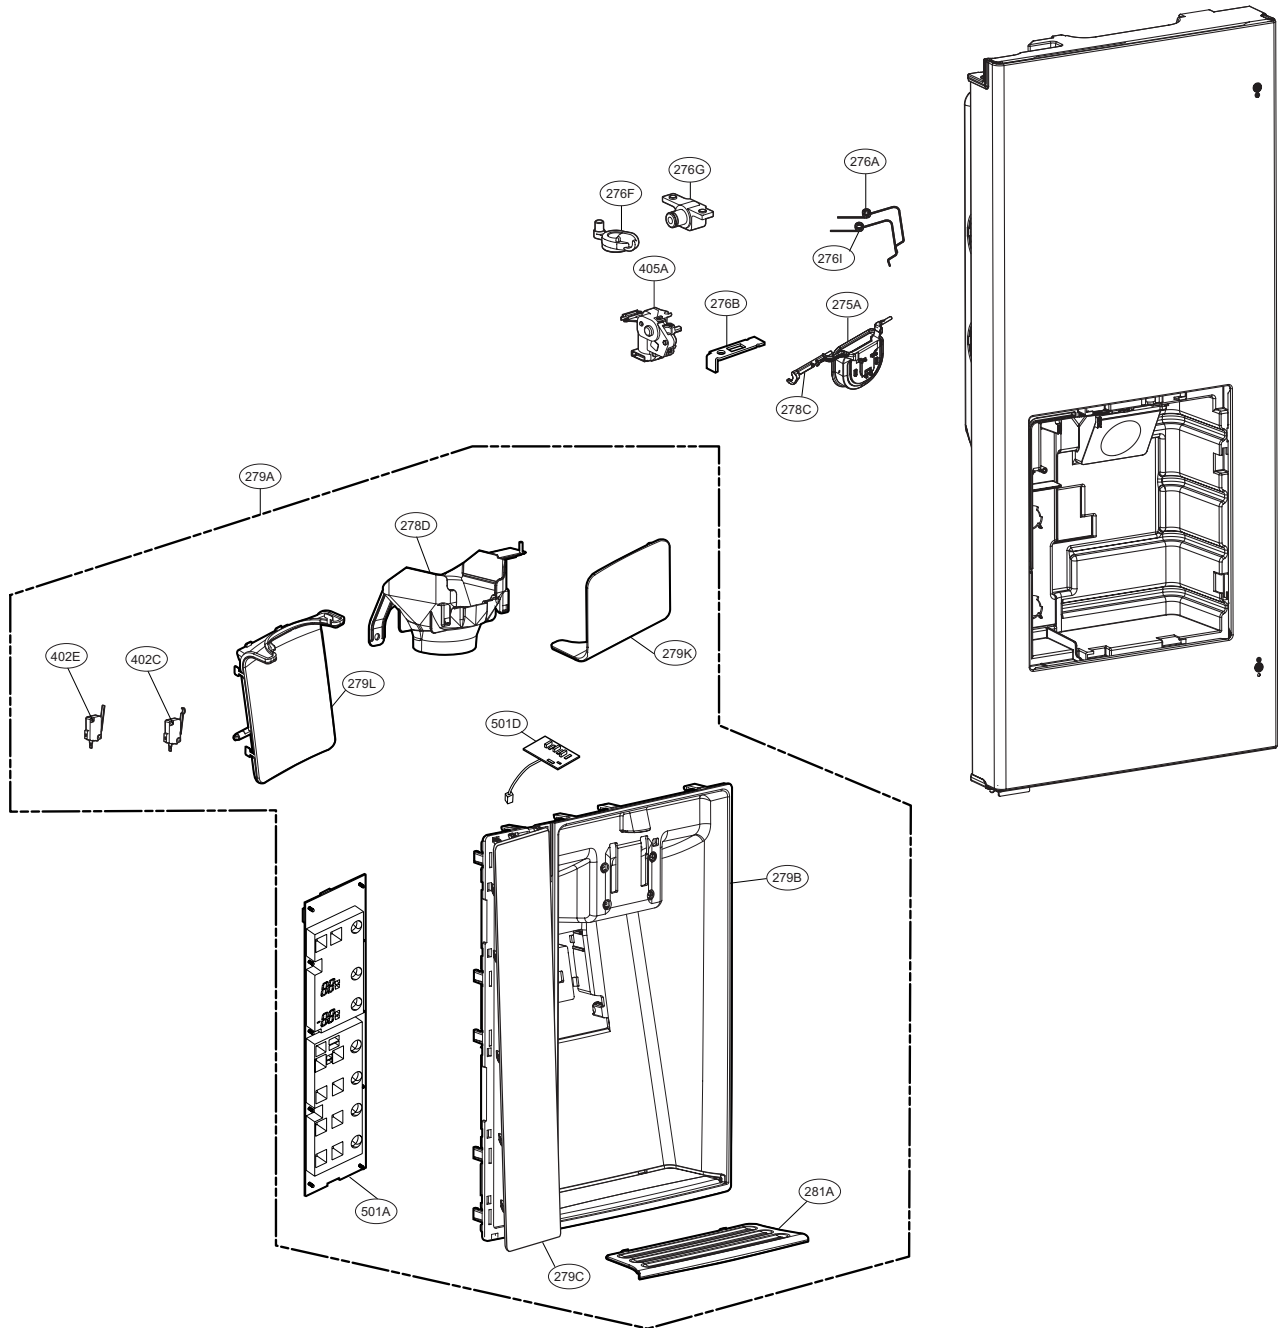

VALVE & WATER TUBE PARTS

CAUTION: Use the part number to order part, not the position number.

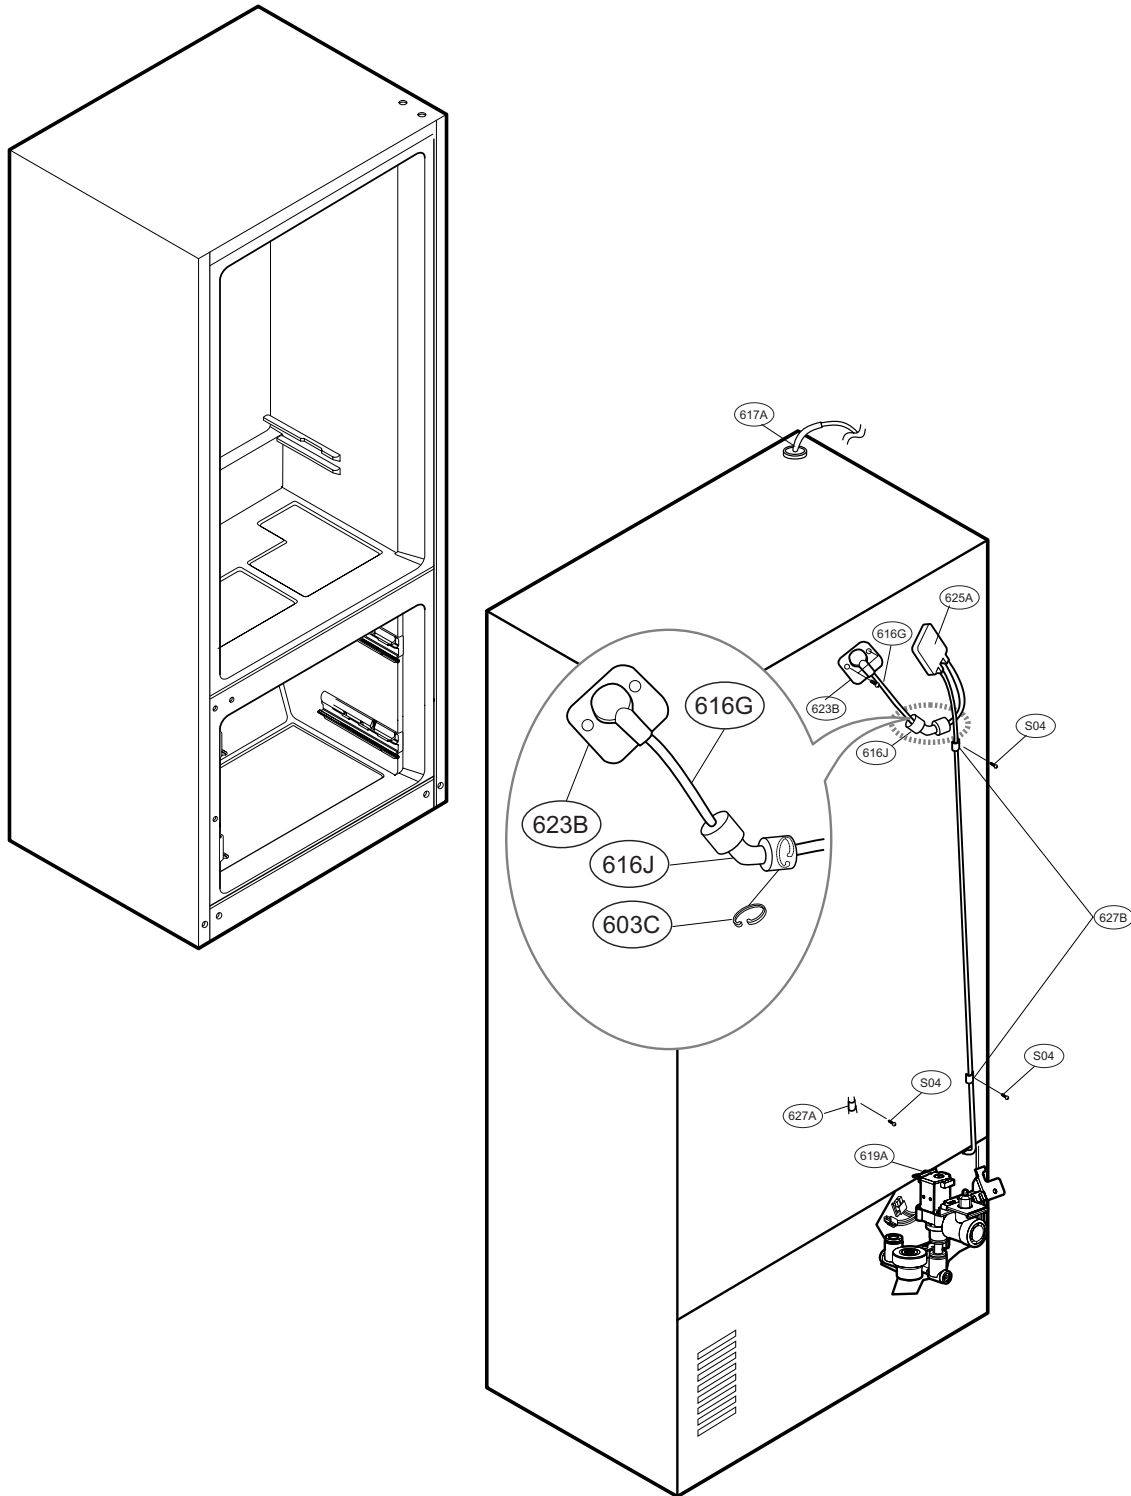

ICE MAKER & ICE BIN PARTS

CAUTION: Use the part number to order part, not the position number.

