

Range Top

MODELS: DTT36M974L / DTT48M976L

SERVICE Manual

Range Top



CONTENTS

- 1. PRECAUTIONS ······5
- 2. PRODUCT SPECIFICATIONS9
- 3. DISASSEMBLY AND REASSEMBLY11
- 4. 36" / 48" RANgETOP PCB DIAgRAM / SChEMATIC DIAgRAM ······26



IMPORTANT SAFETY NOTICE

This service guide is for service men with adequate backgrounds of electrical, electronic, and mechanical experience.

Any attempt to repair a major appliance may result in personal injury and property damage. The manufacturer or dealer cannot be responsible for the interpretation of this information.

> Dacor Technical Service Guide Copyright ©2017

Contents

1. Precautions	4
1-1 Forward	4
1-2 Safety Precautions	4
1-3 Important Safety Instructions	5
1-4 Model & Serial Number Label and Tech Sheet Locations	7
2. Specifications	
2-1 Table of Specifications	
2-2 Accessories (48" rangetop (DTT48M976L)	9
2-3 Accessories (36" rangetop (DTT36M974L)	
3. Disassembly and Reassembly	
3-1 Preparing for removal of the Rangetop Assy	
3-2 GriddleDisassembly	
3-3 Burners Disassembly	
3-4 Rangetop Frame Disassembly	14
3-5 Control Panel Assy Disassembly	
3-6 Disassembly of PCB / Electric parts (RangeTop)	
3-7 Disassembly of tubes / burners / valves / etc	
4. 36"/48" Rangetop pcb diagram / schematic diagram	
4-1 36" / 48" rangetop control pcb	
4-2 48" rangetop schematic diagram	
4-3 36" rangetop schematic diagram	
5. Troubleshooting — 36" /48" rangetop	
5-1 Error Troubleshooting	
5-2 Control parts	

1. Precautions

1-1 Forward

This Dacor Service Manual provides the technician with information on the operation and service of the built in electric wall oven. It is to be used as a training Service Manual. For specific information on the model being serviced, refer to the "Owner's Manual" or "Tech Sheet" provided with electric wall oven.

1-2 Safety Precautions

- Repairs of the appliance should be carried out by a licensed technician only. Incorrect repairs may result in dangerous situations. If you need repairs, contact a Dacor Service Center oryour dealer.
- If the power cord is defective, it must be replaced by a qualified service agent with a UL listed range cord.
- Electrical leads and cables should not be allowed to touch the oven.
- Rating plate is located on the left side of rangetop chassis
- The power supply of the appliance should be turned off when it is being repaired.

WARNING

- To avoid risk of death or severe personal injury from electrical shock, disconnect power before working on/servicing the appliance.
- To avoid risk of death, severe personal injury, or property damage from fire or explosion, turn off the gas supply before working on/servicing the appliance. **IF YOU SMELL GAS:**
- 1. DO NOT light a match, candle, or cigarette.
- 2. DO NOT turn on any gas or electric appliances.
- 3. DO NOT touch any electrical switches.
- 4. **DO NOT** use any type of phone in the building.
- 5. Clear the room, building, or area of all occupants.
- 6. Immediately call the gas supplier from a phone outside of the building. Follow the gas supplier's instructions.
- 7. If you cannot reach the gas supplier, call the fire department.
- To avoid risk of death, severe personal injury, or property damage from fire or explosion, do not wear loose-fitting, or hanging garments near an open flame during operation and/or servicing the appliance.
- When the oven operates, the interior parts will be very hot.

Dacor Electronics assumes no responsibility for any repairs made on our products by anyone other than Authorized Service Technicians.

1-3 Important Safety Instructions

Read and follow all instructions before using or servicing the range to prevent death, personal injury, fire, explosion, and/or property damage. This guide does not cover every possible condition that may occur. For further assistance, contact a licensed technician or the manufacturer.

All electrical and gas equipment and their moving parts can be dangerous. Please read the important safety information on the appliance and in this manual. The information must be followed to minimize the risk of death, personal injury, and/or property damage.



This is the safety alert symbol. It alerts you of potential hazards that can kill or injure you or others. The following safety messages explain the potential hazards:

DANGER

Hazardous situation that will result in death and/ or serious personal injury.

WARNING

Hazardous situation that could result in death, serious personal injury, and/or property damage.

Hazardous situation that may result in moderate personal injury, and/or property damage.

- Be sure your appliance is properly installed and grounded by a licensed technician.
- Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a licensed technician.
- Always disconnect power to the appliance before servicing by turning off the circuit breaker or removing the fuse.
- Always turn off the main gas supply to this appliance before servicing by closing the gas supply valve to this appliance.
- Always check gas fittings and components for leaks before servicing the appliance. If a leak is detected, shut off the gas supply and notify a licensed technician and/or gas supplier.



WARNING

- INJURIES CAN OCCUR IF THE RANGE TIPS - INSTALLANTI-TIP DEVICE PACKED WITH RANGE



WARNING

- DO NOTTOUCH SURFACE BURNERS, SURFACE BURNER GRATES, OVEN BURNERS, INTERIOR SURFACES OF OVEN, OR WARMING DRAWER
- HEATING ELEMENT Burners, heating element, and surfaces may be hot even though they are dark in color. Interior surfaces of an oven become hot enough to cause burns. During and after use,
- do not touch or let clothing or other flammable materials contact burners, heating element, grates, or interior surfaces of oven until they have had sufficient time to cool. Other surfaces of the appliance may become hot enough to cause burns. Among these surfaces are oven vent openings and surfaces near these openings, oven doors, and windows of oven doors.



Do not store items of interest to children in cabinets above a range or on the backguard of a range – Children climbing on the range to reach

items could be seriously injured.

- Do Not Leave Children Alone Children should not be left alone or unattended in the area where the appliance is in use. They should never be allowed to sit or stand on any part of the appliance.
- Never Use Your Appliance for Warming or Heating the Room.
- Storage in or on Appliance Flammable materials should not be stored in an oven or near surface units. Be sure all packing materials are removed from the appliance before operating it. Keep plastics, clothes, and paper away from parts of the appliance that may become hot.
- Wear Proper Apparel Loose-fitting or hanging garments should never be worn while using the appliance.
- Do Not Use Water on Grease Fires Turn off the oven to avoid spreading the flame. Smother the fire or flame by closing the door or using baking soda or a dry-chemical or foam-type extinguisher.
- Use Only Dry Pot Holders Moist or damp pot holders on hot surfaces may result in burns from steam. Do not let the pot holder touch hot heating elements. Do not use a towel or other bulky cloth.

WARNING

SURFACES

• DO NOT TOUCH SURFACE BURNERS OR AREAS NEAR BURNERS – Surface burners may still be hot after they have been turned off. Areas near surface burners may become hot enough to cause burns. During and after use, do not touch or let clothing or other flammable materials contact surface burners or areas near burners until they have had sufficient time to cool. Among these areas are the cooktop, surface burner grates, and surfaces close to the cooktop.



To avoid risk of death or personal injury from electrical shock, make sure your range has been properly grounded and always disconnect it from the main power supply before any servicing.

SURFACE BURNERS

- Use Proper Pan Size This appliance is equipped with one or more surface burners of different sizes. Select utensils having flat bottoms large enough to cover the surface burner flames. The use of undersized utensils will expose a portion of the surface burner flames to direct contact and may result in ignition of clothing. Proper relationship of utensil to burnerwill also improve efficiency.
- Never Leave Surface Burners Unattended at High Heat Settings – Boilovers could ignite or extinguish the burner flames. Both conditions create an explosion and/or fire hazard.
- **Protective Liners** Do not use aluminum foil to line cooktop surface or oven bottoms, except as suggested in the manual. Improperinstallation of these liners may result in a risk of electric shock, fire, or burner damage.
- Glazed Cooking Utensils Only certain types of glass, glass/ceramic, ceramic, earthenware, or other glazed utensils are suitable for range-top service without breaking due to the sudden change in temperature.
- Utensil Handles Should Be Turned Inward and Not Extend Over Adjacent Surface Burners – To reduce the risk of burns, ignition of flammable materials, and spillage due to unintentional contact with the utensil, the handle of a utensil should be positioned so that it is turned inward and does not extend over adjacent surface burners.
- Surface Burner Components The burners, burner caps, and burner cups should always be cleaned by hand. They are not dishwasher-safe. The orifices should always be checked for dirt and debris whenever the burner cups are cleaned.
- Be sure you know which control knob operates each surface burner. Make sure you turned on the correct surface burner.

COOKTOP COOKING SURFACES

- Clean Cooktop With Caution If a wet sponge or cloth is used to wipe spills on a hot cooking area, be careful to avoid a steam burn. Some cleaners can produce noxious fumes if applied to a hot surface.
- Clean the cooktop surface with a nonabrasive cleaner on painted metal surfaces.

VENTILATING HOODS:

- Clean Ventilating Hoods Frequently Grease should not be allowed to accumulate on hood or filter.
- When flaming foods under the hood, turn the fan on.

DEEP-FAT FRYERS:

• Use extreme caution when moving the grease kettle or disposing of hot grease.

1. Precautions

1-4 Model & Serial Number Label and Tech Sheet Locations

The Model / Serial Number label location is shown below.



Model & Serial Number Location

2. Specifications

2-1 Table of Specifications

	ITEMS	NEW MODEL
	Model Name	DTT48M976L
	Category	RangeTop
	Width	48"
Overall	Installation type	Built-In
	Color availability	STS, BLK STS
	LED Knob Backlit	Yes
Control	LED Indicator	Yes
	Show Lighting	Yes
	Outside (W*D*H)	48*28 3/16*8 (in)
Dimensions		(1216*716*203)(mm)
	Cutout (W*D*H)	48*24*7 ¾ (in)
		(1216*610*197)(mm)
Power	Rating (120V 60Hz)	11,200W
	ITEMS	NEW MODEL
	Model Name	DTT36M974L
	Category	RangeTop
	Width	36"
Overall	Installation type	Built-In
	Color availability	STS, BLK STS
	LED Knob Backlit	Yes
Control	LED Indicator	Yes
	Show Lighting	Yes
	Outside (W*D*H)	36*28 3/16*8 (in)
Dimensions		(1216*716*203)(mm)
Dimensions	Cutout (W*D*H)	36*24*7 ¾ (in)
		(1216*610*197)(mm)
Power	Rating (120V 60Hz)	11,200W

2. Specifications

2-2 Accessories (48" Rangetop (DTT48M976L)

Item	Description	Code No.	Q'ty
	Grates	Center : DG98-01471A Left : DG98-01468A Right : DG98-01470A	3
	Burner heads / caps	-	6/7
	Griddle	DG98-01473A	1
	WOK Ring	DG98-01472A	1

2. Specifications

2-3 Accessories (36" Rangetop (DTT36M974L)

ltem	Description	Code No.	Q'ty
	Grates	Left : DG98-01468A Right : DG98-01469A	2
	Burner heads / caps	-	4/5
	Griddle	DG98-01473A	1
	WOK Ring	DG98-01472A	1

3. Disassembly and Reassembly



WARNING

ELECTRICAL SHOCK HAZARD

Disconnect power before servicing the oven. Replace all panels before operating oven. Failure to do so can result in death or electrical shock.

3-1 Preparing for removal of the Rangetop Assy

Item	How to use	Pictures
Screw driver	Used for all screws	
Crescent wrench	Used to attach/detach tubing to the burner cups	
¼" nut driver	Used for assembly and disassembly of valve with manifold.	
7 mm nut driver	Use for assembly and disassembly of injector cooktop nozzles.	
9 mm Nut driver	Use for assembly and disassembly of convection fan.	
7 mm nut driver (L type)	Use for assembly and disassembly of light switch inside of panel control.	P. Car
Burner Ring Tool	Used to attach & detach 18K burner brass nuts.	

3. Disassembly and Reassembly

3-2 Griddle Disassembly



WARNING

ELECTRICAL SHOCK HAZARD

Disconnect power before servicing the rangetop. Replace all panels before operating the rangetop. Failure to do so can result in death or electrical shock.



A WARNING

EXPLOSION, FIRE, AND ASPHYXIATION HAZARD

Shut off the gas supply to the rangetop before servicing. Check all gas lines and fittings for leaks before operating the rangetop. Replace all panels before operating the rangetop. Failure to do so can result in death or personal injury from explosion, fire, or asphyxiation.



When you work on the gas rangetop, be careful when handling sheet metal parts. Sharp edges may be present, and you can cut yourself if you are not careful.

Parts	Explanation Photo	Explanation
Griddle		Remove 2 screws from the rear of griddle access cover, and displace the cover.
Gridale		Disconnect the 2 wire connectors attached to the griddle heater.

3-3 Griddle assy removal

Parts	Explanation Photo	Explanation
		Remove 3 screws from the top of the griddle
Griddle		Separate the temperature sensor from the griddle.
		Lift the griddle assy off of the cooktop.



WARNING

ELECTRICAL SHOCK HAZARD

Disconnect power before servicing the rangetop. Replace all panels before operating the rangetop. Failure to do so can result in death or electrical shock.



A WARNING

EXPLOSION, FIRE, AND ASPHYXIATION HAZARD

Shut off the gas supply to the rangetop before servicing. Check all gas lines and fittings for leaks before operating the rangetop. Replace all panels before operating the rangetop. Failure to do so can result in death or personal injury from explosion, fire, or asphyxiation.



CAUTION

When you work on the gas rangetop, be careful when handling sheet metal parts. Sharp edges may be present, and you can cut yourself if you are not careful.

Parts	Explanation Photo	Explanation
Burner head		Remove 2 screws from each burner head. 4 burner heads, 8 screws total.
Burner neau		Disconnect the electrode wire from each of the 4 burner heads.

Parts	Explanation Photo	Explanation
Dumon our		Remove the 4 ring type nuts from the burner cup with pt. 101539
Burner cup		Remove 3 screws from the stack burner.
Burner cup	<image/>	Remove 3 screws from the rear frame and remove the frame.

Parts	Explanation Photo	Explanation
Frame left / right		Remove 2 screws, 1 from each side of the frame, 1 left / 1right.
	Contraction of the second seco	Remove each of the frames, left / right.
Frame front	<image/>	Remove 4(3 on 36") screws from the front frame and lift frame off.

Parts	Explanation Photo	Explanation
		Disconnect 2 wire connectors under the front frame. Remove the frame.
Spill Tray	<image/>	From the rear, lift the spill tray up and off of the rangetop

Parts	Explanation Photo	Explanation
		Remove 2 screws from the upper left side of manifold cover.
Manifold Cover		Remove 2 screws from the upper right side of manifold cover.
		Remove the mainfold cover.

Parts	Explanation Photo	Explanation
		Remove all tubes from each valve.
Control Panel		
Assy		Disconnect all wire harnesses.

Parts	Explanation Photo	Explanation
		Remove the griddle knob
		Remove 2 screws from the griddle knob bezel.
Griddle Knob Bezel		Slightly pull off the griddle knob bezel.
		Disconnect the LED wire.
		Remove 2 screws from behind the griddle knob bezel.

Parts	Explanation Photo	Explanation
Control Panel		Remove 1 screw from both the left and right sides of the control panel assy.
Assy		Remove the control panel assy.

3-6 Disassembly of PCB / Electric parts (RangeTop)

WARNING

ELECTRICAL SHOCK HAZARD

Disconnect power before servicing the rangetop. Replace all panels before operating the rangetop. Failure to do so can result in death or electrical shock.



WARNING

EXPLOSION, FIRE, AND ASPHYXIATION HAZARD

Shut off the gas supply to the rangetop before servicing. Check all gas lines and fittings for leaks before operating the rangetop. Replace all panels before operating the rangetop. Failure to do so can result in death or personal injury from explosion, fire, or asphyxiation.



CAUTION

When you work on the gas rangetop, be careful when handling sheet metal parts. Sharp edges may be present, and you can cut yourself if you are not careful.

Parts	Explanation Photo	Explanation
		Remove 4 screws from the PCB access cover.
PCB Access Cover		Lift off the PCB access cover.

3-6 Disassembly of PCB / Electric parts (RangeTop)

Parts	Explanation Photo	Explanation
РСВ		Remove screws from the PCB and replacing it.

3-7 Disassembly of tubes / burners / valves / etc

WARNING

ELECTRICAL SHOCK HAZARD

Disconnect power before servicing the rangetop. Replace all panels before operating the rangetop. Failure to do so can result in death or electrical shock.



WARNING

EXPLOSION, FIRE, AND ASPHYXIATION HAZARD

Shut off the gas supply to the rangetop before servicing. Check all gas lines and fittings for leaks before operating the rangetop. Replace all panels before operating the rangetop. Failure to do so can result in death or personal injury from explosion, fire, or asphyxiation.



CAUTION

When you work on the gas rangetop, be careful when handling sheet metal parts. Sharp edges may be present, and you can cut yourself if you are not careful.

Parts	Explanation Photo	Explanation
Tubing	ST#	Remove tubing from the burner.
Burner cup		Replace burner cup after removing 2 screws.

3-7 Disassembly of tubes / burners / valves / etc

Parts	Explanation Photo	Explanation
		Disconnect all tubing from the valve assy. Replace valve assy after removing 1 screw by ¼" nut driver.
Mini LED Knob		Replace LED module by removing 2 7 mm screws with L type nut driver.

36" / 48" rangetop control pcb 4-1



No.	Parts Number	Part Name	Function and Rule		
1	CNS170	HASS Connector	This is the HASS connector.		
2	CNS200	Main Communication Connector	(used only on Pro range)		
3	CNS210	LCD Communication Connector	(used only on Pro range)		
4 2	CNS220	WIFI Communication Connector	This connector is connected with Wi-Fi module for communication.		
5 3	CNS230	LED Dimming Communication Connector	This connector is connected with LED Dimming module for communication.		
6	CNS240	Touch Communication Connector	(used only on Pro range)		
74	CNS260	Bluetooth Communication Connector	This connector is connected with Bluetooth module for communication.		
8 5	CNS300	Power Input Connector	This connector provides DC power (12V, 5V) to Sub PCB.		
96	CNS500	Knob Sensing Connector	This connector is connected to Ignition Switch Assy for sensing knob position status.		
10 7	CNS550	Switch Input Connector	This is connector for receiving Switch input signal as below. • Bluetooth, Wi-Fi On/OffSwitch		
11	CNS600	Key Backlight Connector	(used only on Pro range)		
12	CNS610	Big Oven Door LED Lamp Connector	(used only on Pro range)		
13	CNS611	Small Oven Door LED Lamp Connector	(used only on Pro range)		
14 8	CNS620	Wifi Indication LED Connector	This is connector which is connected LED module indicating IQ Control stutus.		
15	CNS700	Pop Up Display Connector	(used only on Pro range)		

4-2 36" / 48" rangetop control pcb



No.	Parts Number	Part Name	Function and Rule	
1	CN1	Sub Communication Connector	This connector is connected with LCD SUB PCB for communication.	
2	CN2	Knob Light Connector	This connector is connected with 4th, 5th Knob Light module.	
3	CN4	Knob Light Connector	This connector is connected with 1st, 2nd Knob Light module.	
4	CN5	Knob Light Connector	This connector is connected with 6th, 7th Knob Light module. (use only in 48" prorange / rangetop)	
5	CN6	Shower Light Connector	This connector is connected with 1st, 2nd, 3rd Shower Light module.	
6	CN7	Knob Light Connector	This connector is connected with 3rd Knob Light module.	
7	CN8	Mini Knob Light Connector	This connector is connected with two Mini Knob Light module.	
8	CN9	Shower Light Connector	This connector is connected with 4th, 5th, 6th, 7th Shower Light module.	

27

4-2 48" rangetop schematic diagram



4-3 36" rangetop schematic diagram



5-1 ErrorTrouble Shooting

Symptom	Diagnosis	Remedy
	* Smell Gas but no spark ignition.	* Plug in the power cord and/or reset the circuit breaker for the rangetop.
	* The gas supply valve to the range is closed.	* Open the gas supply valve.
None of the cooktop burners	* Check the terminals on the Re-ignition module for voltage.	* Replace the faulty Re-ignition module.
will light.	* Check for crimped or broken gas line between the gas pressure regulator and the surface burner control manifold.	* Replace the damaged gas line.
	* Gas pressure regulator switch is closed.	* Replace the gas pressure regulator.
	* Check the harness connections at the Re-ignition module.	* Reconnect loose connection or replace damaged harness.
	* Check the Re-ignition module.	* Disconnect the Re-ignition module terminal for the nonworking burner. If no voltage is measured, replace the Re-ignition module.
One cooktop	* Check the electrode for that burner.	* Disconnect the electrode and check whetherelectrode wire ortip is broken. Replace the faulty electrode.
burner does not light.	* Check for water or cooked food covering the burner ports.	 * Clean and/or replace the surface burner orifice. NOTE: Replacement orifice should always be the same size as removed.
	* Check for crimped or broken gas lines.	* Replace damaged gas lines.
	* Faulty surface burner control	* Each surface burner control is an integral part of the surface burner control manifold. Replace the manifold.
All surface burners will light, but don't	* Check for crimped gas line between the gas pressure regulator and the surface burner control manifold.	* Replace the damaged gas line.
stay lit.	* Reversible regulator plastic cap not correct.	* Replace the gas pressure regulator.
	* Check for a dirty surface burner orifice.	* Clean and/or replace the surface burner orifice. NOTE : Replacement orifice should
One cooktop		always be the same size as removed.
burner lights, but doesn't stay lit.	* Check for a crimped gas line.	* Replace the crimped gas line.
	* Faulty surface burner control.	* Each surface burner control is an integral part of the surface burner control manifold. Replace the manifold.

5-1 ErrorTrouble Shooting

Symptom	Diagnosis				Remedy	
Cooktop burner flames are soft blue or have yellow tips.	* This is normal.				 * Soft blue flames are normal flames for NG operation. * Soft blue flames with yellow tips are normal flames for LP operation. 	
	*Check for proper sized orifices:					
	48"		NG	ì		
	Burner		Nozzle			
	Location	BTU	Location	Туре	Size	-
	Left	10	Main	ST	1.86	-
	Front	18	Simmer	СВ	0.46	-
	Laft Daar	10	Main	СВ	0.68	-
	Left Rear	16	Simmer	СВ	1.66	-
	Center	22	Main	ST	0.85	-
	Front	22	Simmer	ST	1.45	-
	Center	0	Main	СВ	0.61	-
	Rear	9	Simmer	СВ	1.15	-
	Right 16 Front 16	Main	СВ	0.68		
		Simmer	СВ	1.66	* Replace any wrong sized orifices.	
	Right	10	Main	СВ	0.68	
	Rear	Rear 16	Simmer	СВ	1.66	-
Cooktop burner flames are	36″ NG					
mostly yellow.	Burner		Nozzle			
	Location BTU	Location	Туре	Size		
	Loft	Left	Main	ST	1.86	
	Front	18	Simmer	СВ	0.46	-
			Main	СВ	0.68	-
	Left Rear	16	Simmer	СВ	1.66	-
	Right		Main	ST	0.85	-
	Front	22	Simmer	ST	1.45	
	Right		Main	СВ	0.61	-
	Rear	9	Simmer	СВ	1.15	-
	the gas p burner co	* Check for crimped or cracked gas line between the gas pressure regulator and the surface burner control manifold.				* Replace the damaged gas line.
			e regulator.			* Replace the gas pressure regulator.
	* Check if there is something obstructing air to the burner cup around the burner head perimeter.			* Replace the burner head.		

5-1 ErrorTrouble Shooting

Symptom	Diagnosis	Remedy
All cooktop burners light,	* Check the terminals on the SMPS for voltage.	* If no voltage is measured, replace the SMPS PCB.
but All knob lighting LEDs don't light.	* Check the harness and connections at connectors (CN210 & CN300) on the MAIN PCB.	* Reassembly wire harness, if the same phenomenon is repeated, replace the wire harness.
One cooktop	* Check if the plastic LED housing is installed correctly and/or there are no plastic fingers	* If no voltage is measured, replace the MAIN PCB.
burner lights, but knob lighting LED doesn'tlight.	broken so it allows a secure attachment between the plastic lens and the valve.	* If the same phenomenon is repeated after replace the pcb, replace the wire harness
Hood		* If Auto connectivity led on the hood turned off, press the button turn on.
connectivity does not operate normally	* Check the Auto connectivity led on the hood is turned on.	* If auto connectivity led doesn't turn on after you press the button, do the hood and cooktop pairing.
Hood is not found on the iQ Check app.	* Charletter MUELindianter ladia turrad an	* If WIFI indicator led of the cooktop turned off, short press the wifi button underthe RF knob dial.
	* Check the WIFI indicator led is turned on.	* If WIFI indicator led doesn't turn on even if press the button, try to easy setup.
	* Check to see the Bluetooth led of the hood is	* If Bluetooth led of the hood is turned off, press the Bluetooth button on the hood.
	turned on.	* If Bluetooth led of the hood turned on, replace the Bluetooth pcb on the hood and cooktop

5. Troubleshooting — 36" / 48" rangetop

5-2 Control parts

5-2-1 knob LED does not light up



5-2-2 Cooktop burner not lighting [Gas malfunction]



5-2-3 Cooktop burner not lighting [Electric malfunction]



5-2-4 One cooktop burner not lighting [Electric malfunction]



5. Troubleshooting — 36" / 48" rangetop

5-2-5 Gas Leak



5-2-6 The flame looks abnormal. [Yellow tip / Lift flame]



48″		NG		
Burner	DTU	Nozzle		
Location	BTU	Location	Туре	Size
Left	18	Main	ST	1.86
Front		Simmer	СВ	0.46
Left	16	Main	СВ	0.68
Rear		Simmer	СВ	1.66
Center	22	Main	ST	0.85
Front		Simmer	ST	1.45
Center	9	Main	СВ	0.61
Rear		Simmer	СВ	1.15
Right	16	Main	СВ	0.68
Front		Simmer	CB	1.66
Right	16	Main	СВ	0.68
Rear		Simmer	CB	1.66

36″		NG			
Burner	DTU	Nozzle			
Location	BTU	Location	Туре	Size	
Left	18	Main	ST	1.86	
Front	10	Simmer	СВ	0.46	
Left	16	Main	СВ	0.68	
Rear	16	Simmer	СВ	1.66	
Right	22	Main	ST	0.85	
Front		Simmer	ST	1.45	
Right	9	Main	СВ	0.61	
Rear		Simmer	СВ	1.15	

5-2-7 Flame size is too big or too small



48″		NG		
Burner	DTU	Nozzle		
Location	BTU	Location	Туре	Size
Left	18	Main	ST	1.86
Front		Simmer	СВ	0.46
Left	16	Main	CB	0.68
Rear		Simmer	CB	1.66
Center	22	Main	ST	0.85
Front		Simmer	ST	1.45
Center	9	Main	СВ	0.61
Rear		Simmer	CB	1.15
Right	16	Main	СВ	0.68
Front		Simmer	СВ	1.66
Right	16	Main	СВ	0.68
Rear		Simmer	СВ	1.66

36"		NG		
Burner	BTU	Nozzle		
Location		Location	Туре	Size
Left	18	Main	ST	1.86
Front	10	Simmer	СВ	0.46
Left	16	Main	СВ	0.68
Rear		Simmer	СВ	1.66
Right	22	Main	ST	0.85
Front		Simmer	ST	1.45
Right	9	Main	СВ	0.61
Rear		Simmer	СВ	1.15

